
Faucet Documentation

Faucet Developers

Oct 26, 2023

CONTENTS

1 User Documentation	1
1.1 Introduction to Faucet	1
1.2 Tutorials	5
1.3 Installation	68
1.4 Configuration	73
1.5 Monitoring	94
1.6 Configuration Recipe Book	96
1.7 Vendor-specific Documentation	96
1.8 External Resources	131
2 Developer Documentation	133
2.1 Developer Guide	133
2.2 Architecture	138
2.3 Testing	142
2.4 Fuzzing	147
2.5 Source Code	148
3 Indices and tables	235
Python Module Index	237
Index	239

USER DOCUMENTATION

1.1 Introduction to Faucet

1.1.1 What is Faucet?

Faucet is a compact open source OpenFlow controller, which enables network operators to run their networks the same way they do server clusters. Faucet moves network control functions (like routing protocols, neighbor discovery, and switching algorithms) to vendor independent server-based software, versus traditional router or switch embedded firmware, where those functions are easy to manage, test, and extend with modern systems management best practices and tools. Faucet controls OpenFlow 1.3 hardware which delivers high forwarding performance.

You can read more about our approach to networking by reading our ACM Queue article [Faucet: Deploying SDN in the Enterprise](#).

1.1.2 What is Gauge?

Faucet has two main OpenFlow controller components, Faucet itself, and Gauge. Faucet controls all forwarding and switch state, and exposes its internal state, e.g. learned hosts, via Prometheus (so that an open source NMS such as Grafana graph it).

Gauge also has an OpenFlow connection to the switch and monitors port and flow state (exporting it to Prometheus or InfluxDB, or even flat text log files). Gauge, however, does not ever modify the switch's state, so that switch monitoring functions can be upgraded, restarted, without impacting forwarding.

1.1.3 Why Faucet?

Design

Faucet is designed to be very small, simple (1000s of lines of code, versus millions in other systems), and keep relatively little state. Faucet does not have any implementation-specific or vendor driver code, which considerably reduces complexity. Faucet does not need connectivity to external databases for forwarding decisions. Faucet provides “hot/hot” high availability and scales through the provisioning of multiple Faucets with the same configuration - Faucet controllers are not inter-dependent.

Performance and scaling

As well as being compact, Faucet offloads all forwarding to the OpenFlow switch, including flooding if emulating a traditional switch. Faucet programs the switch pre-emptively, though will receive packet headers from the switch if, for example, a host moves ports so that the switch's OpenFlow FIB can be updated (again, if traditional switching is being emulated). In production, Faucet controllers have been observed to go many seconds without needing to process a packet from a switch. In cold start scenarios, Faucet has been observed to completely program a switch and learn connected hosts within a few seconds.

Faucet uses a multi-table packet processing pipeline as shown in [Faucet Openflow Switch Pipeline](#). Using multiple flow tables over a single table allows Faucet to implement more complicated flow-based logic while maintaining a smaller number of total flows. Using dedicated flow tables with a narrow number of match fields, or limiting a table to exact match only, such as the IPv4 or IPv6 FIB tables allows us to achieve greater scalability over the number of flow entries we can install on a datapath.

A large network with many devices would run many Faucets, which can be spread over as many (or as few) machines as required. This approach scales well because each Faucet uses relatively few server resources and Faucet controllers do not have to be centralized - they can deploy as discrete switching or routing functional units, incrementally replacing (for example) non-SDN switches or routers.

An operator might have a controller for an entire rack, or just a few switches, which also reduces control plane complexity and latency by keeping control functions simple and local.

Testing

Faucet follows open source software engineering best practices, including unit and systems testing (python unittest based), as well static analysis (pytype, pylint, and codecov) and fuzzing (python-afl). Faucet's systems tests test all Faucet features, from switching algorithms to routing, on virtual topologies. However, Faucet's systems tests can also be configured to run the same feature tests on real OpenFlow hardware. Faucet developers also host regular PlugFest events specifically to keep switch implementations broadly synchronized in capabilities and compatibility.

1.1.4 Release Notes

1.7.0 Release Notes

We are making a few potentially breaking features in faucet 1.7.0. This document covers how to navigate the changes and safely upgrade from earlier versions to 1.7.0.

1. Configuration and log directory changed

Starting in 1.7.0 and onwards faucet has changed which directories it uses for configuration and log files. The new paths are:

Old path	New path
/etc/ryu/faucet	/etc/faucet
/var/log/ryu/faucet	/var/log/faucet

Faucet 1.7.0 when being installed by pip will automatically attempt to migrate your old configuration files to /etc/faucet assuming it has permissions to do so. Failing this faucet when started will fallback to loading configuration from /etc/ryu/faucet. The search paths for configuration files are documented on the [Environment variables](#) page.

Note: Consider the `/etc/ryu/faucet` directory deprecated, we will in a future release stop reading config files stored in this directory.

If you currently set your own configuration or log directory by setting the appropriate environment variables you will be unaffected. In most other cases the migration code or the fallback configuration search path will allow the upgrade to 1.7.0 to be seamless. We have however identified two cases where manual intervention is required:

Dockers

Dockers will need to be started with new mount directories, the commands to start a 1.7.0 docker version of faucet or gauge are detailed in the *Installation with Docker* section.

Virtualenvs

We are unable to migrate configuration files automatically when faucet is run inside of a virtualenv, please copy the configuration directory over manually.

2. Changing default flood mode

Currently faucet defaults to using `combinatorial_port_flood` when it comes to provisioning flooding flows on a datapath, faucet implicitly configures a datapath like this today:

```
dps:  
  mydp:  
    combinatorial_port_flood: True
```

The default is `True`, in 1.7.0 and previously. The default will change to `False` in 1.7.1.

When `True`, flood rules are explicitly generated for each input port, to accommodate early switch implementations which (differing from the OpenFlow standard - see below) did not discard packets output to the packet input port. `False` generates rules per faucet VLAN which results in fewer rules and better scalability.

See [OpenFlow 1.3.5 specification](#), section B.6.3:

The behavior of sending out the incoming port was **not** clearly defined **in** earlier versions of the specification. It **is** now forbidden unless the output port **is** explicitly **set** to OFPP_IN_PORT virtual port (**0xffff8**) **is set**.

1.9.0 Release Notes

There are some changes in version 1.9.0 of faucet that may affect how you use it. Below are the changes and how they might affect you.

1. Removing support for older python versions

Starting from faucet 1.9.0 and onwards, faucet now requires a version of python 3.5 or newer to function.

Most currently supported distributions of linux should have a version of python that is compatible, with the notable exception of Debian Jessie which is no longer supported by faucet.

2. Change BGP configuration syntax

Previously, BGP configuration for faucet was attached to a VLAN, for example:

Listing 1: Older style bgp configuration

```

vlans:
  internet:
    description: 'internet peering'
    vid: 200
    bgp_routerid: '127.0.0.2'
    bgp_as: 14031
    bgp_neighbor_as: 14031
    bgp_neighbor_addresses: ['127.0.0.1', '::1']
    bgp_server_addresses: ['127.0.0.2', '::1']
    bgp_port: 9179
    bgp_connect_mode: 'passive'

```

As BGP peering in faucet now has the ability to resolve next hops in all VLANs, we have elected to move where BGP is configured.

We have now implemented a new bgp router type that can be configured in faucet, similar to how inter-VLAN routing works today, for example this is an example of the new syntax showing how we would convert the configuration shown above:

Listing 2: Newer style bgp configuration

```

vlans:
  internet:
    description: 'internet peering'
    vid: 200

routers:
  internet-router:
    bgp:
      vlan: internet
      routerid: '127.0.0.2'
      as: 14031
      neighbor_as: 14031
      neighbor_addresses: ['127.0.0.1', '::1']
      server_addresses: ['127.0.0.2', '::1']
      port: 9179
      connect_mode: 'passive'

```

It is also possible to combine inter-VLAN routing and bgp routing in a single routing instance:

Listing 3: Newer style bgp configuration (with IVR)

```

vlans:
  office:
    description: 'internet peering'
    vid: 100
  internet:
    description: 'internet peering'
    vid: 200

routers:
  office-internet-router:

```

(continues on next page)

(continued from previous page)

```

vlans: [office, internet]
bgp:
    vlan: internet
    routerid: '127.0.0.2'
    as: 14031
    neighbor_as: 14031
    neighbor_addresses: ['127.0.0.1', '::1']
    server_addresses: ['127.0.0.2', '::1']
    port: 9179
    connect_mode: 'passive'

```

For more information on what each option does, please see the [BGP](#) documentation section.

1.1.5 Getting Help

We use a mailing list on google groups for announcing new versions and communicating with users and developers:

- [faucetsdn](#)

We also have the #faucet IRC channel on [libera](#).

A few tutorial videos are available on our [YouTube channel](#).

The [faucet dev blog](#) and [faucetsdn twitter](#) are good places to keep up with the latest news about faucet.

If you find bugs, or if have feature requests, please create an issue on our [bug tracker](#).

1.2 Tutorials

1.2.1 Installing faucet for the first time

This tutorial will run you through the steps of installing a complete faucet system for the first time.

We will be installing and configuring the following components:

Component	Purpose
faucet	Network controller
gauge	Monitoring controller
prometheus	Monitoring system & time series database
grafana	Monitoring dashboard

This tutorial was written for Ubuntu 16.04, however the steps should work fine on any newer supported version of Ubuntu or Debian.

Package installation

1. Add the faucet official repo to our system:

```
sudo apt-get install curl gnupg apt-transport-https lsb-release
sudo mkdir -p /etc/apt/keyrings/
curl -1sLf https://packagecloud.io/faucetsdn/faucet/gpgkey | sudo gpg --dearmor -o /
  ↵etc/apt/keyrings/faucet.gpg
echo "deb [signed-by=/etc/apt/keyrings/faucet.gpg] https://packagecloud.io/
  ↵faucetsdn/faucet/$(lsb_release -si | awk '{print tolower($0)})/ $(lsb_release -
  ↵sc) main" | sudo tee /etc/apt/sources.list.d/faucet.list
sudo apt-get update
```

2. Install the required packages, we can use the `faucet-all-in-one` metapackage which will install all the correct dependencies.

```
sudo apt-get install faucet-all-in-one
```

Configure prometheus

We need to configure prometheus to tell it how to scrape metrics from both the faucet and gauge controllers. To help make life easier faucet ships a sample configuration file for prometheus which sets it up to scrape a single faucet and gauge controller running on the same machine as prometheus. The configuration file we ship looks like:

Listing 4: `prometheus.yml`

```
---
# my global config
global:
  # Set the scrape interval to every 15 seconds. Default is every 1 minute.
  scrape_interval: 15s
  # Evaluate rules every 15 seconds. The default is every 1 minute.
  evaluation_interval: 15s
  # scrape_timeout is set to the global default (10s).

# Load rules once and periodically evaluate them according to the global
# 'evaluation_interval'.
rule_files:
  - "faucet.rules.yml"

# A scrape configuration containing exactly one endpoint to scrape:
# Here it's Prometheus itself.
scrape_configs:
  # The job name is added as a label `job=<job_name>` to any timeseries scraped
  # from this config.
  - job_name: 'prometheus'
    static_configs:
      - targets: ['localhost:9090']
  - job_name: 'faucet'
    static_configs:
      - targets: ['localhost:9302']
  - job_name: 'gauge'
```

(continues on next page)

(continued from previous page)

```
static_configs:
  - targets: ['localhost:9303']
```

To learn more about what this configuration file does you can look at the [Prometheus Configuration Documentation](#). The simple explanation is that it includes an additional `faucet.rules.yml` file that performs some automatic queries in prometheus for generating some additional metrics as well as setting up scrape jobs every 15 seconds for faucet listening on `localhost:9302` and gauge listening on `localhost:9303`.

Steps to make prometheus use the configuration file shipped with faucet:

1. Change the configuration file prometheus loads by editing the file `/etc/default/prometheus` to look like:

Listing 5: `/etc/default/prometheus`

```
# Set the command-line arguments to pass to the server.
ARGS="--config.file=/etc/faucet/prometheus/prometheus.yml"
```

2. Restart prometheus to apply the changes:

```
sudo systemctl restart prometheus
```

Configure grafana

Grafana running in its default configuration will work just fine for our needs. We will however need to make it start on boot, configure prometheus as a data source and add our first dashboard:

1. Make grafana start on boot and then start it manually for the first time:

```
sudo systemctl daemon-reload
sudo systemctl enable grafana-server
sudo systemctl start grafana-server
```

2. To finish setup we will configure grafana via the web interface.

First load `http://localhost:3000` in your web browser (by default both the username and password are `admin`).

3. The web interface will first prompt us to add a data source. Use the following settings then click **Save & Test**:

Name:	Prometheus
Type:	Prometheus
URL:	<code>http://localhost:9090</code>

4. Next we want to add some dashboards so that we can later view the metrics from faucet.

Hover over the `+` button on the left sidebar in the web interface and click **Import**.

We will import the following dashboards, just download the following links and upload them through the grafana dashboard import screen:

- Instrumentation
- Inventory
- Port Statistics

Configure faucet

For this tutorial we will configure a very simple network topology consisting of a single switch with two ports.

1. Configure faucet

We need to tell faucet about our topology and VLAN information, we can do this by editing the faucet configuration `/etc/faucet/faucet.yaml` to look like:

Listing 6: `/etc/faucet/faucet.yaml`

```
vlans:
  office:
    vid: 100
    description: "office network"

dps:
  sw1:
    dp_id: 0x1
    hardware: "Open vSwitch"
    interfaces:
      1:
        name: "host1"
        description: "host1 network namespace"
        native_vlan: office
      2:
        name: "host2"
        description: "host2 network namespace"
        native_vlan: office
```

Note: Tabs are forbidden in the YAML language, please use only spaces for indentation.

This will create a single VLAN and a single datapath with two ports.

2. Verify configuration

The `check_faucet_config` command can be used to verify faucet has correctly interpreted your configuration before loading it. This can avoid shooting yourself in the foot by applying configuration with typos. We recommend either running this command by hand or with automation each time before loading configuration.

```
check_faucet_config /etc/faucet/faucet.yaml
```

This script will either return an error, or in the case of successfully parsing the configuration it will return a JSON object containing the entire faucet configuration that would be loaded (including any default settings), for example:

```
[{'advertise_interval': 30,
 'arp_neighbor_timeout': 30,
 'cache_update_guard_time': 150,
 'combinatorial_port_flood': False,
 'cookie': 1524372928,
 'description': 'sw1',
 'dot1x': None,
 'dp_acls': None,
```

(continues on next page)

(continued from previous page)

```
'dp_id': 1,
'drop_broadcast_source_address': True,
'drop_spoofed_faucet_mac': True,
'egress_pipeline': False,
'fast_advertise_interval': 5,
'faucet_dp_mac': '0e:00:00:00:00:01',
'global_vlan': 0,
'group_table': False,
'hardware': 'Open vSwitch',
'high_priority': 9001,
'highest_priority': 9099,
'idle_dst': True,
'ignore_learn_ins': 10,
'interface_ranges': OrderedDict(),
'interfaces': {'host1': {'acl_in': None,
                        'acls_in': None,
                        'description': 'host1 network namespace',
                        'dot1x': False,
                        'enabled': True,
                        'hairpin': False,
                        'hairpin_unicast': False,
                        'lacp': 0,
                        'lacp_active': False,
                        'lldp_beacon': OrderedDict(),
                        'loop_protect': False,
                        'loop_protect_external': False,
                        'max_hosts': 255,
                        'max_lldp_lost': 3,
                        'mirror': None,
                        'native_vlan': 'office',
                        'number': 1,
                        'opstatus_reconf': True,
                        'output_only': False,
                        'permanent_learn': False,
                        'receive_lldp': False,
                        'stack': OrderedDict(),
                        'tagged_vlans': [],
                        'unicast_flood': True},
                      'host2': {'acl_in': None,
                                'acls_in': None,
                                'description': 'host2 network namespace',
                                'dot1x': False,
                                'enabled': True,
                                'hairpin': False,
                                'hairpin_unicast': False,
                                'lacp': 0,
                                'lacp_active': False,
                                'lldp_beacon': OrderedDict(),
                                'loop_protect': False,
                                'loop_protect_external': False,
                                'max_hosts': 255,
                                'max_lldp_lost': 3,
```

(continues on next page)

(continued from previous page)

```

'mirror': None,
'native_vlan': 'office',
'number': 2,
'opstatus_reconf': True,
'output_only': False,
'permanent_learn': False,
'receive_lldp': False,
'stack': OrderedDict(),
'tagged_vlans': [],
'unicast_flood': True}},

'lacp_timeout': 30,
'learn_ban_timeout': 51,
'learn_jitter': 51,
'lldp_beacon': OrderedDict(),
'low_priority': 9000,
'lowest_priority': 0,
'max_host_fib_retry_count': 10,
'max_hosts_per_resolve_cycle': 5,
'max_resolve_backoff_time': 64,
'max_wildcard_table_size': 1280,
'metrics_rate_limit_sec': 0,
'min_wildcard_table_size': 32,
'multi_out': True,
'nd_neighbor_timeout': 30,
'ofchannel_log': None,
'packetin_pps': None,
'slowpath_pps': None,
'priority_offset': 0,
'proactive_learn_v4': True,
'proactive_learn_v6': True,
'stack': None,
'strict_packet_in_cookie': True,
'table_sizes': OrderedDict(),
'timeout': 300,
'use_classification': False,
'use_idle_timeout': False}]]
```

3. Reload faucet

To apply this configuration we can reload faucet which will cause it to compute the difference between the old and new configuration and apply the minimal set of changes to the network in a hitless fashion (where possible).

```
sudo systemctl reload faucet
```

4. Check logs

To verify the configuration reload was successful we can check `/var/log/faucet/faucet.log` and make sure faucet successfully loaded the configuration we can check the faucet log file `/var/log/faucet/faucet.log`:

Listing 7: `/var/log/faucet/faucet.log`

```

faucet INFO    Loaded configuration from /etc/faucet/faucet.yaml
faucet INFO    Add new datapath DPID 1 (0x1)
faucet INFO    Add new datapath DPID 2 (0x2)
```

(continues on next page)

(continued from previous page)

```

faucet INFO    configuration /etc/faucet/faucet.yaml changed, analyzing ↵
differences
faucet INFO    Reconfiguring existing datapath DPID 1 (0x1)
faucet.valve INFO   DPID 1 (0x1) skipping configuration because datapath not up
faucet INFO    Deleting de-configured DPID 2 (0x2)

```

If there were any issues (say faucet wasn't able to find a valid pathway from the old config to the new config) we could issue a faucet restart now which will cause a cold restart of the network.

Configure gauge

We will not need to edit the default gauge configuration that is shipped with faucet as it will be good enough to complete the rest of this tutorial. If you did need to modify it the path is `/etc/faucet/gauge.yaml` and the default configuration looks like:

Listing 8: gauge.yaml

```

---
# Recommended configuration is Prometheus for all monitoring, with all_dps: true
faucet_configs:
  - '/etc/faucet/faucet.yaml'
watchers:
  port_status_poller:
    type: 'port_state'
    all_dps: true
    # dps: ['sw1', 'sw2']
    db: 'prometheus'
  port_stats_poller:
    type: 'port_stats'
    all_dps: true
    # dps: ['sw1', 'sw2']
    interval: 10
    db: 'prometheus'
    # db: 'influx'
  flow_table_poller:
    type: 'flow_table'
    all_dps: true
    interval: 60
    db: 'prometheus'
dbs:
  prometheus:
    type: 'prometheus'
    prometheus_addr: '0.0.0.0'
    prometheus_port: 9303
  ft_file:
    type: 'text'
    compress: true
    path: 'flow_tables'
influx:
  type: 'influx'
  influx_db: 'faucet'
  influx_host: 'influxdb'

```

(continues on next page)

(continued from previous page)

```
influx_port: 8086
influx_user: 'faucet'
influx_pwd: 'faucet'
influx_timeout: 10
```

This default configuration will setup a prometheus exporter listening on port `0.0.0.0:9303` and write all the different kind of gauge metrics to this exporter.

We will however need to restart the current gauge instance so it can pick up our new faucet configuration:

```
sudo systemctl restart gauge
```

Connect your first datapath

Now that we've set up all the different components let's connect our first switch (which we call a **datapath**) to faucet. We will be using [Open vSwitch](#) for this which is a production-grade software switch with very good OpenFlow support.

1. Install Open vSwitch

```
sudo apt-get install openvswitch-switch
```

2. Add network namespaces to simulate hosts

We will use two linux network namespaces to simulate hosts and this will allow us to generate some traffic on our network.

First let's define some useful bash functions by coping and pasting the following definitions into our bash terminal:

```
# Run command inside network namespace
as_ns () {
    NAME=$1
    NETNS=faucet-${NAME}
    shift
    sudo ip netns exec ${NETNS} @@
}
```

```
# Create network namespace
create_ns () {
    NAME=$1
    IP=$2
    NETNS=faucet-${NAME}
    sudo ip netns add ${NETNS}
    sudo ip link add dev veth-${NAME} type veth peer name veth0 netns ${NETNS}
    sudo ip link set dev veth-${NAME} up
    as_ns ${NAME} ip link set dev lo up
    [ -n "${IP}" ] && as_ns ${NAME} ip addr add dev veth0 ${IP}
    as_ns ${NAME} ip link set dev veth0 up
}
```

NOTE: all the tutorial helper functions can be defined by sourcing `helper-funcs` into your shell environment.

Now we will create `host1` and `host2` and assign them some IPs:

```
create_ns host1 192.168.0.1/24
create_ns host2 192.168.0.2/24
```

3. Configure Open vSwitch

We will now configure a single Open vSwitch bridge (which will act as our datapath) and add two ports to this bridge:

```
sudo ovs-vsctl add-br br0 \
-- set bridge br0 other-config:datapath-id=0000000000000001 \
-- set bridge br0 other-config:disable-in-band=true \
-- set bridge br0 fail_mode=secure \
-- add-port br0 veth-host1 -- set interface veth-host1 ofport_request=1 \
-- add-port br0 veth-host2 -- set interface veth-host2 ofport_request=2 \
-- set-controller br0 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654
```

The [Open vSwitch documentation](#) is very good if you wish to find out more about configuring Open vSwitch.

4. Verify datapath is connected to faucet

At this point everything should be working, we just need to verify that is the case. If we now load up some of the grafana dashboards we imported earlier, we should see the datapath is now listed in the [Faucet Inventory](#) dashboard.

If you don't see the new datapath listed you can look at the faucet log files `/var/log/faucet/faucet.log` or the Open vSwitch log `/var/log/openvswitch/ovs-vswitchd.log` for clues.

5. Generate traffic between virtual hosts

With `host1` and `host2` we can now test our network works and start generating some traffic which will show up in grafana.

Let's start simple with a ping:

```
as_ns host1 ping 192.168.0.2
```

If this test is successful this shows our Open vSwitch is forwarding traffic under faucet control, `/var/log/faucet/faucet.log` should now indicate those two hosts have been learnt:

Listing 9: `/var/log/faucet/faucet.log`

```
faucet.valve INFO      DPID 1 (0x1) L2 learned 22:a6:c7:20:ff:3b (L2 type 0x0806, L3 ↳src 192.168.0.1, L3 dst 192.168.0.2) on Port 1 on VLAN 100 (1 hosts total)
faucet.valve INFO      DPID 1 (0x1) L2 learned 36:dc:0e:b2:a3:4b (L2 type 0x0806, L3 ↳src 192.168.0.2, L3 dst 192.168.0.1) on Port 2 on VLAN 100 (2 hosts total)
```

We can also use iperf to generate a large amount of traffic which will show up on the [Port Statistics](#) dashboard in grafana, just select `sw1` as the Datapath Name and `All` for the Port.

```
sudo apt-get install iperf3
as_ns host1 iperf3 --server --pidfile /run/iperf3-host1.pid --daemon
as_ns host2 iperf3 --client 192.168.0.1
```

Further steps

Now that you know how to setup and run faucet in a self-contained virtual environment you can build on this tutorial and start to make more interesting topologies by adding more Open vSwitch bridges, ports and network namespaces. Check out the faucet [Configuration](#) document for more information on features you can turn on and off. In future we will publish additional tutorials on layer 3 routing, inter-VLAN routing, ACLs.

You can also easily add real hardware into the mix as well instead of using a software switch. See the [Vendor-specific Documentation](#) section for information on how to configure a wide variety of different vendor devices for faucet.

1.2.2 ACL tutorial

In the [Installing faucet for the first time](#) tutorial we covered how to install and set-up Faucet. Next we are going to introduce Access Control Lists (ACLs).

ETA: ~25 minutes.

Prerequisites

- Install Faucet - [Package installation](#) steps 1 & 2
- Install Open vSwitch - [Connect your first datapath](#) steps 1 & 2
- Useful Bash Functions - Copy and paste the following definitions into your bash terminal, or to make them persistent between sessions add them to the bottom of your .bashrc and run ‘source .bashrc’.

```
# Run command inside network namespace
as_ns () {
    NAME=$1
    NETNS=faucet-${NAME}
    shift
    sudo ip netns exec ${NETNS} @@
}
```

```
# Create network namespace
create_ns () {
    NAME=$1
    IP=$2
    NETNS=faucet-${NAME}
    sudo ip netns add ${NETNS}
    sudo ip link add dev veth-${NAME} type veth peer name veth0 netns $-
    sudo ip link set dev veth-${NAME} up
    as_ns ${NAME} ip link set dev lo up
    [ -n "${IP}" ] && as_ns ${NAME} ip addr add dev veth0 ${IP}
    as_ns ${NAME} ip link set dev veth0 up
}
```

Note: If not continuing on from the ‘Installing Faucet for first time tutorial’ to setup the hosts and switch run:

```
create_ns host1 192.168.0.1/24
create_ns host2 192.168.0.2/24
sudo ovs-vsctl add-br br0 \
```

(continues on next page)

(continued from previous page)

```
-- set bridge br0 other-config:datapath-id=0000000000000001 \
-- set bridge br0 other-config:disable-in-band=true \
-- set bridge br0 fail_mode=secure \
-- add-port br0 veth-host1 -- set interface veth-host1 ofport_request=1 \
-- add-port br0 veth-host2 -- set interface veth-host2 ofport_request=2 \
-- set-controller br0 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654
```

And the faucet.yaml configuration file looks like:

Listing 10: /etc/faucet/faucet.yaml

```
vlans:
  office:
    vid: 100
    description: "office network"

dps:
  sw1:
    dp_id: 0x1
    hardware: "Open vSwitch"
    interfaces:
      1:
        name: "host1"
        description: "host2 network namespace"
        native_vlan: office
      2:
        name: "host2"
        description: "host2 network namespace"
        native_vlan: office
```

Overview

Faucet ACLs are made up of lists of rules. The order of the rules in the list denote the priority with the first rules being highest and last lowest. The first rule that matches a packet, will set the actions for the packet. Each of these lists has a name (e.g. ‘block-ping’), and can be used on multiple port or VLAN ‘acls_in’ fields. Again these are applied in order so all of ‘block-ping’ rules will be higher than ‘allow-all’.

Each rule contains two main items ‘matches’ and ‘actions’. Matches are any packet field such as MAC/IP/transport source/destination fields. For a full list visit the [Ryu documentation](#). If no matches are specified, the rule will match all packets.

Actions are used to control what the packet does, for example normal L2 forwarding (‘allow’), apply a ‘meter’ to rate limit traffic, and manipulation of the packet contents and output destination. The full list is available in the [Meters](#) section of the documentation.

The example below has defined two ACLs ‘block-ping’ & ‘allow-all’ these can be used on any and multiple ports or VLANs (more on VLANs later) using the ‘acls_in’ key. The block-ping ACL has two rules, one to block ICMP on IPv4 and another for ICMPv6 on IPv6. The allow-all ACL has one rule, which specifies no match fields, and therefore matches all packets, and the action ‘allow’. The ‘allow’ action is a boolean, if it’s True allow the packet to continue through the Faucet pipeline, if False drop the packet. ‘allow’ can be used in conjunction with the other actions to let the traffic flow with the expected layer 2 forwarding behaviour AND be mirrored to another port. The default ‘allow’ for ACLs is False (i.e. drop the packet). ACL rules will need to define ‘allow: True’ for those packets that are to be

forwarded.

Network setup

We are going to create the following network:

First we will add two new hosts to our network:

```
create_ns host3 192.168.0.3/24
create_ns host4 192.168.0.4/24
```

And connect them to br0

```
sudo ovs-vsctl add-port br0 veth-host3 -- set interface veth-host3 ofport_request=3 \
-- add-port br0 veth-host4 -- set interface veth-host4 ofport_request=4
```

The configuration below will block ICMP on traffic coming in on port 3, and allow everything else. Add this to /etc/faucet/faucet.yaml below the ‘dps’.

Listing 11: /etc/faucet/faucet.yaml

```
3:
  name: "host3"
  native_vlan: office
  acls_in: [block-ping, allow-all]
4:
  name: "host4"
  native_vlan: office
acls:
  block-ping:
    - rule:
        dl_type: 0x800      # IPv4
        ip_proto: 1          # ICMP
        actions:
          allow: False
    - rule:
        dl_type: 0x86dd     # IPv6
        ip_proto: 58         # ICMPv6
        actions:
          allow: False
  allow-all:
    - rule:
        actions:
          allow: True
```

Now tell Faucet to reload its configuration, this can be done by restarting the application. But a better way is to send Faucet a SIGHUP signal.

```
check_faucet_config /etc/faucet/faucet.yaml
```

```
sudo systemctl reload faucet
```

Pings to/from host3 should now fail:

```
as_ns host1 ping 192.168.0.3
```

But the other three hosts should be fine:

```
as_ns host1 ping 192.168.0.2
as_ns host1 ping 192.168.0.4
```

ACL actions

Mirroring

Mirroring traffic is useful if we want to send it to an out of band NFV service (e.g. Intrusion Detection System, packet capture a port or VLAN). To do this Faucet provides two ACL actions: mirror & output.

The mirror action copies the packet, before any modifications, to the specified port.

Note: Mirroring is done in input direction only.

Let's add the mirror action to our block-ping ACL `/etc/faucet/faucet.yaml`

Listing 12: `/etc/faucet/faucet.yaml`

```
...
block-ping:
  - rule:
      dl_type: 0x800
      ip_proto: 1
      actions:
        allow: False
        mirror: 4
  - rule:
      dl_type: 0x86dd
      ip_proto: 58
      actions:
        allow: False
        mirror: 4
```

And again send the.signup signal to Faucet

```
sudo systemctl reload faucet
```

To check this we will ping from host1 to host3, while performing a tcpdump on host4 who should receive the ping replies. It is a good idea to run each from a different terminal (screen, tmux, ...)

```
as_ns host4 tcpdump -l -e -n -i veth0
```

```
as_ns host1 ping 192.168.0.3
```

Ping should have 100% packet loss.

```
$ as_ns host4 tcpdump -l -e -n -i veth0

tcpdump: verbose output suppressed, use -v or -vv for full protocol decode
listening on veth0, link-type EN10MB (Ethernet), capture size 262144 bytes
13:24:36.848331 2e:d4:1a:ca:54:4b > 06:5f:14:fc:47:02, ethertype IPv4 (0x0800), length 98: 192.168.0.3 > 192.168.0.1: ICMP echo reply, id 23660, seq 16, length 64
13:24:37.857024 2e:d4:1a:ca:54:4b > 06:5f:14:fc:47:02, ethertype IPv4 (0x0800), length 98: 192.168.0.3 > 192.168.0.1: ICMP echo reply, id 23660, seq 17, length 64
13:24:38.865005 2e:d4:1a:ca:54:4b > 06:5f:14:fc:47:02, ethertype IPv4 (0x0800), length 98: 192.168.0.3 > 192.168.0.1: ICMP echo reply, id 23660, seq 18, length 64
13:24:39.873377 2e:d4:1a:ca:54:4b > 06:5f:14:fc:47:02, ethertype IPv4 (0x0800), length 98: 192.168.0.3 > 192.168.0.1: ICMP echo reply, id 23660, seq 19, length 64
13:24:40.881129 2e:d4:1a:ca:54:4b > 06:5f:14:fc:47:02, ethertype IPv4 (0x0800), length 98: 192.168.0.3 > 192.168.0.1: ICMP echo reply, id 23660, seq 20, length 64
```

Output

There is also the ‘output’ action which can be used to achieve the same thing.

Listing 13: /etc/faucet/faucet.yaml

```
block-ping:
  - rule:
      dl_type: 0x800
      ip_proto: 1
      actions:
        allow: False
        output:
          - port: 4
  - rule:
      dl_type: 0x86dd
      ip_proto: 58
      actions:
        allow: False
        output:
          - port: 4
```

The output action also allows us to change the packet by setting fields (mac/ip addresses, ...), VLAN operations (push/pop/swap VID). It can be used in conjunction with the other actions, e.g. output directly but do not allow through the Faucet pipeline (allow: false).

Let’s create a new ACL for host2’s port that will change the MAC source address.

Listing 14: /etc/faucet/faucet.yaml

```
dps:
  sw1:
    ...
  2:
    name: "host2"
    description: "host2 network namespace"
    native_vlan: office
```

(continues on next page)

(continued from previous page)

```

    acls_in: [rewrite-mac, allow-all]
    ...
acls:
  rewrite-mac:
    - rule:
      actions:
        allow: True
        output:
          - set_fields:
            - eth_src: "00:00:00:00:00:02"
...

```

Again reload Faucet.

Start tcpdump on host1

```
as_ns host1 tcpdump -l -e -n -i veth0
```

Ping host1 from host2

```
as_ns host2 ping 192.168.0.1
```

Here we can see ICMP echo requests are coming from the MAC address “00:00:00:00:00:02” that we set in our output ACL. (The reply is destined to the actual MAC address of host2 thanks to ARP).

```

tcpdump: verbose output suppressed, use -v or -vv for full protocol decode
listening on veth0, link-type EN10MB (Ethernet), capture size 262144 bytes
13:53:41.248235 00:00:00:00:00:02 > 06:5f:14:fc:47:02, ethertype IPv4 (0x0800), length 64
  ↳ 98: 192.168.0.2 > 192.168.0.1: ICMP echo request, id 23711, seq 1, length 64
13:53:41.248283 06:5f:14:fc:47:02 > ce:bb:23:ce:d5:a0, ethertype IPv4 (0x0800), length 64
  ↳ 98: 192.168.0.1 > 192.168.0.2: ICMP echo reply, id 23711, seq 1, length 64
13:53:42.247106 00:00:00:00:00:02 > 06:5f:14:fc:47:02, ethertype IPv4 (0x0800), length 64
  ↳ 98: 192.168.0.2 > 192.168.0.1: ICMP echo request, id 23711, seq 2, length 64
13:53:42.247154 06:5f:14:fc:47:02 > ce:bb:23:ce:d5:a0, ethertype IPv4 (0x0800), length 64
  ↳ 98: 192.168.0.1 > 192.168.0.2: ICMP echo reply, id 23711, seq 2, length 64
13:53:43.249726 00:00:00:00:00:02 > 06:5f:14:fc:47:02, ethertype IPv4 (0x0800), length 64
  ↳ 98: 192.168.0.2 > 192.168.0.1: ICMP echo request, id 23711, seq 3, length 64
13:53:43.249757 06:5f:14:fc:47:02 > ce:bb:23:ce:d5:a0, ethertype IPv4 (0x0800), length 64
  ↳ 98: 192.168.0.1 > 192.168.0.2: ICMP echo reply, id 23711, seq 3, length 64
13:53:44.248713 00:00:00:00:00:02 > 06:5f:14:fc:47:02, ethertype IPv4 (0x0800), length 64
  ↳ 98: 192.168.0.2 > 192.168.0.1: ICMP echo request, id 23711, seq 4, length 64
13:53:44.248738 06:5f:14:fc:47:02 > ce:bb:23:ce:d5:a0, ethertype IPv4 (0x0800), length 64
  ↳ 98: 192.168.0.1 > 192.168.0.2: ICMP echo reply, id 23711, seq 4, length 64

```

With the output action we could also use it to mirror traffic to a NFV server (like our fake mirror output action above), and use a VLAN tag to identify what port the traffic originated on on the switch. To do this we will use both the ‘port’ & ‘vlan_vid’ output fields.

Listing 15: /etc/faucet/faucet.yaml

```

block-ping:
  - rule:
    dl_type: 0x800

```

(continues on next page)

(continued from previous page)

```

ip_proto: 1
actions:
    allow: False
    output:
        - vlan_vid: 3
        - port: 4
- rule:
    dl_type: 0x86dd
    ip_proto: 58
    actions:
        allow: False
        output:
            - vlan_vid: 3
            - port: 4

```

Again reload Faucet, start a tcpdump on host4, and ping from host1 to host3. Ping should still not be allowed through and the tcpdump output should be similar to below (Note the 802.1Q tag and VLAN 3):

```
$ as_ns host4 tcpdump -l -e -n -i veth0

tcpdump: verbose output suppressed, use -v or -vv for full protocol decode
listening on veth0, link-type EN10MB (Ethernet), capture size 262144 bytes
14:14:15.285329 2e:d4:1a:ca:54:4b > 06:5f:14:fc:47:02, ethertype 802.1Q (0x8100), length ↵
↪ 102: vlan 3, p 0, ethertype IPv4, 192.168.0.3 > 192.168.0.1: ICMP echo reply, id 23747,
↪ seq 1, length 64
14:14:16.293016 2e:d4:1a:ca:54:4b > 06:5f:14:fc:47:02, ethertype 802.1Q (0x8100), length ↵
↪ 102: vlan 3, p 0, ethertype IPv4, 192.168.0.3 > 192.168.0.1: ICMP echo reply, id 23747,
↪ seq 2, length 64
14:14:17.300898 2e:d4:1a:ca:54:4b > 06:5f:14:fc:47:02, ethertype 802.1Q (0x8100), length ↵
↪ 102: vlan 3, p 0, ethertype IPv4, 192.168.0.3 > 192.168.0.1: ICMP echo reply, id 23747,
↪ seq 3, length 64
```

1.2.3 VLAN tutorial

Next we are going to introduce VLANs.

ETA: ~30 mins.

Prerequisites

- Install Faucet - [Package installation](#) steps 1 & 2
- Install Open vSwitch - [Connect your first datapath](#) steps 1 & 2
- Useful Bash Functions - Copy and paste the following definitions into your bash terminal, or to make them persistent between sessions add them to the bottom of your .bashrc and run ‘source .bashrc’.

```
# Run command inside network namespace
as_ns () {
    NAME=$1
    NETNS=faucet-${NAME}
    shift
```

(continues on next page)

(continued from previous page)

```
sudo ip netns exec ${NETNS} $@
}
```

```
# Create network namespace
create_ns () {
    NAME=$1
    IP=$2
    NETNS=faucet-$NAME
    sudo ip netns add ${NETNS}
    sudo ip link add dev veth-${NAME} type veth peer name veth0 netns $NETNS
    sudo ip link set dev veth-${NAME} up
    as_ns ${NAME} ip link set dev lo up
    [ -n "${IP}" ] && as_ns ${NAME} ip addr add dev veth0 ${IP}
    as_ns ${NAME} ip link set dev veth0 up
}
```

```
# Clean up namespaces, bridges and processes created during faucet tutorial
cleanup () {
    for NETNS in $(sudo ip netns list | grep "faucet-" | awk '{print $1}'); do
        [ -n "${NETNS}" ] || continue
        NAME=${NETNS#faucet-}
        if [ -f "/run/dhclient-${NAME}.pid" ]; then
            # Stop dhclient
            sudo pkill -F "/run/dhclient-${NAME}.pid"
        fi
        if [ -f "/run/iperf3-${NAME}.pid" ]; then
            # Stop iperf3
            sudo pkill -F "/run/iperf3-${NAME}.pid"
        fi
        if [ -f "/run/bird-${NAME}.pid" ]; then
            # Stop bird
            sudo pkill -F "/run/bird-${NAME}.pid"
        fi
        # Remove netns and veth pair
        sudo ip link delete veth-${NAME}
        sudo ip netns delete ${NETNS}
    done
    for isl in $(ip -o link show | awk -F': ' '{print $2}' | grep -oE '^l-br[0-9](_[0-9]*?)?br[0-9](_[0-9]*?)?'); do
        # Delete inter-switch links
        sudo ip link delete dev $isl 2>/dev/null || true
    done
    for DNSMASQ in /run/dnsmasq-vlan*.pid; do
        [ -e "${DNSMASQ}" ] || continue
        # Stop dnsmasq
        sudo pkill -F "${DNSMASQ}"
    done
    # Remove faucet dataplane connection
    sudo ip link delete veth-faucet 2>/dev/null || true
}
```

(continues on next page)

(continued from previous page)

```
# Remove openvswitch bridges
sudo ovs-vsctl --if-exists del-br br0
sudo ovs-vsctl --if-exists del-br br1
sudo ovs-vsctl --if-exists del-br br2
sudo ovs-vsctl --if-exists del-br br3
}

# Add tagged VLAN interface to network namespace
add_tagged_interface () {
    NAME=$1
    VLAN=$2
    IP=$3
    NETNS=faucet-${NAME}
    as_ns ${NAME} ip link add link veth0 name veth0.${VLAN} type vlan id $VLAN
    [ -n "${IP}" ] && as_ns ${NAME} ip addr add dev veth0.${VLAN} ${IP}
    as_ns ${NAME} ip link set dev veth0.${VLAN} up
    as_ns ${NAME} ip addr flush dev veth0
}
```

Overview

In this tutorial we will look at how to do the following tasks using Faucet:

- Use VLANs to segment traffic.
- Create VLAN Trunks.
- Apply an ACL to an entire VLAN.

Note: We cover *Routing between VLANs* in a later tutorial.

A port can be in several VLAN modes:

1. Native - where packets come into the switch with no 802.1Q tag.
2. Tagged - where packets come into the switch with a 802.1Q tag.
3. Mixed - where both native and tagged packets appear on the same port.

If a packet comes in with a tag for a VLAN that the port is not configured for it will be dropped.

Configuring VLANs

To demonstrate these tasks we will use a demo network where a single switch br0 connects to 9 hosts.

Ports 1, 2, 5, 6 will be native (untagged) ports. While ports 3, 4, 7, 8, and 9 will be tagged ports.

Here is the structure of the demo setup.

Tip: Keep this diagram nearby to simplify following the rest of the tutorial.

Network setup

Let's start. Keep host1, host2 on the native VLAN 100 (office VLAN) as in the first and second tutorials.

Note: To create the hosts and switch again run

```
cleanup
create_ns host1 192.168.0.1/24
create_ns host2 192.168.0.2/24
sudo ovs-vsctl add-br br0 \
-- set bridge br0 other-config:datapath-id=0000000000000001 \
-- set bridge br0 other-config:disable-in-band=true \
-- set bridge br0 fail_mode=secure \
-- add-port br0 veth-host1 -- set interface veth-host1 ofport_request=1 \
-- add-port br0 veth-host2 -- set interface veth-host2 ofport_request=2 \
-- set-controller br0 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654
```

Then add the following hosts with the corresponding VLAN:

- Assign host3 and host4 a VLAN interface (vid:100) as they are on a tagged port.

```
create_ns host3 0.0.0.0
create_ns host4 0.0.0.0
add_tagged_interface host3 100 192.168.0.3/24
add_tagged_interface host4 100 192.168.0.4/24
```

- Assign host5 and host6 an IP address from the VLAN 200 range.

```
create_ns host5 192.168.2.5/24
create_ns host6 192.168.2.6/24
```

- Assign host7 and host8 a VLAN interface (vid:300) as they are on a tagged port.

```
create_ns host7 0.0.0.0
create_ns host8 0.0.0.0
add_tagged_interface host7 300 192.168.3.7/24
add_tagged_interface host8 300 192.168.3.8/24
```

- Add host9 to all VLANs (100, 200, 300) to work as a NFV host.

```
create_ns host9 0.0.0.0
add_tagged_interface host9 100 192.168.0.9/24
add_tagged_interface host9 200 192.168.2.9/24
add_tagged_interface host9 300 192.168.3.9/24
```

Then connect all the hosts to the switch (br0)

```
sudo ovs-vsctl add-port br0 veth-host3 -- set interface veth-host3 ofport_request=3 \
-- add-port br0 veth-host4 -- set interface veth-host4 ofport_request=4 \
-- add-port br0 veth-host5 -- set interface veth-host5 ofport_request=5 \
-- add-port br0 veth-host6 -- set interface veth-host6 ofport_request=6 \
-- add-port br0 veth-host7 -- set interface veth-host7 ofport_request=7 \
-- add-port br0 veth-host8 -- set interface veth-host8 ofport_request=8 \
-- add-port br0 veth-host9 -- set interface veth-host9 ofport_request=9
```

Now we have everything to start working with faucet through its configuration file. Each time we will only need to change the configuration file and restart faucet (or send it HUP signal to reload the configuration file).

Basic VLAN settings

Change /etc/faucet/faucet.yaml to reflect our setting.

Listing 16: /etc/faucet/faucet.yaml

```
vlangs:  
  vlan100:  
    vid: 100  
  vlan200:  
    vid: 200  
  vlan300:  
    vid: 300  
dps:  
  sw1:  
    dp_id: 0x1  
    hardware: "Open vSwitch"  
    interfaces:  
      1:  
        name: "host1"  
        description: "host2 network namespace"  
        native_vlan: vlan100  
      2:  
        name: "host2"  
        description: "host2 network namespace"  
        native_vlan: vlan100  
      3:  
        name: "host3"  
        tagged_vlans: [vlan100]  
      4:  
        name: "host4"  
        tagged_vlans: [vlan100]  
      5:  
        name: "host5"  
        native_vlan: vlan200  
      6:  
        name: "host6"  
        native_vlan: vlan200  
      7:  
        name: "host7"  
        tagged_vlans: [vlan300]  
      8:  
        name: "host8"  
        tagged_vlans: [vlan300]  
      9:  
        name: "host9"  
        tagged_vlans: [vlan100,vlan200,vlan300]
```

Send SIGHUP signal to reload the configuration file, and check how its log the new configuration in /var/log/faucet/faucet.log

```
sudo systemctl reload faucet
cat /var/log/faucet/faucet.log
```

Let's do the following simple tests:

1. Ping between hosts in the same VLAN (all should work)

```
as_ns host1 ping 192.168.0.2
as_ns host3 ping 192.168.0.4
as_ns host5 ping 192.168.2.6
as_ns host7 ping 192.168.3.8
```

2. Ping between hosts in the same VLAN where the one host is native and the other is tagged should work also. In particular between host1 (native VLAN 100) to host3 (tagged VLAN 100).

```
as_ns host1 ping 192.168.0.3
```

3. Ping between hosts in different VLANs should fail. To test that let's add the IP address 192.168.0.5 to host5 (native VLAN 200) and try to ping it from host1 (native VLAN 100).

```
as_ns host5 ip address add 192.168.0.5 dev veth0
as_ns host1 ping 192.168.0.5
```

4. Now we can test the trunk link to host9 from different VLANs (all should work)

```
as_ns host1 ping 192.168.0.9
as_ns host3 ping 192.168.0.9
as_ns host5 ping 192.168.2.9
as_ns host7 ping 192.168.3.9
```

VLAN ACL

Let's apply an ACL on a particular VLAN (e.g. VLAN 300). We will block any ICMP packets on VLAN 300. First create an ACL to block the ping. Open `/etc/faucet/faucet.yaml` and add the 'acls' section.

Listing 17: `/etc/faucet/faucet.yaml`

```
acls:
  block-ping:
    - rule:
        dl_type: 0x800      # IPv4
        ip_proto: 1          # ICMP
        actions:
          allow: False
    - rule:
        dl_type: 0x86dd     # IPv6
        ip_proto: 58         # ICMPv6
        actions:
          allow: False
```

Then apply this ACL on VLAN 300.

Listing 18: /etc/faucet/faucet.yaml

```
vlangs:  
  vlan100:  
    vid: 100  
  vlan200:  
    vid: 200  
  vlan300:  
    vid: 300  
    acls_in: [block-ping] # Apply ACL only on vlan300
```

Just before we reload the configuration file. Let's verify that pinging is working between hosts in VLAN 300.

```
as_ns host7 ping 192.168.3.8
```

Now let's apply the configuration, send SIGHUP signal to reload the configuration file.

```
sudo systemctl reload faucet
```

Now if you try to ping from host7 and host8, it will not work as it is specified by their VLAN ACL.

```
as_ns host7 ping 192.168.3.8
```

1.2.4 Routing tutorial

This tutorial will cover routing with Faucet.

There are three types of routing we can use.

- Inter-VLAN routing
- Static routing
- BGP via an external application (Quagga, Bird, EXABGP, etc)

Prerequisites

- Install Faucet - [Package installation](#) steps 1 & 2
- Install Open vSwitch - [Connect your first datapath](#) steps 1 & 2
- Useful Bash Functions - Copy and paste the following definitions into your bash terminal, or to make them persistent between sessions add them to the bottom of your .bashrc and run ‘source .bashrc’.

```
# Run command inside network namespace  
as_ns () {  
    NAME=$1  
    NETNS=faucet-$NAME  
    shift  
    sudo ip netns exec ${NETNS} $@  
}
```

```
# Create network namespace
create_ns () {
    NAME=$1
    IP=$2
    NETNS=faucet-${NAME}
    sudo ip netns add ${NETNS}
    sudo ip link add dev veth-$NAME type veth peer name veth0 netns $NETNS
    sudo ip link set dev veth-$NAME up
    as_ns ${NAME} ip link set dev lo up
    [ -n "${IP}" ] && as_ns ${NAME} ip addr add dev veth0 ${IP}
    as_ns ${NAME} ip link set dev veth0 up
}
```

```
# Clean up namespaces, bridges and processes created during faucet tutorial
cleanup () {
    for NETNS in $(sudo ip netns list | grep "faucet-" | awk '{print $1}');
    do
        [ -n "${NETNS}" ] || continue
        NAME=${NETNS#faucet-}
        if [ -f "/run/dhclient-${NAME}.pid" ]; then
            # Stop dhclient
            sudo pkill -F "/run/dhclient-${NAME}.pid"
        fi
        if [ -f "/run/iperf3-${NAME}.pid" ]; then
            # Stop iperf3
            sudo pkill -F "/run/iperf3-${NAME}.pid"
        fi
        if [ -f "/run/bird-${NAME}.pid" ]; then
            # Stop bird
            sudo pkill -F "/run/bird-${NAME}.pid"
        fi
        # Remove netns and veth pair
        sudo ip link delete veth-$NAME
        sudo ip netns delete ${NETNS}
    done
    for isl in $(ip -o link show | awk -F': ' '{print $2}' | grep -oE "^\-br[0-9](_[0-9]*?-br[0-9](_[0-9]*?))");
    do
        # Delete inter-switch links
        sudo ip link delete dev $isl 2>/dev/null || true
    done
    for DNSMASQ in /run/dnsmasq-vlan*.pid; do
        [ -e "${DNSMASQ}" ] || continue
        # Stop dnsmasq
        sudo pkill -F "${DNSMASQ}"
    done
    # Remove faucet dataplane connection
    sudo ip link delete veth-faucet 2>/dev/null || true
    # Remove openvswitch bridges
    sudo ovs-vsctl --if-exists del-br br0
    sudo ovs-vsctl --if-exists del-br br1
    sudo ovs-vsctl --if-exists del-br br2
```

(continues on next page)

(continued from previous page)

```
sudo ovs-vsctl --if-exists del-br br3
}
```

- Run the cleanup script to remove old namespaces and switches:

```
cleanup
```

Routing between VLANs

Let's start with a single switch connected to two hosts in two different VLANs.

```
create_ns host1 10.0.0.1/24
create_ns host2 10.0.1.2/24
sudo ovs-vsctl add-br br0 \
-- set bridge br0 other-config:datapath-id=0000000000000001 \
-- set bridge br0 other-config:disable-in-band=true \
-- set bridge br0 fail_mode=secure \
-- add-port br0 veth-host1 -- set interface veth-host1 ofport_request=1 \
-- add-port br0 veth-host2 -- set interface veth-host2 ofport_request=2 \
-- set-controller br0 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654
```

In this section we will be using faucet as a gateway for our two hosts and using faucet to route between them. To do this we are going to need to give faucet an IP address on the network. This is accomplished with by using two new options that we haven't seen before:

<code>faucet_vips</code>	The IP address for Faucet's routing interface on this VLAN. Multiple IP addresses (IPv4 & IPv6) can be used.
<code>faucet_mac</code>	The MAC address of Faucet's routing interface on this VLAN.

Let's add the following faucet configuration which makes use of these options.

Listing 19: /etc/faucet/faucet.yaml

```
vlans:
  vlan100:
    vid: 100
    faucet_vips: ["10.0.0.254/24"] # Faucet's virtual IP address for vlan100
    faucet_mac: "00:00:00:00:00:11"
  vlan200:
    vid: 200
    faucet_vips: ["10.0.1.254/24"] # Faucet's virtual IP address for vlan200
    faucet_mac: "00:00:00:00:00:22"
dps:
  sw1:
    dp_id: 0x1
    hardware: "Open vSwitch"
    interfaces:
      1:
        name: "host1"
```

(continues on next page)

(continued from previous page)

```

description: "host1 network namespace"
native_vlan: vlan100
2:
name: "host2"
description: "host2 network namespace"
native_vlan: vlan200

```

Now lets signal faucet to reload the configuration file.

```
sudo systemctl reload faucet
```

Add a default route on each host to set the gateway to the value we used for `faucet_vips` above.

```

as_ns host1 ip route add default via 10.0.0.254 dev veth0
as_ns host2 ip route add default via 10.0.1.254 dev veth0

```

By default traffic between our two hosts will be dropped since they are in different VLANs with different subnets. We can show that by doing the following:

```
as_ns host1 ping 10.0.1.2
```

We can change this by enabling inter-VLAN routing between these two VLANs. In faucet you do this by creating a router and specifying which VLANs can route between each other.

In our case we to enable routing between VLAN 100 and VLAN 200 so we add the following to our configuration file.

Listing 20: /etc/faucet/faucet.yaml

```

routers:
  router-1:                                # Router name
    vlans: [vlan100, vlan200]            # Names of vlans to allow routing between

```

Reload faucet to enable inter-VLAN routing.

```
sudo systemctl reload faucet
```

Our ping before from host1 to host2 should now work (the first few packets may get lost as faucet needs to resolve the MAC address of the next hop with ARP).

```
as_ns host1 ping 10.0.1.2
```

Inter-VLAN routing by default will allow all traffic to pass between VLANs, if we wanted to change this and restrict communication to a few different IP addresses or TCP/UDP ports, we could apply a VLAN ACL to each VLAN to limit the types of traffic that may pass and what should be dropped.

Static routing

For this we will set-up a Faucet switch with three hosts. One of these hosts will act like a server.

Run the cleanup script to remove old namespaces and switches.

```
cleanup
```

Create 3 hosts, in 2 different subnets:

```
create_ns host1 10.0.0.1/24
create_ns host2 10.0.0.2/24
create_ns server 10.0.1.1/24
```

Add a default route for each host to the gateway which is faucet's virtual IP address.

```
as_ns host1 ip route add default via 10.0.0.254
as_ns host2 ip route add default via 10.0.0.254
as_ns server ip route add default via 10.0.1.254
```

Create the bridge and add host1, host2 and the server to br0.

```
sudo ovs-vsctl add-br br0 \
-- set bridge br0 other-config:datapath-id=0000000000000001 \
-- set bridge br0 other-config:disable-in-band=true \
-- set bridge br0 fail_mode=secure \
-- add-port br0 veth-host1 -- set interface veth-host1 ofport_request=1 \
-- add-port br0 veth-host2 -- set interface veth-host2 ofport_request=2 \
-- add-port br0 veth-server -- set interface veth-server ofport_request=3 \
-- set-controller br0 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654
```

For this Faucet configuration we will start from scratch. First we need to define 2 VLANs one for hosts and one for servers. We will also note that inside the configuration for the servers VLAN we see a static route that routes the subnet 192.0.2.0/24 to the server namespace (10.0.1.1).

Listing 21: /etc/faucet/faucet.yaml

```
vlangs:
  hosts:
    vid: 100
    description: "vlan for clients"
    faucet_mac: "00:00:00:00:00:11"
    faucet_vips: ["10.0.0.254/24"]

  servers:
    vid: 200
    description: "vlan for servers"
    faucet_mac: "00:00:00:00:00:22"
    faucet_vips: ["10.0.1.254/24"]
    routes:
      - route:
          ip_dst: "192.0.2.0/24"
          ip_gw: '10.0.1.1'
```

(continues on next page)

(continued from previous page)

```

routers:
    router-hosts-servers:
        vlans: [hosts, servers]
dps:
    br0:
        dp_id: 0x1
        hardware: "Open vSwitch"
        interfaces:
            1:
                name: "host1"
                description: "host1 network namespace"
                native_vlan: hosts
            2:
                name: "host2"
                description: "host2 network namespace"
                native_vlan: hosts
            3:
                name: "server"
                description: "server network namespace"
                native_vlan: servers

```

Reload Faucet to apply the new configuration.

```
sudo systemctl reload faucet
```

We can verify the inter-VLAN Routing is working by pinging the IP address of the server namespace:

```
as_ns host1 ping 10.0.1.1
```

We also need to add an additional IP alias to server to test the static route works.

```
as_ns server ip address add 192.0.2.1/24 dev veth0
```

And we should now be able to ping our IP alias.

```
as_ns host1 ping 192.0.2.1
```

BGP routing

For this section we are going to change our static routes from above into BGP routes.

BGP (and other routing) is provided by a NFV service, here we will use [BIRD](#). Other applications such as ExaBGP & Quagga could be used. Faucet imports all routes provided by this NFV service. This means we can use our service for other routing protocols (OSPF, RIP, etc) and apply filtering using the service's policy language.

Setup

Our data plane will end up looking like below, you may notice how we have the Faucet application connected to the control plane and dataplane.

Remove the following lines from `/etc/faucet/faucet.yaml` to remove the static route from faucet:

Listing 22: `/etc/faucet/faucet.yaml`

```
routes:
  - route:
    ip_dst: "192.0.2.0/24"
    ip_gw: '10.0.1.1'
```

Reload Faucet

```
sudo systemctl reload faucet
```

Verify that we can no longer ping the address we were previously static routing.

```
as_ns host1 ping 192.0.2.1
```

Let's add a new network namespace to run BIRD

```
create_ns bgp 10.0.1.2/24
sudo ovs-vsctl add-port br0 veth-bgp -- set interface veth-bgp ofport_request=4
```

Next we will add a dataplane connection for Faucet so that it can communicate with BIRD running on the bgp namespace.

```
sudo ip link add veth-faucet type veth peer name veth-faucet-ovs
sudo ovs-vsctl add-port br0 veth-faucet-ovs -- set interface veth-faucet-ovs ofport_
↪request=5
sudo ip addr add 10.0.1.3/24 dev veth-faucet
sudo ip link set veth-faucet up
sudo ip link set veth-faucet-ovs up
```

Now install BIRD on the system and stop it from running:

```
sudo apt-get install bird
sudo systemctl stop bird
sudo systemctl stop bird6
```

To configure BIRD add the following to `/etc/bird/bird.conf`, this will create a simple routing setup where BIRD originates a static route for 192.0.2.0/24 and sends this to faucet over BGP.

Listing 23: /etc/bird/bird.conf

```

protocol kernel {
    scan time 60;
    import none;
}

protocol device {
    scan time 60;
}

# Generate static route inside bird
protocol static {
    route 192.0.2.0/24 via 10.0.1.1;
}

# BGP peer with faucet
# Import all routes and export our static route
protocol bgp faucet {
    local as 65001;
    neighbor 10.0.1.3 port 9179 as 65000;
    export all;
    import all;
}

```

We can now start BIRD inside the bgp namespace:

```
as_ns bgp bird -P /run/bird-bgp.pid
```

We'll configure Faucet to talk to BIRD by adding BGP configuration to /etc/faucet/faucet.yaml. Add the following to the routers section.

Listing 24: /etc/faucet/faucet.yaml

```

routers:
  ...
  bird:
    bgp:
      vlan: servers          # The VLAN faucet use for BGP
      as: 65000               # Faucet's AS number
      port: 9179              # BGP port for Faucet to listen on.
      routerid: '10.0.1.3'     # Faucet's Unique ID.
      server_addresses: ['10.0.1.3'] # Faucet's listen IP for BGP
      neighbor_addresses: ['10.0.1.2'] # Neighbouring IP addresses (IPv4/IPv6)
      neighbor_as: 65001        # Neighbour's AS number

```

And finally add the port configuration for the Faucet data plane interface (veth-faucet0).

Listing 25: /etc/faucet/faucet.yaml

```

dps:
  br0:
    ...
    interfaces:

```

(continues on next page)

(continued from previous page)

```
...
4:
  name: "bgp"
  description: "BIRD BGP router"
  native_vlan: servers
5:
  name: "faucet"
  description: "faucet dataplane connection"
  native_vlan: servers
```

Now reload Faucet.

```
sudo systemctl reload faucet
```

We can use the command line tool `birdc` to query the status of our peering connection, we should see that it is now established:

```
as_ns bgp birdc show protocols all faucet

name      proto      table      state      since      info
faucet    BGP        master     up        13:25:38    Established
Preference: 100
Input filter: ACCEPT
Output filter: ACCEPT
Routes:       1 imported, 1 exported, 1 preferred
Route change stats:   received      rejected      filtered      ignored      accepted
Import updates:       1            0            0            0            1
Import withdraws:     0            0            ---          0            0
Export updates:       2            1            0            ---          1
Export withdraws:     0            ---          ---          ---          0
BGP state:           Established
Neighbor address: 10.0.1.3
Neighbor AS:         65000
Neighbor ID:         10.0.1.3
Neighbor caps:       AS4
Session:             external AS4
Source address:      10.0.1.2
Hold timer:          185/240
Keepalive timer:     57/80
```

Using `birdc` we can also check what routes are being exported to faucet:

```
as_ns bgp birdc show route export faucet
192.0.2.0/24      via 10.0.1.1 on veth0 [static1 13:25:34] * (200)
```

And which routes bird receives from faucet:

```
as_ns bgp birdc show route protocol faucet
10.0.1.0/24      via 10.0.1.254 on veth0 [faucet 13:25:38 from 10.0.1.3] * (100) [i]
```

In `/var/log/faucet/faucet.log` we should now see log messages relating to BGP:

Listing 26: /var/log/faucet/faucet.log

```

Jan 16 13:25:17 faucet      INFO    Reloading configuration
Jan 16 13:25:17 faucet      INFO    configuration /etc/faucet/faucet.yaml changed, ↵
↳ analyzing differences
Jan 16 13:25:17 faucet      INFO    Add new datapath DPID 1 (0x1)
Jan 16 13:25:17 faucet      INFO    Adding BGP speaker key DP ID: 1, VLAN VID: 200, IP ↵
↳ version: 4 for VLAN servers vid:200 untagged: Port 3,Port 4,Port 5
Jan 16 13:25:38 faucet      INFO    BGP peer router ID 10.0.1.2 AS 65001 up
Jan 16 13:25:38 faucet      INFO    BGP add 192.0.2.0/24 nexthop 10.0.1.1
Jan 16 13:25:42 faucet.valve INFO    DPID 1 (0x1) br0 resolving 10.0.1.1 (1 flows) on ↵
↳ VLAN 200
Jan 16 13:25:42 faucet.valve INFO    DPID 1 (0x1) br0 Adding new route 192.0.2.0/24 via ↵
↳ 10.0.1.1 (aa:97:cd:33:74:a9) on VLAN 200

```

Once confirming the BGP connection is up between BIRD and faucet and the correct routes are being advertised, we should now be able to ping the IP alias on the server namespace again:

```
as_ns host1 ping 192.0.2.1
```

1.2.5 Connection tracking tutorial

This tutorial will cover the use of the OVS connection tracking system (aka *conntrack*) in conjunction with Faucet.

We will explore using the *conntrack* module to implement:

- Stateful firewall rules via *conntrack* ACLs
- Source Network Address Translation (sNAT)

Prerequisites

- A basic understanding of OVS connection tracking concepts. The [OVS Conntrack Tutorial](#) is a good starting point.
- A good understanding of the previous tutorial topics ([ACL tutorial](#), [VLAN tutorial](#), [Routing tutorial](#))
- Install Faucet - [Package installation](#) steps 1 & 2
- Install Open vSwitch - [Connect your first datapath](#) steps 1 & 2
- Install the [conntrack command line utility](#)

```
sudo apt-get install conntrack
```

- Useful Bash Functions - Copy and paste the following definitions into your bash terminal, or to make them persistent between sessions add them to the bottom of your .bashrc and run ‘source .bashrc’.

```

# Run command inside network namespace
as_ns () {
    NAME=$1
    NETNS=faucet-${NAME}
    shift
    sudo ip netns exec ${NETNS} $@
}

```

```
# Create network namespace
create_ns () {
    NAME=$1
    IP=$2
    NETNS=faucet-${NAME}
    sudo ip netns add ${NETNS}
    sudo ip link add dev veth-$NAME type veth peer name veth0 netns $NETNS
    sudo ip link set dev veth-$NAME up
    as_ns ${NAME} ip link set dev lo up
    [ -n "${IP}" ] && as_ns ${NAME} ip addr add dev veth0 ${IP}
    as_ns ${NAME} ip link set dev veth0 up
}
```

```
# Clean up namespaces, bridges and processes created during faucet tutorial
cleanup () {
    for NETNS in $(sudo ip netns list | grep "faucet-" | awk '{print $1}'); do
        [ -n "${NETNS}" ] || continue
        NAME=${NETNS#faucet-}
        if [ -f "/run/dhclient-${NAME}.pid" ]; then
            # Stop dhclient
            sudo pkill -F "/run/dhclient-${NAME}.pid"
        fi
        if [ -f "/run/iperf3-${NAME}.pid" ]; then
            # Stop iperf3
            sudo pkill -F "/run/iperf3-${NAME}.pid"
        fi
        if [ -f "/run/bird-${NAME}.pid" ]; then
            # Stop bird
            sudo pkill -F "/run/bird-${NAME}.pid"
        fi
        # Remove netns and veth pair
        sudo ip link delete veth-$NAME
        sudo ip netns delete ${NETNS}
    done
    for isl in $(ip -o link show | awk -F': ' '{print $2}' | grep -oE "^\-br[0-9](_[0-9]*?-br[0-9](_[0-9]*?))"); do
        # Delete inter-switch links
        sudo ip link delete dev $isl 2>/dev/null || true
    done
    for DNSMASQ in /run/dnsmasq-vlan*.pid; do
        [ -e "${DNSMASQ}" ] || continue
        # Stop dnsmasq
        sudo pkill -F "${DNSMASQ}"
    done
    # Remove faucet dataplane connection
    sudo ip link delete veth-faucet 2>/dev/null || true
    # Remove openvswitch bridges
    sudo ovs-vsctl --if-exists del-br br0
    sudo ovs-vsctl --if-exists del-br br1
    sudo ovs-vsctl --if-exists del-br br2
```

(continues on next page)

(continued from previous page)

```
sudo ovs-vsctl --if-exists del-br br3
}
```

- Run the cleanup script to remove old namespaces and switches:

```
cleanup
```

Stateful Firewall Rules

Let's start with a single switch connected to two hosts in two different VLANs, reusing a setup from the [Routing tutorial](#).

```
create_ns host1 10.0.0.1/24
create_ns host2 10.0.1.2/24
sudo ovs-vsctl add-br br0 \
-- set bridge br0 other-config:datapath-id=0000000000000001 \
-- set bridge br0 other-config:disable-in-band=true \
-- set bridge br0 fail_mode=secure \
-- add-port br0 veth-host1 -- set interface veth-host1 ofport_request=1 \
-- add-port br0 veth-host2 -- set interface veth-host2 ofport_request=2 \
-- set-controller br0 tcp:127.0.0.1:6653
```

We begin with the following Faucet configuration.

Listing 27: /etc/faucet/faucet.yaml

```
vlans:
  vlan100:
    vid: 100
    faucet_vips: ["10.0.0.254/24"] # Faucet's virtual IP address for vlan100
    faucet_mac: "00:00:00:00:00:11"
  vlan200:
    vid: 200
    faucet_vips: ["10.0.1.254/24"] # Faucet's virtual IP address for vlan200
    faucet_mac: "00:00:00:00:00:22"
dps:
  sw1:
    dp_id: 0x1
    hardware: "Open vSwitch"
    interfaces:
      1:
        name: "host1"
        description: "host1 network namespace"
        native_vlan: vlan100
      2:
        name: "host2"
        description: "host2 network namespace"
        native_vlan: vlan200
routers:
  router-1:                      # Router name
    vlans: [vlan100, vlan200]      # Names of vlans to allow routing between
```

Now let's signal Faucet to reload the configuration file, which simply enables and permits the two hosts to communicate.

```
sudo systemctl reload faucet
```

Add a default route on each host to set the gateway to the value we used for `faucet_vips` above.

```
as_ns host1 ip route add default via 10.0.0.254 dev veth0
as_ns host2 ip route add default via 10.0.1.254 dev veth0
```

By default and without any ACLs, traffic is now permitted in either direction between both hosts. We can show that by doing the following:

```
as_ns host1 ping 10.0.1.2
as_ns host2 ping 10.0.0.1
```

In this section we will be using Faucet as a gateway and stateful firewall between our two hosts. In this case, host1 is permitted to initiate connections to host2, but not vice-versa. We will implement stateful firewall rules to track egress connections from host1 to host2, allowing return packets from host2 to host1, but blocking new connections initiated by host2 to host1. This is accomplished by using a new ACL *action* option that we haven't seen before.

ct	Used to apply connection tracking to the specified flow.
----	--

We will now restrict communication between the two hosts by adding a connection tracking ACL that permits egress communication from host1 to host2, but not vice-versa. Add the following ACLs to the configuration file.

Listing 28: /etc/faucet/faucet.yaml

```
acls:
  conntrack_fw:
    # Permit all ARP traffic such that hosts can resolve one another's MACs
    - rule:
        eth_type: 0x0806 # arp
        actions:
          allow: True
    # Begin tracking ALL untracked IPv4 connections
    - rule:
        eth_type: 0x0800 # ipv4
        ct_state: 0/0x20 # match -trk (untracked)
        actions:
          # Re-inject the tracked packet into the OpenFlow pipeline, containing
          # additional connection metadata, to default table 0. The tracked packet
          # is again evaluated by Faucet ACLs in table 0. The original, untracked
          # packet is effectively dropped.
        ct:
          zone: 10 # arbitrary conntrack zone ID to match against later
          table: 0
    # Commit NEW IPv4 connections from host1 to host2
    - rule:
        eth_type: 0x0800 # ipv4
        ipv4_src: 10.0.0.1
        ipv4_dst: 10.0.1.2
        ct_state: 0x21/0x21 # match +new - packets to establish a new connection
        actions:
```

(continues on next page)

(continued from previous page)

```

# Commit the connection to the connection tracking module which will be
# stored beyond the lifetime of packet in the pipeline.
ct:
    zone: 10 # the same conntrack zone ID as above
    flags: 1 # "commit" the new connection
    table: 1 # implicit "allow" new connection packet(s) via faucet_
↳ table 1
    # Allow packets in either direction from existing connections initiated by
    # host1 only
    - rule:
        eth_type: 0x0800 # ipv4
        ct_zone: 10 # match packets associated with our conntrack zone ID
        ct_state: 0x22/0x22 # match +est - packets in an established connection
        actions:
            allow: True
    # Block all unwanted packets and new connections from host2 to host1
    - rule:
        eth_type: 0x0800 # ipv4
        ipv4_src: 10.0.1.2
        ipv4_dst: 10.0.0.1
        actions:
            allow: False

```

Be sure to also apply the new ACL to both ports in the data plane.

Listing 29: /etc/faucet/faucet.yaml

```

dps:
  sw1:
    1:
      ...
      acls_in:
      - conntrack_fw
    2:
      ...
      acls_in:
      - conntrack_fw

```

Reload Faucet to apply the new configuration.

```
sudo systemctl reload faucet
```

The new conntrack related ACLs should have been added:

```
ovs-ofctl dump-flows br0 -O OpenFlow13 | grep =ct
```

We can debug how OVS interfaces with the conntrack module to deal with the tracked packet(s).

```
ovs-appctl ofproto/trace br0 in_port=1,tcp,nw_src=10.0.0.1,nw_dst=10.0.1.2
```

Our ping from host1 to host2 should continue to work, establishing an entry in the connection tracker.

```
as_ns host1 ping 10.0.1.2
```

An entry for the ping should now be visible in the kernel's connection tracking table.

```
sudo conntrack -L | grep 10.0.1.2
```

However, ping and any other unrelated traffic from host2 to host1 is now denied.

```
ovs-appctl ofproto/trace br0 in_port=1,tcp,nw_src=10.0.1.2,nw_dst=10.0.0.1  
as_ns host2 ping 10.0.0.1
```

More-complex ACL rules can be created to build out an entire stateful firewall. It is important to remember that ALL packets initially have a *ct_state* of -trk (untracked), and must be sent to the connection tracking module via a *ct* action. Packets then pass through the ACL(s) again, whereupon the *ct_state* and other fields can be matched against to achieve the desired behavior. In order to track (i.e. “remember”) a connection, a packet from the connection must first be “committed” to the conntrack module. Generally, it is best to do this for “new” egress connections in the permitted direction, which allows subsequent ACLs to match against packets for established (“est”) connections in either direction. The [Connection Tracking Fields section](#) of the *ovs-fields(7)* man page is a helpful reference in understanding what the various connection states mean.

Network Address Translation (NAT)

The connection tracking integration also allows changing the source/destination IP and/or ports of a given connection. This can be used to implement one-to-one or many-to-one sNAT (source-NAT) behavior seen in traditional NAT gateways.

We can extend our Stateful Firewall Rules ACL example to sNAT connections from host1 to host2. We will NAT host1’s IP to the Faucet VIP on its network, which is its gateway (default route). Connections observed from host2 will appear to be initiated by the Faucet VIP. This is accomplished by extending the *ct* action to include a *nat* configuration field.

NAT configuration key/values are based on the related [Ryu configuration options](#).

The [Firewalling Actions section](#) of the *ovs-actions(7)* man page is a helpful reference to understand how the NAT action behaves.

Now we augment the ACLs from the previous example with an additional *nat* option, replacing them with the following:

Listing 30: /etc/faucet/faucet.yaml

```
acls:  
  conntrack_fw:  
    - rule:  
        eth_type: 0x0806 # arp  
        actions:  
          allow: True  
    - rule:  
        eth_type: 0x0800 # ipv4  
        ct_state: 0/0x20 # match -trk (untracked)  
        actions:  
          ct:  
            zone: 10  
            table: 0  
    - rule:  
        eth_type: 0x0800 # ipv4  
        ipv4_src: 10.0.0.1
```

(continues on next page)

(continued from previous page)

```

ipv4_dst: 10.0.1.2
ct_state: 0x21/0x21 # match +new - packets to establish a new connection
actions:
  ct:
    zone: 10
    flags: 1 # "commit" the new connection
    table: 1
    # sNAT the connection to the faucet VIP
  nat:
    flags: 1
    range_ipv4_min: 10.0.0.254
    range_ipv4_max: 10.0.0.254
  - rule:
    eth_type: 0x0800 # ipv4
    ct_zone: 10
    ct_state: 0x22/0x22 # match +est - packets in an established connection
    actions:
      ct:
        zone: 10
        flags: 1 # NAT must include "commit" - this is a NO-OP for existing_
→ connections
        table: 1
        # sNAT the packets in an existing connection appropriately according_
→ to their direction
      nat:
        flags: 1
  - rule:
    eth_type: 0x0800 # ipv4
    ipv4_src: 10.0.1.2
    ipv4_dst: 10.0.0.1
    actions:
      allow: False

```

Reload Faucet to apply the new configuration.

```
sudo systemctl reload faucet
```

We can now see how OVS + conntrack will NAT the packets:

```
ovs-appctl ofproto/trace br0 in_port=1,tcp,nw_src=10.0.0.1,nw_dst=10.0.1.2
```

Our ping from host1 to host2 should continue to work, establishing an entry in the connection tracker. This time, however, host1's source IP of 10.0.0.1 gets NATed to the Faucet VIP of 10.0.0.254.

```
as_ns host1 ping 10.0.1.2
tcpdump -n -e -ttt -i veth-host2 host 10.0.0.254
sudo conntrack -L | grep 10.0.0.254
```

1.2.6 Stacking tutorial

Faucet has two primary modes of operation: independent switching and distributed switching.

In independent mode each decision about the network (learning, routing, etc) is made in the context of each individual switch.

This tutorial will cover Faucet's distributed switching (a.k.a stacking) mode. Stacking allows decisions such as switching and routing to be made in the context of the whole network. This has great benefits for building resilient network topologies that can automatically recover from switch and port/cable failures. In this tutorial we will cover some of the new features and demonstrate how they work.

Prerequisites

- Knowledge of the VLAN and routing tutorial topics ([VLAN tutorial](#), [Routing tutorial](#))
- Install Faucet - [Package installation](#) steps 1 & 2
- Install Open vSwitch - [Connect your first datapath](#) steps 1 & 2
- Useful Bash Functions - Copy and paste the following definitions into your bash terminal, or to make them persistent between sessions add them to the bottom of your .bashrc and run ‘source .bashrc’.

```
# Create network namespace
create_ns () {
    NAME=$1
    IP=$2
    NETNS=faucet-${NAME}
    sudo ip netns add ${NETNS}
    sudo ip link add dev veth-$NAME type veth peer name veth0 netns $NETNS
    sudo ip link set dev veth-$NAME up
    as_ns ${NAME} ip link set dev lo up
    [ -n "${IP}" ] && as_ns ${NAME} ip addr add dev veth0 ${IP}
    as_ns ${NAME} ip link set dev veth0 up
}
```

```
# Run command inside network namespace
as_ns () {
    NAME=$1
    NETNS=faucet-${NAME}
    shift
    sudo ip netns exec ${NETNS} @@
}
```

```
# Add inter-switch link between two switches
inter_switch_link () {
    SW_A_NAME=$(echo $1 | cut -d ':' -f 1)
    SW_A_PORT=$(echo $1 | cut -d ':' -f 2)
    SW_B_NAME=$(echo $2 | cut -d ':' -f 1)
    SW_B_PORT=$(echo $2 | cut -d ':' -f 2)
    VETH_A=l-${SW_A_NAME}_${SW_A_PORT}-${SW_B_NAME}_${SW_B_PORT}
    VETH_B=l-${SW_B_NAME}_${SW_B_PORT}-${SW_A_NAME}_${SW_A_PORT}
    VETH_A=${VETH_A}:0:15
    VETH_B=${VETH_B}:0:15
}
```

(continues on next page)

(continued from previous page)

```

sudo ip link add dev ${VETH_A} type veth peer name ${VETH_B}
sudo ip link set dev ${VETH_A} up
sudo ip link set dev ${VETH_B} up
sudo ovs-vsctl add-port ${SW_A_NAME} ${VETH_A} \
    -- set interface ${VETH_A} ofport_request=${SW_A_PORT}
sudo ovs-vsctl add-port ${SW_B_NAME} ${VETH_B} \
    -- set interface ${VETH_B} ofport_request=${SW_B_PORT}
}

```

```

# Clean up namespaces, bridges and processes created during faucet tutorial
cleanup () {
    for NETNS in $(sudo ip netns list | grep "faucet-" | awk '{print $1}');
    do
        [ -n "${NETNS}" ] || continue
        NAME=${NETNS#faucet-}
        if [ -f "/run/dhclient-${NAME}.pid" ]; then
            # Stop dhclient
            sudo pkill -F "/run/dhclient-${NAME}.pid"
        fi
        if [ -f "/run/iperf3-${NAME}.pid" ]; then
            # Stop iperf3
            sudo pkill -F "/run/iperf3-${NAME}.pid"
        fi
        if [ -f "/run/bird-${NAME}.pid" ]; then
            # Stop bird
            sudo pkill -F "/run/bird-${NAME}.pid"
        fi
        # Remove netns and veth pair
        sudo ip link delete veth-${NAME}
        sudo ip netns delete ${NETNS}
    done
    for isl in $(ip -o link show | awk -F': ' '{print $2}' | grep -oE "^\-br[0-9](_[0-9])?-br[0-9](_[0-9])?"); do
        # Delete inter-switch links
        sudo ip link delete dev $isl 2>/dev/null || true
    done
    for DNSMASQ in /run/dnsmasq-vlan*.pid; do
        [ -e "${DNSMASQ}" ] || continue
        # Stop dnsmasq
        sudo pkill -F "${DNSMASQ}"
    done
    # Remove faucet dataplane connection
    sudo ip link delete veth-faucet 2>/dev/null || true
    # Remove openvswitch bridges
    sudo ovs-vsctl --if-exists del-br br0
    sudo ovs-vsctl --if-exists del-br br1
    sudo ovs-vsctl --if-exists del-br br2
    sudo ovs-vsctl --if-exists del-br br3
}

```

- Run the cleanup script to remove old namespaces and switches:

```
cleanup
```

Basic stacking

We can start by considering two switches with one host on each switch on the same VLAN.

Let's define a simple base faucet.yaml to get started:

Listing 31: /etc/faucet/faucet.yaml

```
vlans:
  hosts:
    vid: 100
dps:
  br0:
    dp_id: 0x1
    hardware: "Open vSwitch"
    interfaces:
      1:
        description: "host1 network namespace"
        native_vlan: hosts
  br1:
    dp_id: 0x2
    hardware: "Open vSwitch"
    interfaces:
      1:
        description: "host2 network namespace"
        native_vlan: hosts
```

Now lets signal faucet to reload the configuration file.

```
sudo systemctl reload faucet
```

We need to create our two hosts, host1 and host2.

```
create_ns host1 10.0.1.1/24
create_ns host2 10.0.1.2/24
```

To setup multiple switches in Open vSwitch we can define two bridges with different datapath-ids and names. We'll be using br0 and br1.

```
sudo ovs-vsctl add-br br0 \
-- set bridge br0 other-config:datapath-id=00000000000000000001 \
-- set bridge br0 other-config:disable-in-band=true \
-- set bridge br0 fail_mode=secure \
-- add-port br0 veth-host1 -- set interface veth-host1 ofport_request=1 \
-- set-controller br0 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654

sudo ovs-vsctl add-br br1 \
-- set bridge br1 other-config:datapath-id=00000000000000000002 \
-- set bridge br1 other-config:disable-in-band=true \
-- set bridge br1 fail_mode=secure \
```

(continues on next page)

(continued from previous page)

```
-- add-port br1 veth-host2 -- set interface veth-host2 ofport_request=1 \
-- set-controller br1 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654
```

Since the switches are not connected it will be impossible to ping between the two hosts.

```
as_ns host1 ping 10.0.1.2
```

To connect the switches we can use the Faucet switch stacking feature. First, we need to define a root switch for our stack by setting a `stack priority` value for br0, the datapath with the lowest priority will be root. Second, we need to add stack interfaces connecting each datapath, we do this by defining the `stack` parameter on an interface. When defining a stack interface we say which datapath (dp) and port the other end of the cable is connected to.

Replace your base faucet.yaml from earlier with this version with stacking enabled:

Listing 32: /etc/faucet/faucet.yaml

```
vlangs:
  hosts:
    vid: 100
dps:
  br0:
    dp_id: 0x1
    hardware: "Open vSwitch"
    stack:
      priority: 1
    interfaces:
      1:
        description: "host1 network namespace"
        native_vlan: hosts
      2:
        description: "br0 stack link to br1"
        stack:
          dp: br1
          port: 2
  br1:
    dp_id: 0x2
    hardware: "Open vSwitch"
    interfaces:
      1:
        description: "host2 network namespace"
        native_vlan: hosts
      2:
        description: "br1 stack link to br0"
        stack:
          dp: br0
          port: 2
```

To connect two Open vSwitch bridges we can use a veth interface pair. We will use the `inter_switch_link` function we defined earlier to connect br0 port 2 to br1 port 2:

```
inter_switch_link br0:2 br1:2
```

Let's reload Faucet and see what happens.

```
sudo systemctl reload faucet
```

Faucet will start sending out LLDP beacons to connect up the stack ports. We can see this happening in the log file when the switches report that port 2 (the stack port) is UP.

Listing 33: /var/log/faucet/faucet.log

```
DPID 2 (0x2) br1 LLDP on 0e:00:00:00:00:01, Port 2 from 0e:00:00:00:00:01 (remote DPID 1
 ↵(0x1), port 2) state 2
DPID 2 (0x2) br1 Stack Port 2 INIT
DPID 1 (0x1) br0 LLDP on 0e:00:00:00:00:01, Port 2 from 0e:00:00:00:00:01 (remote DPID 2
 ↵(0x2), port 2) state 2
DPID 1 (0x1) br0 Stack Port 2 INIT
DPID 2 (0x2) br1 LLDP on 0e:00:00:00:00:01, Port 2 from 0e:00:00:00:00:01 (remote DPID 1
 ↵(0x1), port 2) state 1
DPID 2 (0x2) br1 Stack Port 2 UP
DPID 2 (0x2) br1 1 stack ports changed state
DPID 1 (0x1) br0 LLDP on 0e:00:00:00:00:01, Port 2 from 0e:00:00:00:00:01 (remote DPID 2
 ↵(0x2), port 2) state 1
DPID 1 (0x1) br0 Stack Port 2 UP
DPID 1 (0x1) br0 1 stack ports changed state
DPID 2 (0x2) br1 LLDP on 0e:00:00:00:00:01, Port 2 from 0e:00:00:00:00:01 (remote DPID 1
 ↵(0x1), port 2) state 3
DPID 1 (0x1) br0 LLDP on 0e:00:00:00:00:01, Port 2 from 0e:00:00:00:00:01 (remote DPID 2
 ↵(0x2), port 2) state 3
```

Note: If we were to accidentally cable our switches incorrectly faucet would report the incorrect cabling in the log file.

Now that the two switches are connected and our stack is up, we can ping between the two hosts.

```
as_ns host1 ping 10.0.1.2
```

Inter-VLAN routing with stacking

For this task we will see that inter-VLAN routing can work between hosts on different switches.

First run the cleanup.

```
cleanup
```

We can accomplish inter-VLAN routing between different switches by using the stacking feature. To do this we will be combining the methods from the [Basic stacking](#) and the [Routing between VLANs](#) tutorials.

Here is a full faucet.yaml you can copy and paste that sets up our stack topology and enables all the features we need.

Listing 34: /etc/faucet/faucet.yaml

```
vlan:
  hosts:
    vid: 100
```

(continues on next page)

(continued from previous page)

```

faucet_vips: ["10.0.1.254/24"]
faucet_mac: "00:00:00:00:00:11"
servers:
    vid: 200
    faucet_vips: ["10.0.2.254/24"]
    faucet_mac: "00:00:00:00:00:22"
routers:
    router-1:
        vlans: [hosts, servers]
dps:
    br0:
        dp_id: 0x1
        hardware: "Open vSwitch"
        stack:
            priority: 1
        interfaces:
            1:
                description: "host1 network namespace"
                native_vlan: hosts
            2:
                description: "br0 stack link to br1"
                stack:
                    dp: br1
                    port: 2
            3:
                description: "server1 network namespace"
                native_vlan: servers

    br1:
        dp_id: 0x2
        hardware: "Open vSwitch"
        interfaces:
            1:
                description: "host2 network namespace"
                native_vlan: hosts
            2:
                description: "br1 stack link to br0"
                stack:
                    dp: br0
                    port: 2
            3:
                description: "server2 network namespace"
                native_vlan: servers

```

Reload faucet to enable inter-VLAN routing.

```
sudo systemctl reload faucet
```

As we have learnt previously. First, set up the hosts:

```
create_ns host1 10.0.1.1/24
create_ns host2 10.0.1.2/24
```

(continues on next page)

(continued from previous page)

```
create_ns server1 10.0.2.1/24
create_ns server2 10.0.2.2/24
```

Now we can set-up the default routes for each host.

```
as_ns host1 ip route add default via 10.0.1.254
as_ns host2 ip route add default via 10.0.1.254
as_ns server1 ip route add default via 10.0.2.254
as_ns server2 ip route add default via 10.0.2.254
```

Next, we can create the bridges.

```
sudo ovs-vsctl add-br br0 \
-- set bridge br0 other-config:datapath-id=000000000000000000000001 \
-- set bridge br0 other-config:disable-in-band=true \
-- set bridge br0 fail_mode=secure \
-- add-port br0 veth-host1 -- set interface veth-host1 ofport_request=1 \
-- add-port br0 veth-server1 -- set interface veth-server1 ofport_request=3 \
-- set-controller br0 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654

sudo ovs-vsctl add-br br1 \
-- set bridge br1 other-config:datapath-id=000000000000000000000002 \
-- set bridge br1 other-config:disable-in-band=true \
-- set bridge br1 fail_mode=secure \
-- add-port br1 veth-host2 -- set interface veth-host2 ofport_request=1 \
-- add-port br1 veth-server2 -- set interface veth-server2 ofport_request=3 \
-- set-controller br1 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654
```

And finally, we can create the inter-switch links to connect the bridges to each other.

```
inter_switch_link br0:2 br1:2
```

Now it should be possible to ping between any combination of hosts on any VLAN after the LLDP has configured the stack ports as UP. For example host1 can ping to server1 on the same switch as well as server2 on the other switch via the use of the stack link.

```
as_ns host1 ping 10.0.2.1
as_ns host1 ping 10.0.2.2
```

Tunneling over a stack

Faucet has a feature that allows us to tunnel packets from one datapath to another without having to think about the underlying network topology. In this example we have three switches and two hosts. We will create a tunnel that runs over top of this topology connecting host1 and host2 together.

First run the cleanup.

```
cleanup
```

Now let's define our faucet.yaml that will make this network work. The configuration file below defines our faucet stack topology and ports for our host1 and host2. An important thing to note is that we define our two hosts on separate VLANs so they should not be able to communicate.

The other thing to notice is the two ACLs we define, `tunnel-to-host1` and `tunnel-to-host2`. At the moment these ACLs match all traffic (though we could easily add a match here to only tunnel a subset of traffic, see [ACL tutorial](#) for more details). Each tunnel sets the destination datapath and port for traffic matching the ACL, we currently support one type of tunnel, VLAN, and must reserve a tunnel VLAN here using the `tunnel_id` parameter (in future we could support different types of tunnels).

The two ACLs are then applied to the ports host1 and host2 are connected to.

Listing 35: /etc/faucet/faucet.yaml

```
acls:
  tunnel-to-host1:
    - rule:
        actions:
          output:
            tunnel:
              type: 'vlan'
              tunnel_id: 901
              dp: br0
              port: 1
  tunnel-to-host2:
    - rule:
        actions:
          output:
            tunnel:
              type: 'vlan'
              tunnel_id: 902
              dp: br2
              port: 1
vlans:
  host1:
    vid: 101
  host2:
    vid: 102
dps:
  br0:
    dp_id: 0x1
    hardware: "Open vSwitch"
    stack:
      priority: 1
    interfaces:
      1:
        description: "host1 network namespace"
        native_vlan: host1
        acl_in: tunnel-to-host2
      2:
        description: "br0 stack link to br1"
        stack:
          dp: br1
          port: 1
  br1:
    dp_id: 0x2
    hardware: "Open vSwitch"
    interfaces:
```

(continues on next page)

(continued from previous page)

```

1:
  description: "br1 stack link to br0"
  stack:
    dp: br0
    port: 2
2:
  description: "br1 stack link to br2"
  stack:
    dp: br2
    port: 2
br2:
  dp_id: 0x3
  hardware: "Open vSwitch"
  interfaces:
    1:
      description: "host2 network namespace"
      native_vlan: host2
      acl_in: tunnel-to-host1
    2:
      description: "br2 stack link to br1"
      stack:
        dp: br1
        port: 2

```

When we have updated our configuration to match above, signal to faucet to reload the configuration file.

```
sudo systemctl reload faucet
```

Then we can set up the hosts:

```
create_ns host1 10.0.1.1/24
create_ns host2 10.0.1.2/24
```

Next, we can create the bridges.

```

sudo ovs-vsctl add-br br0 \
-- set bridge br0 other-config:datapath-id=00000000000000000001 \
-- set bridge br0 other-config:disable-in-band=true \
-- set bridge br0 fail_mode=secure \
-- add-port br0 veth-host1 -- set interface veth-host1 ofport_request=1 \
-- set-controller br0 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654

sudo ovs-vsctl add-br br1 \
-- set bridge br1 other-config:datapath-id=00000000000000000002 \
-- set bridge br1 other-config:disable-in-band=true \
-- set bridge br1 fail_mode=secure \
-- set-controller br1 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654

sudo ovs-vsctl add-br br2 \
-- set bridge br2 other-config:datapath-id=00000000000000000003 \
-- set bridge br2 other-config:disable-in-band=true \
-- set bridge br2 fail_mode=secure \
-- add-port br2 veth-host2 -- set interface veth-host2 ofport_request=1 \

```

(continues on next page)

(continued from previous page)

```
-- set-controller br2 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654
```

We also need to define inter-switch links that connect br0 and b1 as well as br1 and br2.

```
inter_switch_link br0:2 br1:1
inter_switch_link br1:2 br2:2
```

We should now be able to ping between host1 and host2 despite them being on different VLANs and datapaths because of the tunnel.

```
as_ns host1 ping 10.0.1.2
```

The reason the hosts can now communicate is that faucet is using the stack topology to find a path between the two hosts and automatically stitching up a tunnel. If we had a more complicated topology with multiple valid paths between the hosts, faucet will pick one and if the topology changes faucet will ensure the tunnel still goes over a valid path.

If we were to disable the ACLs on the port we would notice the hosts would no longer be able to ping.

Redundant stack links

Faucet is able to handle stack topologies with loops in them. This is because when faucet brings up a stack topology for the first time (or when it detects the network topology has changed), it has enough knowledge of the network to calculate a spanning tree for the network without the need for running a spanning tree protocol. Faucet uses this spanning tree to ensure broadcast packets aren't looped around the network.

This feature enables us to build fault-tolerant network architectures that can survive switch/port failures, a simple example is a ring topology:

To build this network, let's first cleanup from previous exercises.

```
cleanup
```

We should be quite familiar with configuring faucet for stacks now, let's define a faucet.yaml that matches our ring topology.

Listing 36: /etc/faucet/faucet.yaml

```
vlans:
  hosts:
    vid: 100
dps:
  br0:
    dp_id: 0x1
    hardware: "Open vSwitch"
    stack:
      priority: 1
    interfaces:
      1:
        description: "host1 network namespace"
        native_vlan: hosts
      2:
        description: "br0 stack link to br1"
```

(continues on next page)

(continued from previous page)

```

stack:
  dp: br1
  port: 2
3:
  description: "br0 stack link to br2"
  stack:
    dp: br2
    port: 2
br1:
  dp_id: 0x2
  hardware: "Open vSwitch"
  interfaces:
    1:
      description: "host2 network namespace"
      native_vlan: hosts
    2:
      description: "br1 stack link to br0"
      stack:
        dp: br0
        port: 2
    3:
      description: "br1 stack link to br2"
      stack:
        dp: br2
        port: 3
br2:
  dp_id: 0x3
  hardware: "Open vSwitch"
  interfaces:
    1:
      description: "host3 network namespace"
      native_vlan: hosts
    2:
      description: "br2 stack link to br0"
      stack:
        dp: br0
        port: 3
    3:
      description: "br2 stack link to br1"
      stack:
        dp: br1
        port: 3

```

Reload faucet to enable the ring topology.

```
sudo systemctl reload faucet
```

We will define three hosts, one on each switch.

```
create_ns host1 10.0.1.1/24
create_ns host2 10.0.1.2/24
create_ns host3 10.0.1.3/24
```

Now let's define the three switches.

```
sudo ovs-vsctl add-br br0 \
-- set bridge br0 other-config:datapath-id=00000000000000000001 \
-- set bridge br0 other-config:disable-in-band=true \
-- set bridge br0 fail_mode=secure \
-- add-port br0 veth-host1 -- set interface veth-host1 ofport_request=1 \
-- set-controller br0 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654

sudo ovs-vsctl add-br br1 \
-- set bridge br1 other-config:datapath-id=00000000000000000002 \
-- set bridge br1 other-config:disable-in-band=true \
-- set bridge br1 fail_mode=secure \
-- add-port br1 veth-host2 -- set interface veth-host2 ofport_request=1 \
-- set-controller br1 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654

sudo ovs-vsctl add-br br2 \
-- set bridge br2 other-config:datapath-id=00000000000000000003 \
-- set bridge br2 other-config:disable-in-band=true \
-- set bridge br2 fail_mode=secure \
-- add-port br2 veth-host3 -- set interface veth-host3 ofport_request=1 \
-- set-controller br2 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654
```

We also need to create the inter-switch links forming our ring network.

```
inter_switch_link br0:2 br1:2
inter_switch_link br0:3 br2:2
inter_switch_link br1:3 br2:3
```

Once the network is up we should be able to ping from all hosts to all other hosts.

```
as_ns host1 ping 10.0.1.2
as_ns host1 ping 10.0.1.3
```

Now let us intentionally introduce a fault into the network, our network should be able to survive a single cable failure and still have all devices reachable.

To test this we will manually disable the link between br0 and br2.

```
sudo ip link set down 1-br0_3-br2_2
sudo ip link set down 1-br2_2-br0_3
```

Which will force traffic between br0 and br2 to now go via br1, we can test this by ensuring host1 can still ping host3.

```
as_ns host1 ping 10.0.1.3
```

Multi-root stack

The previous exercise introduced the ability to survive cable failures, but you might have noticed in each exercise so far we have defined only a single root switch. If we were to lose this root switch the network would no longer function.

In this exercise we will introduce multi-root stacked networks which give us the ability to tolerate switch failures.

This example topology will allow us to survive any single cable failure or either of br0 or br1 failing.

Before we begin, let's do another cleanup.

```
cleanup
```

Our faucet.yaml will look familiar here, except for one difference, we now have two switches defined as **stack priority 1**. This signals to faucet that it has two equal priority root candidates it can use when selecting a root for the network.

Listing 37: /etc/faucet/faucet.yaml

```
vlangs:
  hosts:
    vid: 100
dps:
  br0:
    dp_id: 0x1
    hardware: "Open vSwitch"
    stack:
      priority: 1
    interfaces:
      1:
        description: "br0 stack link to br2"
        stack:
          dp: br2
          port: 2
      2:
        description: "br0 stack link to br3"
        stack:
          dp: br3
          port: 3
  br1:
    dp_id: 0x2
    hardware: "Open vSwitch"
    stack:
      priority: 1
    interfaces:
      1:
        description: "br1 stack link to br3"
        stack:
          dp: br3
          port: 2
      2:
        description: "br1 stack link to br2"
        stack:
          dp: br2
```

(continues on next page)

(continued from previous page)

```

port: 3
br2:
  dp_id: 0x3
  hardware: "Open vSwitch"
  interfaces:
    1:
      description: "host1 network namespace"
      native_vlan: hosts
    2:
      description: "br2 stack link to br0"
      stack:
        dp: br0
        port: 1
    3:
      description: "br2 stack link to br1"
      stack:
        dp: br1
        port: 2
br3:
  dp_id: 0x4
  hardware: "Open vSwitch"
  interfaces:
    1:
      description: "host2 network namespace"
      native_vlan: hosts
    2:
      description: "br3 stack link to br1"
      stack:
        dp: br1
        port: 1
    3:
      description: "br3 stack link to br0"
      stack:
        dp: br0
        port: 2

```

When we have this new faucet.yaml loaded we will do a full restart this time instead of reloading to force a root election.

```
sudo systemctl restart faucet
```

We will create some hosts to let us test the failure scenarios of this topology.

```
create_ns host1 10.0.1.1/24
create_ns host2 10.0.1.2/24
```

We also need to define our four switches.

```
sudo ovs-vsctl add-br br0 \
-- set bridge br0 other-config:datapath-id=0000000000000001 \
-- set bridge br0 other-config:disable-in-band=true \
-- set bridge br0 fail_mode=secure \
-- set-controller br0 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654
```

(continues on next page)

(continued from previous page)

```

sudo ovs-vsctl add-br br1 \
-- set bridge br1 other-config:datapath-id=00000000000000000002 \
-- set bridge br1 other-config:disable-in-band=true \
-- set bridge br1 fail_mode=secure \
-- set-controller br1 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654

sudo ovs-vsctl add-br br2 \
-- set bridge br2 other-config:datapath-id=00000000000000000003 \
-- set bridge br2 other-config:disable-in-band=true \
-- set bridge br2 fail_mode=secure \
-- add-port br2 veth-host1 -- set interface veth-host1 ofport_request=1 \
-- set-controller br2 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654

sudo ovs-vsctl add-br br3 \
-- set bridge br3 other-config:datapath-id=00000000000000000004 \
-- set bridge br3 other-config:disable-in-band=true \
-- set bridge br3 fail_mode=secure \
-- add-port br3 veth-host2 -- set interface veth-host2 ofport_request=1 \
-- set-controller br3 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654

```

We need to fully mesh br0, br1, br2 and br3 to match our topology diagram above.

```

# Inter-switch links for br0
inter_switch_link br0:1 br2:2
inter_switch_link br0:2 br3:3

# Inter-switch links for br1
inter_switch_link br1:1 br3:2
inter_switch_link br1:2 br2:3

```

When everything is setup we should be able to ping between host1 and host2.

```
as_ns host1 ping 10.0.1.2
```

Now let's inspect the log file to find out which switch is currently our root.

```
$ grep -ai "stack root changed" /var/log/faucet/faucet.log | tail -n 1
Oct 08 04:19:24 faucet INFO      stack root changed from None to br0
```

Since br0 is the switch which is currently root, let's delete it to simulate a switch failure.

```
sudo ovs-vsctl del-br br0
```

If we look into the log file we should see faucet detects the switch is down and br1 takes over as the new root.

Listing 38: /var/log/faucet/faucet.yaml

```

Oct 08 04:22:52 faucet.valve WARNING DPID 1 (0x1) br0 datapath down
Oct 08 04:23:03 faucet.valve INFO     DPID 1 (0x1) br0 LLDP for Port 1 inactive after 17s
Oct 08 04:23:03 faucet.valve INFO     DPID 1 (0x1) br0 LLDP for Port 2 inactive after 17s
Oct 08 04:23:03 faucet.valve ERROR    DPID 1 (0x1) br0 Stack Port 1 DOWN, too many (3) ↴
↪ packets lost, last received 17s ago
Oct 08 04:23:03 faucet.valve INFO     DPID 2 (0x2) br1 shortest path to root is via

```

(continues on next page)

(continued from previous page)

```

→{Port 1}
Oct 08 04:23:03 faucet.valve INFO      DPID 4 (0x4) br3 shortest path to root is via
→{Port 3}
Oct 08 04:23:03 faucet.valve INFO      DPID 3 (0x3) br2 shortest path to root is via
→{Port 2}
Oct 08 04:23:03 faucet.valve ERROR     DPID 1 (0x1) br0 Stack Port 2 DOWN, too many (3) ↵
→packets lost, last received 17s ago
Oct 08 04:23:03 faucet.valve INFO      DPID 2 (0x2) br1 shortest path to root is via
→{Port 1}
Oct 08 04:23:03 faucet.valve INFO      DPID 4 (0x4) br3 shortest path to root is via
→{Port 2}
Oct 08 04:23:03 faucet.valve INFO      DPID 3 (0x3) br2 shortest path to root is via
→{Port 3}
Oct 08 04:23:03 faucet.valve INFO      DPID 1 (0x1) br0 2 stack ports changed state
Oct 08 04:23:03 faucet.valve INFO      DPID 3 (0x3) br2 LLDP for Port 2 inactive after 17s
Oct 08 04:23:03 faucet.valve ERROR     DPID 3 (0x3) br2 Stack Port 2 DOWN, too many (3) ↵
→packets lost, last received 17s ago
Oct 08 04:23:03 faucet.valve INFO      DPID 2 (0x2) br1 shortest path to root is via
→{Port 1}
Oct 08 04:23:03 faucet.valve INFO      DPID 4 (0x4) br3 shortest path to root is via
→{Port 2}
Oct 08 04:23:03 faucet.valve INFO      DPID 3 (0x3) br2 shortest path to root is via
→{Port 3}
Oct 08 04:23:03 faucet.valve INFO      DPID 3 (0x3) br2 1 stack ports changed state
Oct 08 04:23:03 faucet.valve INFO      DPID 4 (0x4) br3 LLDP for Port 3 inactive after 17s
Oct 08 04:23:03 faucet.valve ERROR     DPID 4 (0x4) br3 Stack Port 3 DOWN, too many (3) ↵
→packets lost, last received 17s ago
Oct 08 04:23:03 faucet.valve INFO      DPID 2 (0x2) br1 shortest path to root is via
→{Port 1}
Oct 08 04:23:03 faucet.valve INFO      DPID 4 (0x4) br3 shortest path to root is via
→{Port 2}
Oct 08 04:23:03 faucet.valve INFO      DPID 3 (0x3) br2 shortest path to root is via
→{Port 3}
Oct 08 04:23:03 faucet.valve INFO      DPID 4 (0x4) br3 1 stack ports changed state
Oct 08 04:23:15 faucet INFO      stack root changed from br0 to br1
Oct 08 04:23:15 faucet INFO      root now br1 (all candidates ('br0', 'br1'), healthy [ ↵
→'br1'])

```

We should also still be able to ping between host1 and host2 after the stack has recalculated.

```
as_ns host1 ping 10.0.1.2
```

1.2.7 NFV services tutorial

This tutorial will cover using faucet with Network Function Virtualisation (NFV) style services.

NFV services that will be demonstrated in this tutorial are:

- DHCP/DNS server
- Zeek (formerly known as Bro) Intrusion Detection System (IDS)

This tutorial demonstrates how the previous topics in this tutorial series can be combined to run real world services on our network.

Prerequisites

- A good understanding of the previous tutorial topics ([ACL tutorial](#), [VLAN tutorial](#), [Routing tutorial](#))
- Install Faucet - [Package installation](#) steps 1 & 2
- Install Open vSwitch - [Connect your first datapath](#) steps 1 & 2
- Useful Bash Functions - Copy and paste the following definitions into your bash terminal, or to make them persistent between sessions add them to the bottom of your .bashrc and run ‘source .bashrc’.

```
# Run command inside network namespace
as_ns () {
    NAME=$1
    NETNS=faucet-${NAME}
    shift
    sudo ip netns exec ${NETNS} @@
}
```

```
# Create network namespace
create_ns () {
    NAME=$1
    IP=$2
    NETNS=faucet-${NAME}
    sudo ip netns add ${NETNS}
    sudo ip link add dev veth-${NAME} type veth peer name veth0 netns $→${NETNS}
    sudo ip link set dev veth-${NAME} up
    as_ns ${NAME} ip link set dev lo up
    [ -n "${IP}" ] && as_ns ${NAME} ip addr add dev veth0 ${IP}
    as_ns ${NAME} ip link set dev veth0 up
}
```

```
# Clean up namespaces, bridges and processes created during faucet tutorial
cleanup () {
    for NETNS in $(sudo ip netns list | grep "faucet-" | awk '{print $1}'); do
        [ -n "${NETNS}" ] || continue
        NAME=${NETNS#faucet-}
        if [ -f "/run/dhclient-${NAME}.pid" ]; then
            # Stop dhclient
            sudo pkill -F "/run/dhclient-${NAME}.pid"
        fi
    done
}
```

(continues on next page)

(continued from previous page)

```

if [ -f "/run/iperf3-${NAME}.pid" ]; then
    # Stop iperf3
    sudo pkill -F "/run/iperf3-${NAME}.pid"
fi
if [ -f "/run/bird-${NAME}.pid" ]; then
    # Stop bird
    sudo pkill -F "/run/bird-${NAME}.pid"
fi
# Remove netns and veth pair
sudo ip link delete veth-${NAME}
sudo ip netns delete ${NETNS}
done
for isl in $(ip -o link show | awk -F': ' '{print $2}' | grep -oE "^\-br[0-9](_[0-9]*?)?-br[0-9](_[0-9]*?)?"); do
    # Delete inter-switch links
    sudo ip link delete dev $isl 2>/dev/null || true
done
for DNSMASQ in /run/dnsmasq-vlan*.pid; do
    [ -e "${DNSMASQ}" ] || continue
    # Stop dnsmasq
    sudo pkill -F "${DNSMASQ}"
done
# Remove faucet dataplane connection
sudo ip link delete veth-faucet 2>/dev/null || true
# Remove openvswitch bridges
sudo ovs-vsctl --if-exists del-br br0
sudo ovs-vsctl --if-exists del-br br1
sudo ovs-vsctl --if-exists del-br br2
sudo ovs-vsctl --if-exists del-br br3
}

```

```

# Add tagged VLAN interface to network namespace
add_tagged_interface () {
    NAME=$1
    VLAN=$2
    IP=$3
    NETNS=faucet-${NAME}
    as_ns ${NAME} ip link add link veth0 name veth0.${VLAN} type vlan id $VLAN
    [ -n "${IP}" ] && as_ns ${NAME} ip addr add dev veth0.${VLAN} ${IP}
    as_ns ${NAME} ip link set dev veth0.${VLAN} up
    as_ns ${NAME} ip addr flush dev veth0
}

```

- Run the cleanup script to remove old namespaces and switches:

```
cleanup
```

Network setup

The network will be divided into three VLANs, two of which are client VLANs (200 & 300), with two clients in each and a DHCP/DNS server. There is also a separate VLAN 100 for the Zeek server which we will mirror traffic two from the other two VLANs.

To start, let's create our hosts and dnsmasq namespaces.

```
# DHCP/DNS server
create_ns dnsmasq 0.0.0.0
add_tagged_interface dnsmasq 200 192.168.2.1/24 # to serve VLAN 200
add_tagged_interface dnsmasq 300 192.168.3.1/24 # to serve VLAN 300

# VLAN 200 hosts
create_ns host1 0.0.0.0
create_ns host2 0.0.0.0
# VLAN 300 hosts
create_ns host3 0.0.0.0
create_ns host4 0.0.0.0
```

Then create an Open vSwitch bridge and connect all hosts to it.

```
sudo ovs-vsctl add-br br0 \
-- set bridge br0 other-config:datapath-id=0000000000000001 \
-- set bridge br0 other-config:disable-in-band=true \
-- set bridge br0 fail_mode=secure \
-- add-port br0 veth-host1 -- set interface veth-host1 ofport_request=1 \
-- add-port br0 veth-host2 -- set interface veth-host2 ofport_request=2 \
-- add-port br0 veth-host3 -- set interface veth-host3 ofport_request=3 \
-- add-port br0 veth-host4 -- set interface veth-host4 ofport_request=4 \
-- add-port br0 veth-dnsmasq -- set interface veth-dnsmasq ofport_request=5 \
-- set-controller br0 tcp:127.0.0.1:6653 tcp:127.0.0.1:6654
```

Dnsmasq setup

We will use `dnsmasq` to assign IP addresses to our host namespaces via the DHCP protocol. It will also serve as our DNS resolver for the hosts.

First install dnsmasq:

```
sudo apt-get install dnsmasq
sudo systemctl stop dnsmasq
```

Run the following two commands to start two dnsmasq instances inside the dnsmasq namespace. One instance will serve hosts on VLAN 200 and the other VLAN 300. We will be providing DHCP leases in the supplied ranges, the lease will set the gateway for each host to point at faucet's virtual IP and set dnsmasq as the DNS resolver. We also provide a fake `does.it.work` DNS name which we will later use to demonstrate DNS is working as expected.

```
# 192.168.2.0/24 for VLAN 200
as_ns dnsmasq dnsmasq \
    --dhcp-range=192.168.2.10,192.168.2.20 \
    --dhcp-sequential-ip \
```

(continues on next page)

(continued from previous page)

```
--dhcp-option=option:router,192.168.2.254 \
--no-resolv \
--txt-record=does.it.work,yes \
--bind-interfaces \
--except-interface=lo --interface=veth0.200 \
--dhcp-leasefile=/tmp/nfv-dhcp-vlan200.leases \
--log-facility=/tmp/nfv-dhcp-vlan200.log \
--pid-file=/run/dnsmasq-vlan200.pid \
--conf-file=

# 192.168.3.0/24 for VLAN 300
as_ns dnsmasq dnsmasq \
--dhcp-range=192.168.3.10,192.168.3.20 \
--dhcp-sequential-ip \
--dhcp-option=option:router,192.168.3.254 \
--no-resolv \
--txt-record=does.it.work,yes \
--bind-interfaces \
--except-interface=lo --interface=veth0.300 \
--dhcp-leasefile=/tmp/nfv-dhcp-vlan300.leases \
--log-facility=/tmp/nfv-dhcp-vlan300.log \
--pid-file=/run/dnsmasq-vlan300.pid \
--conf-file=
```

Now let's configure faucet.yaml.

Listing 39: /etc/faucet/faucet.yaml

```
vlangs:
vlan200:
  vid: 200
  description: "192.168.2.0/24 network"
  faucet_vips: ["192.168.2.254/24"]
  faucet_mac: "00:00:00:00:00:22"
vlan300:
  vid: 300
  description: "192.168.3.0/24 network"
  faucet_vips: ["192.168.3.254/24"]
  faucet_mac: "00:00:00:00:00:33"
dps:
  sw1:
    dp_id: 0x1
    hardware: "Open vSwitch"
    interfaces:
      1:
        name: "host1"
        description: "host1 network namespace"
        native_vlan: vlan200
      2:
        name: "host2"
        description: "host2 network namespace"
        native_vlan: vlan200
```

(continues on next page)

(continued from previous page)

```
3:
  name: "host3"
  description: "host3 network namespace"
  native_vlan: vlan300
4:
  name: "host4"
  description: "host4 network namespace"
  native_vlan: vlan300
5:
  name: "dnsmasq"
  description: "dnsmasq server network namespace"
  tagged_vlans: [vlan200, vlan300]
```

Now reload faucet configuration file.

```
sudo systemctl reload faucet
```

Use dhclient to configure host1 to host4 using DHCP (it may take a few seconds, but should return when successful).

```
as_ns host1 dhclient -v -pf /run/dhclient-host1.pid -lf /run/dhclient-host1.leases veth0
as_ns host2 dhclient -v -pf /run/dhclient-host2.pid -lf /run/dhclient-host2.leases veth0
as_ns host3 dhclient -v -pf /run/dhclient-host3.pid -lf /run/dhclient-host3.leases veth0
as_ns host4 dhclient -v -pf /run/dhclient-host4.pid -lf /run/dhclient-host4.leases veth0
```

If dhclient is unable to obtain an address you can check */tmp/nfv-dhcp-vlan<vlanid>.log* (e.g */tmp/nfv-dhcp-vlan300.log*) to check the log messages from dnsmasq.

To look up the address for each namespace we can run the following commands:

```
as_ns host1 ip address show dev veth0
as_ns host2 ip address show dev veth0
as_ns host3 ip address show dev veth0
as_ns host4 ip address show dev veth0
```

If the hosts have IPs then great our DHCP server works.

At the moment we should be able to ping inside VLAN 200 and VLAN 300:

```
as_ns host1 ping <ip of host2> # both in VLAN 200 should work
as_ns host3 ping <ip of host4> # both in VLAN 300 should work
```

Pinging between VLANs will not currently work as we didn't turn on inter-VLAN routing in our faucet configuration.

DNS

We can use faucet to enforce where protocols such as DNS go on the network. In this section we will use a faucet ACL to rewrite DNS packets to allow our dnsmasq namespace to answer DNS queries for any IP address.

Firstly, we can see that our dnsmasq server is correctly responding to DNS requests by manually querying them:

```
as_ns host1 host -t txt does.it.work 192.168.2.1
as_ns host3 host -t txt does.it.work 192.168.3.1
```

Both commands should return:

```
does.it.work descriptive text "yes"
```

But if we tried to query say 8.8.8.8 we would see this fail:

```
as_ns host1 host -t txt does.it.work 8.8.8.8
```

To make this work we first need the MAC address of the dnsmasq container:

```
as_ns dnsmasq cat /sys/class/net/veth0/address
00:11:22:33:44:55
```

We now replace our previous faucet configuration with the configuration below which adds an ACL that rewrites the MAC address of all DNS packets from the host namespaces and sends these to our dnsmasq namespace. Make sure to update the example MAC address of 00:11:22:33:44:55 with the one you get from running the previous command.

Listing 40: /etc/faucet/faucet.yaml

```
vlans:
  vlan200:
    vid: 200
    description: "192.168.2.0/24 network"
    faucet_vips: ["192.168.2.254/24"]
    faucet_mac: "00:00:00:00:00:22"
  vlan300:
    vid: 300
    description: "192.168.3.0/24 network"
    faucet_vips: ["192.168.3.254/24"]
    faucet_mac: "00:00:00:00:00:33"
dps:
  sw1:
    dp_id: 0x1
    hardware: "Open vSwitch"
    interfaces:
      1:
        name: "host1"
        description: "host1 network namespace"
        native_vlan: vlan200
        acls_in: [nfv-dns, allow-all]
      2:
        name: "host2"
        description: "host2 network namespace"
        native_vlan: vlan200
        acls_in: [nfv-dns, allow-all]
      3:
        name: "host3"
        description: "host3 network namespace"
        native_vlan: vlan300
        acls_in: [nfv-dns, allow-all]
      4:
        name: "host4"
        description: "host4 network namespace"
        native_vlan: vlan300
```

(continues on next page)

(continued from previous page)

```

    acls_in: [nfv-dns, allow-all]
5:
    name: "dnsmasq"
    description: "dnsmasq server network namespace"
    tagged_vlans: [vlan200, vlan300]

acls:
    nfv-dns:
        # Force UDP DNS to our DNS server
        - rule:
            dl_type: 0x800      # ipv4
            nw_proto: 17        # udp
            udp_dst: 53         # dns
            actions:
                output:
                    set_fields:
                        - eth_dst: "00:11:22:33:44:55" # MAC address of dnsmasq namespace
            allow: True
        # Force TCP DNS to our DNS server
        - rule:
            dl_type: 0x800      # ipv4
            nw_proto: 6          # tcp
            tcp_dst: 53          # dns
            actions:
                output:
                    set_fields:
                        - eth_dst: "00:11:22:33:44:55" # MAC address of dnsmasq namespace
            allow: True
    allow-all:
        - rule:
            actions:
                allow: True

```

As usual reload faucet configuration file.

```
sudo systemctl reload faucet
```

The next step is to configure the namespace to be able to handle incoming DNS packets with any IP, this can be done by adding some rules to iptables that will NAT all DNS traffic to the IP address of the VLAN interface:

```

as_ns dnsmasq iptables -t nat -A PREROUTING -i veth0.200 -p udp --dport 53 -j DNAT --to-
destination 192.168.2.1
as_ns dnsmasq iptables -t nat -A PREROUTING -i veth0.200 -p tcp --dport 53 -j DNAT --to-
destination 192.168.2.1
as_ns dnsmasq iptables -t nat -A PREROUTING -i veth0.300 -p udp --dport 53 -j DNAT --to-
destination 192.168.3.1
as_ns dnsmasq iptables -t nat -A PREROUTING -i veth0.300 -p tcp --dport 53 -j DNAT --to-
destination 192.168.3.1

```

Now we should be able to query any IP address from the hosts and get a valid DNS response:

```
as_ns host1 host -t txt does.it.work 8.8.8.8
as_ns host2 host -t txt does.it.work 8.8.4.4
```

Zeek IDS

We will now add an IDS to our network on it's own separate VLAN and use faucet to mirror packets from VLAN 200 and 300 to the IDS VLAN.

Zeek installation

We need first to install Zeek (formerly known as Bro).

```
sudo apt-get install bro broctl
```

Configure Zeek

In /etc/bro/node.cfg, set veth0 as the interface to monitor

Listing 41: /etc/bro/node.cfg

```
[bro]
type=standalone
host=localhost
interface=veth0
```

Comment out MailTo in /etc/bro/broctl.cfg

Listing 42: /etc/bro/broctl.cfg

```
# Recipient address for all emails sent out by bro and BroControl.
# MailTo = root@localhost
```

Run Zeek

Firstly, let's create a namespace to run Zeek inside:

```
create_ns zeek 192.168.0.1
sudo ovs-vsctl add-port br0 veth-zeek -- set interface veth-zeek ofport_request=6
```

Since this is the first-time use of the Zeek command shell application, perform an initial installation of the BroControl configuration:

```
as_ns zeek broctl install
```

Then start Zeek instant

```
as_ns zeek broctl start
```

Check Zeek status

```
as_ns zeek broctl status
```

Name	Type	Host	Status	Pid	Started
bro	standalone	localhost	running	15052	07 May 09:03:59

Now let's add a mirror ACL so all VLAN 200 & VLAN 300 traffic is sent to Zeek.

We will use a VLAN ACLs similar to the previous VLAN tutorial. Copy and paste the entire configuration below into faucet.yaml.

Listing 43: /etc/faucet/faucet.yaml

```
acls:
  mirror-acl:
    - rule:
        actions:
          allow: true
          mirror: zeek
vlans:
  zeek-vlan:
    vid: 100
    description: "Zeek IDS network"
  vlan200:
    vid: 200
    description: "192.168.2.0/24 network"
    faucet_vips: ["192.168.2.254/24"]
    faucet_mac: "00:00:00:00:00:22"
    acls_in: [mirror-acl]
  vlan300:
    vid: 300
    description: "192.168.3.0/24 network"
    faucet_vips: ["192.168.3.254/24"]
    faucet_mac: "00:00:00:00:00:33"
    acls_in: [mirror-acl]
dps:
  sw1:
    dp_id: 0x1
    hardware: "Open vSwitch"
    interfaces:
      1:
        name: "host1"
        description: "host1 network namespace"
        native_vlan: vlan200
      2:
        name: "host2"
        description: "host2 network namespace"
        native_vlan: vlan200
      3:
        name: "host3"
        description: "host3 network namespace"
        native_vlan: vlan300
      4:
        name: "host4"
        description: "host4 network namespace"
        native_vlan: vlan300
      5:
        name: "dnsmasq"
        description: "dnsmasq server network namespace"
        tagged_vlans: [vlan200, vlan300]
```

(continues on next page)

(continued from previous page)

```
6:
  name: "zeek"
  description: "Zeek network namespace"
  native_vlan: zeek-vlan
```

As usual reload faucet configuration file.

```
sudo systemctl reload faucet
```

If we generate some DNS traffic on either of the hosts VLANs

```
as_ns host4 host -t txt does.it.work 192.168.3.1
```

Then if we inspect the Zeek logs for DNS /var/log/bro/current/dns.log, we should see that Zeek has seen the DNS queries and logged these.

Listing 44: /var/log/bro/current/dns.log

```
#separator \x09
#set_separator      ,
#empty_field        (empty)
#unset_field        -
#path    dns
#open   2019-01-17-17-43-56
#fields   ts      uid      id.orig_h      id.orig_p      id.resp_h      id.resp_p
          ↵ proto   trans_id     rtt      query      qclass      qclass_name    qtype      qtype_name
          ↵ rcode   rcode_name   AA       TC       RD       RA       Z           answers    TTLs
          ↵ rejected
#types    time      string    addr      port      addr      port      enum      count      interval
          ↵ string    count      string    count      string      bool      bool      bool
          ↵ bool      count      vector[string]  vector[interval]  bool
1547700236.794299 CsulWM1Px7fIyPpCVi      192.168.3.10    43428    192.168.3.1    53
          ↵ udp      14288  0.006973does.it.work    1       C_INTERNET    16      TXT      0
          ↵ NOERROR T      F      T      T      2       TXT 3 yes    0.000000      F
1547700379.311319 CZa11oBd3CgWBmgS8      192.168.3.11    45089    192.168.3.1    53
          ↵ udp      64001  0.000336does.it.work    1       C_INTERNET    16      TXT      0
          ↵ NOERROR T      F      T      T      0       TXT 3 yes    0.000000      F
```

You can also check if the traffic is being mirrored as expected using `tcpdump` in the `zeek` network namespace:

```
as_ns zeek sudo tcpdump -i veth0 -n -l
```

in one window, and then generating some more DNS traffic, eg:

```
as_ns host4 host -t txt does.it.work 192.168.3.1
```

then you should see something like:

Listing 45: zeek namespace tcpdump output

```
tcpdump: verbose output suppressed, use -v or -vv for full protocol decode
listening on veth0, link-type EN10MB (Ethernet), capture size 262144 bytes
12:19:24.624244 IP 192.168.3.13.38174 > 192.168.3.1.53: 64571+ TXT? does.it.work. (30)
12:19:24.625109 IP 192.168.3.1.53 > 192.168.3.13.38174: 64571* 1/0/0 TXT "yes" (46)
```

1.3 Installation

We recommend installing faucet with apt for first time users and provide a [Installing faucet for the first time](#) tutorial which walks you through all the required steps for setting up faucet and gauge for the first time.

Once installed, see [Configuration](#) for documentation on how to configure faucet. Also, see [Vendor-specific Documentation](#) for documentation on how to configure your switch.

More advanced methods of installing faucet are also available here:

1. [Installation using APT](#)
2. [Installation with Docker](#)
3. [Installation with Pip](#)

1.3.1 Installation using APT

We maintain a apt repo for installing faucet and its dependencies on Debian-based Linux distributions.

Here is a list of packages we supply:

Package	Description
python3-faucet	Install standalone faucet/gauge python3 library
faucet	Install python3 library, systemd service and default config files
gauge	Install python3 library, systemd service and default config files
faucet-all-in-one	Install faucet, gauge, prometheus and grafana. Easy to use and good for testing faucet for the first time.

Installation on Debian/Raspbian/Raspberry Pi OS and Ubuntu

The apt repo supports the following distro versions:

- Debian 10+
- Raspbian 10+
- Raspberry Pi OS 11+
- Ubuntu 18.04+

The following architectures are supported for each distro:

- amd64
- armhf
- arm64

```
sudo apt-get install curl gnupg apt-transport-https lsb-release
sudo mkdir -p /etc/apt/keyrings/
curl -1sLf https://packagecloud.io/faucetsdn/faucet/gpgkey | sudo gpg --dearmor -o /etc/
apt/keyrings/faucet.gpg
echo "deb [signed-by=/etc/apt/keyrings/faucet.gpg] https://packagecloud.io/faucetsdn/
faucet/$(lsb_release -si | awk '{print tolower($0)})/ $(lsb_release -sc) main" | sudo_
tee /etc/apt/sources.list.d/faucet.list
sudo apt-get update
```

Then to install all components for a fully functioning system on a single machine:

```
sudo apt-get install faucet-all-in-one
```

or you can install the individual components:

```
sudo apt-get install faucet
sudo apt-get install gauge
```

1.3.2 Installation with Docker

We provide official automated builds on [Docker Hub](#) so that you can easily run Faucet and its components in a self-contained environment without installing on the main host system.

The docker images support the following architectures:

- amd64
- 386
- arm/v6
- arm/v7
- arm64/v8
- ppc64le
- s390x

Installing docker

We recommend installing Docker Community Edition (CE) according to the official [docker engine installation guide](#).

Configuring dockers

First, we need to create some configuration files on our host to mount inside the docker containers to configure faucet and gauge:

```
sudo mkdir -p /etc/faucet
sudo vi /etc/faucet/faucet.yaml
sudo vi /etc/faucet/gauge.yaml
```

See the [Configuration](#) section for configuration options.

Starting dockers

We use Docker tags to differentiate between versions of Faucet. The latest tag will always point to the latest stable release of Faucet. All tagged versions of Faucet in git are also available to use, for example using the `faucet/faucet:1.8.0` Docker will run the released version 1.8.0 of Faucet.

By default the Faucet and Gauge images are run as the `faucet` user under UID 0, GID 0. If you need to change that it can be overridden at runtime with the Docker flags: `-e LOCAL_USER_ID` and `-e LOCAL_GROUP_ID`.

To pull and run the latest version of Faucet:

```
mkdir -p /var/log/faucet/
docker pull faucet/faucet:latest
docker run -d \
    --name faucet \
    --restart=always \
    -v /etc/faucet/:/etc/faucet/ \
    -v /var/log/faucet/:/var/log/faucet/ \
    -p 6653:6653 \
    -p 9302:9302 \
    faucet/faucet
```

Port 6653 is used for OpenFlow, port 9302 is used for Prometheus - port 9302 may be omitted if you do not need Prometheus.

To pull and run the latest version of Gauge:

```
mkdir -p /var/log/faucet/gauge/
docker pull faucet/gauge:latest
docker run -d \
    --name gauge \
    --restart=always \
    -v /etc/faucet/:/etc/faucet/ \
    -v /var/log/faucet/:/var/log/faucet/ \
    -p 6654:6653 \
    -p 9303:9303 \
    faucet/gauge
```

Port 6654 is used for OpenFlow, port 9303 is used for Prometheus - port 9303 may be omitted if you do not need Prometheus.

Additional arguments

You may wish to run faucet under docker with additional arguments, for example: setting certificates for an encrypted control channel. This can be done by overriding the docker entrypoint like so:

```
docker run -d \
    --name faucet \
    --restart=always \
    -v /etc/faucet/:/etc/faucet/ \
    -v /etc/ryu/ssl/:/etc/ryu/ssl/ \
    -v /var/log/faucet/:/var/log/faucet/ \
    -p 6653:6653 \
    -p 9302:9302 \
    faucet/faucet \
    faucet \
    --ctl-privkey /etc/ryu/ssl/ctrlr.key \
    --ctl-cert /etc/ryu/ssl/ctrlr.cert \
    --ca-certs /etc/ryu/ssl/sw.cert
```

You can get a list of all additional arguments faucet supports by running:

```
docker run -it faucet/faucet faucet --help
```

Docker compose

This is an example docker-compose file that can be used to set up gauge to talk to Prometheus and InfluxDB with a Grafana instance for dashboards and visualisations.

It can be run with:

```
docker-compose pull
docker-compose up
```

The time-series databases with the default settings will write to /opt/prometheus/ /opt/influxdb/shared/data/db you can edit these locations by modifying the `docker-compose.yaml` file.

On OSX, some of the default shared paths are not accessible, so to overwrite the location that volumes are written to on your host, export an environment variable name `FAUCET_PREFIX` and it will get prepended to the host paths. For example:

```
export FAUCET_PREFIX=/opt/faucet
```

When all the docker containers are running we will need to configure Grafana to talk to Prometheus and InfluxDB. First login to the Grafana web interface on port 3000 (e.g <http://localhost:3000>) using the default credentials of `admin:admin`.

Then add two data sources. Use the following settings for prometheus:

```
Name: Prometheus
Type: Prometheus
Url: http://prometheus:9090
```

And the following settings for InfluxDB:

```
Name: InfluxDB
Type: InfluxDB
Url: http://influxdb:8086
With Credentials: true
Database: faucet
User: faucet
Password: faucet
```

Check the connection using test connection.

From here you can add a new dashboard and a graphs for pulling data from the data sources. Hover over the + button on the left sidebar in the web interface and click Import.

We will import the following dashboards, just download the following links and upload them through the grafana dashboard import screen:

- [Instrumentation](#)
- [Inventory](#)
- [Port Statistics](#)

1.3.3 Installation with Pip

You can install the latest pip package, or you can install directly from git via pip.

Installing faucet

First, ensure python3 is installed:

```
apt-get install python3 python3-pip
```

Then install the latest stable release of faucet from pypi, via pip:

```
pip3 install faucet
```

Or, install the latest development code from git, via pip:

```
apt-get install git  
pip3 install git+https://github.com/faucetsdn/faucet.git
```

Starting faucet manually

Faucet includes a start up script for starting Faucet and Gauge easily from the command line.

To run Faucet manually:

```
faucet --verbose
```

To run Gauge manually:

```
gauge --verbose
```

There are a number of options that you can supply the start up script for changing various options such as OpenFlow port and setting up an encrypted control channel. You can find a list of the additional arguments by running:

```
faucet --help
```

Starting faucet With systemd

Systemd can be used to start Faucet and Gauge at boot automatically:

```
$EDITOR /etc/systemd/system/faucet.service  
$EDITOR /etc/systemd/system/gauge.service  
systemctl daemon-reload  
systemctl enable faucet.service  
systemctl enable gauge.service  
systemctl restart faucet  
systemctl restart gauge
```

/etc/systemd/system/faucet.service should contain:

Listing 46: faucet.service

```
[Unit]
Description="Faucet OpenFlow switch controller"
After=network-online.target
Wants=network-online.target

[Service]
EnvironmentFile=/etc/default/faucet
User=faucet
Group=faucet
ExecStart=/usr/local/bin/faucet --ryu-config-file=${FAUCET_RYU_CONF} --ryu-ofp-tcp-
    -listen-port=${FAUCET_LISTEN_PORT}
ExecReload=/bin/kill -HUP $MAINPID
Restart=always

[Install]
WantedBy=multi-user.target
```

/etc/systemd/system/gauge.service should contain:

Listing 47: gauge.service

```
[Unit]
Description="Gauge OpenFlow statistics controller"
After=network-online.target
Wants=network-online.target

[Service]
EnvironmentFile=/etc/default/gauge
User=faucet
Group=faucet
ExecStart=/usr/local/bin/gauge --ryu-config-file=${GAUGE_RYU_CONF} --ryu-ofp-tcp-listen-
    -port=${GAUGE_LISTEN_PORT}
Restart=always

[Install]
WantedBy=multi-user.target
```

1.4 Configuration

1.4.1 Faucet configuration

Faucet is configured with a YAML-based configuration file, `faucet.yaml`. The following is example demonstrating a few common features:

Listing 48: faucet.yaml

```
---
include:
  - acls.yaml
```

(continues on next page)

(continued from previous page)

```

vlans:
  office:
    vid: 100
    description: "office network"
    acls_in: [office-vlan-protect]
    faucet_mac: "0e:00:00:00:10:01"
    faucet_vips:
      - '10.0.100.254/24'
      - '2001:100::1/64'
      - 'fe80::c00:00ff:fe00:1001/64'
  routes:
    - route:
        ip_dst: '192.168.0.0/24'
        ip_gw: '10.0.100.2'
  guest:
    vid: 200
    description: "guest network"
    faucet_mac: "0e:00:00:00:20:01"
    faucet_vips:
      - '10.0.200.254/24'
      - '2001:200::1/64'
      - 'fe80::c00:00ff:fe00:2001/64'

routers:
  router-office-guest:
    vlans: [office, guest]

dps:
  sw1:
    dp_id: 0x1
    hardware: "Open vSwitch"
    interfaces:
      1:
        name: "h1"
        description: "host1 container"
        native_vlan: office
        acls_in: [access-port-protect]
      2:
        name: "h2"
        description: "host2 container"
        native_vlan: office
        acls_in: [access-port-protect]
      3:
        name: "g1"
        description: "guest1 container"
        native_vlan: guest
        acls_in: [access-port-protect]
      4:
        name: "s1"
        description: "services container"
        native_vlan: office

```

(continues on next page)

(continued from previous page)

```

    acls_in: [service-port-protect]
5:
    name: "trunk"
    description: "VLAN trunk to sw2"
    tagged_vlans: [office]
    acls_in: [access-port-protect]

sw2:
    dp_id: 0x2
    hardware: "Allied-Telesis"
    interfaces:
        1:
            name: "pi"
            description: "raspberry pi"
            native_vlan: office
            acls_in: [access-port-protect]
        2:
            name: "laptop"
            description: "guest laptop"
            native_vlan: guest
            acls_in: [access-port-protect]
        4:
            name: "s1"
            description: "services Laptop"
            native_vlan: guest
            acls_in: [access-port-protect]
24:
    name: "trunk"
    description: "VLAN trunk to sw1"
    tagged_vlans: [office, guest]

```

Listing 49: acls.yaml

```

---
acls:
    office-vlan-protect:
        # Prevent IPv4 communication between Office/Guest networks
        - rule:
            dl_type: 0x800      # ipv4
            ipv4_src: 10.0.100.0/24
            ipv4_dst: 10.0.200.0/24
            actions:
                allow: 0          # drop
        - rule:
            actions:
                allow: 1          # allow

    access-port-protect:
        # Drop dhcp servers
        - rule:
            dl_type: 0x800      # ipv4
            nw_proto: 17         # udp
            udp_src: 67           # bootps

```

(continues on next page)

(continued from previous page)

```

        udp_dst: 68          # bootpc
        actions:
            allow: 0          # drop
    # Drop dhcpcv6 servers
    - rule:
        dl_type: 0x86dd    # ipv6
        nw_proto: 17         # udp
        udp_src: 547        # dhcpcv6-server
        udp_dst: 546        # dhcpcv6-client
        actions:
            allow: 0          # drop
    # Drop icmpv6 RAs
    - rule:
        dl_type: 0x86dd    # ipv6
        nw_proto: 58         # icmpv6
        icmpv6_type: 134     # router advertisement
        actions:
            allow: 0          # drop
    # Drop SMTP
    - rule:
        dl_type: 0x800       # ipv4
        nw_proto: 6           # tcp
        tcp_dst: 25          # smtp
        actions:
            allow: 0          # drop
    # Force DNS to our DNS server
    - rule:
        dl_type: 0x800       # ipv4
        nw_proto: 17          # udp
        udp_dst: 53          # dns
        actions:
            output:
                set_fields:
                    - eth_dst: "72:b8:3c:4c:dc:4d"
                    port: "s1"  # s1 container
    # Force DNS to our DNS server
    - rule:
        dl_type: 0x800       # ipv4
        nw_proto: 6           # tcp
        tcp_dst: 53          # dns
        actions:
            output:
                set_fields:
                    - eth_dst: "72:b8:3c:4c:dc:4d"
                    port: "s1"  # s1 container
    - rule:
        actions:
            allow: 1          # allow

service-port-protect:
    # Drop icmpv6 RAs
    - rule:

```

(continues on next page)

(continued from previous page)

```

dl_type: 0x86dd      # ipv6
nw_proto: 58         # icmpv6
icmpv6_type: 134    # router advertisement
actions:
    allow: 0          # drop
# Drop SMTP
- rule:
    dl_type: 0x800    # ipv4
    nw_proto: 6         # tcp
    tcp_dst: 25        # smtp
    actions:
        allow: 0          # drop
- rule:
    actions:
        allow: 1          # allow

```

The datapath ID may be specified as an integer or hex string (beginning with 0x).

A port not explicitly defined in the YAML configuration file will be left down and will drop all packets.

Configuration options

Top Level

Table 1: Faucet.yaml

Attribute	Type	Default	Description
acls	dictionary	{}	Configuration specific to acls. The keys are names of each acl, and the values are config dictionaries holding the acl's configuration (see below).
dps	dictionary	{}	Configuration specific to datapaths. The keys are names or dp_ids of each datapath, and the values are config dictionaries holding the datapath's configuration (see below).
meters	dictionary	{}	Configuration specific to meters. The keys are names of each meter, and the values are config dictionaries holding the meter's configuration (see below).
routers	dictionary	{}	Configuration specific to routers. The keys are names of each router, and the values are config dictionaries holding the router's configuration (see below).
version	integer	2	The config version. 2 is the only supported version.
vlans	dictionary	{}	Configuration specific to vlans. The keys are names or vids of each vlan, and the values are config dictionaries holding the vlan's configuration (see below).

DP

DP configuration is entered in the ‘dps’ configuration block. The ‘dps’ configuration contains a dictionary of configuration blocks each containing the configuration for one datapath. The keys can either be string names given to the datapath, or the OFP datapath id.

Table 2: dps: <dp name or id>: {}

Attribute	Type	Default	Description
advertise_interval	integer	30	How often to advertise (eg. IPv6 RAs)
arp_neighbor_timeout	integer	250	ARP and neighbour timeout in seconds
description	string	name	Description of this datapath, strictly informational
dot1x	dictionary	{}	802.1X configuration (see below)
dp_id	integer	The configuration key	The OFP datapath-id of this datapath
drop_broadcast_source_address	boolean	True	If True, Faucet will drop any packet from a broadcast source address
drop_spoofed_faucet_mac	boolean	True	If True, Faucet will drop any packet it receives with an ethernet source address equal to a MAC address that Faucet is using.
group_table	boolean	False	If True, Faucet will use the OpenFlow Group tables to flood packets. This is an experimental feature that is not fully supported by all devices and may not interoperate with all features of faucet.
hardware	string	“Open vSwitch”	The hardware model of the datapath. Defaults to “Open vSwitch”. Other options can be seen in the documentation for valve.py
high_priority	integer	low_priority + 1 (9001)	The high priority value.
highest_priority	integer	high_priority + 98 (9099)	The highest priority number to use.
ignore_learn_ins	integer	10	Ignore every approx nth packet for learning. 2 will ignore 1 out of 2 packets; 3 will ignore 1 out of 3 packets. This limits control plane activity when learning new hosts rapidly. Flooding will still be done by the dataplane even with a packet is ignored for learning purposes.
interfaces	dictionary	{}	Configuration block for interface specific config (see below)

continues on next page

Table 2 – continued from previous page

Attribute	Type	Default	Description
interface_ranges	dictionary	{}	Contains the config blocks for sets of multiple interfaces. The configuration entered here will be used as the defaults for these interfaces. The defaults can be overwritten by configuring the interfaces individually, which will also inherit all defaults not specifically configured. For example, if the range specifies tagged_vlans: [1, 2, 3], and the individual interface specifies tagged_vlans: [4], the result will be tagged_vlans: [4]. The format for the configuration key is a comma separated string. The elements can either be the name or number of an interface or a range of port numbers eg: “1-6,8,port9”.
learn_ban_timeout	integer	10	When a host is rapidly moving between ports Faucet will stop learning mac addresses on one of the ports for this number of seconds.
learn_jitter	integer	10	In order to reduce load on the controller Faucet will randomly vary the timeout for learnt mac addresses by up to this number of seconds.
lldp_beacon	dictionary	{}	Configuration block for LLDP beacons
low_priority	integer	low_priority + 9000 (9000)	The low priority value.
lowest_priority	integer	priority_offset (0)	The lowest priority number to use.
max_host_fib_retry_count	integer	10	Limit the number of times Faucet will attempt to resolve a next-hop’s l2 address.
max_hosts_per_resolve_cycle	integer	5	Limit the number of hosts resolved per cycle.
max_resolve_backoff_time	integer	32	When resolving next hop l2 addresses, Faucet will back off exponentially until it reaches this value.
metrics_rate_limit_sec	integer	0	Rate limit metric updates - don’t update metrics if last update was less than this many seconds ago.
name	string	The configuration key	A name to reference the datapath by.
ofchannel_log	string	None	Name of logfile for openflow logs
packetin_pps	integer	None	Ask switch to rate limit packetin in pps.
slowpath_pps	integer	None	Ask switch to rate limit slowpath in pps.
priority_offset	integer	0	Shift all priority values by this number.
proactive_learn_v4	boolean	True	Whether proactive learning is enabled for IPv4 nexthops
proactive_learn_v6	boolean	True	Whether proactive learning is enabled for IPv6 nexthops
stack	dictionary	{}	Configuration block for stacking config, for loop protection (see below)
timeout	integer	300	Timeout for MAC address learning
use_idle_timeout	boolean	False	Turn on/off the use of idle timeout for src_table, default OFF.

continues on next page

Table 2 – continued from previous page

Attribute	Type	Default	Description
table_sizes	dictionary	{}	For TFM based switches, size of each FAUCET table (any may be specified)
port_table_scale_factor	float	1.0	For TFM based switches, and for tables that are sized by number of ports, scale size estimate.
global_vlan	int	2**11-1	When global routing is enabled, FIB VID used internally

Stacking (DP)

Stacking is configured in the dp configuration block and in the interface configuration block. At the dp level the following attributes can be configured within the configuration block ‘stack’:

Table 3: dps: <dp name or id>: stack: {}

Attribute	Type	Default	Description
priority	integer	0	Setting any value for stack priority indicates that this datapath should be the root for the stacking topology. When multiple stack DPs have a priority value applied, the root will be chosen as the DP with the lowest priority
down_time_multiple	integer	3	The down_time_multiple value determines the number of root update time intervals for a stack node to be considered healthy when not running.
min_stack_health	float	1.0	Minimum percentage value of required UP stack ports for this stack node to be considered healthy. The default value of 1.0 is considered 100%.
min_lacp_health	float	1.0	Minimum percentage value of required UP stack ports for this stack node to be considered healthy. The default value of 1.0 is considered 100%.

LLDP (DP)

LLDP beacons are configured in the dp and interface configuration blocks.

LLDP beacons can be used to, among other things, facilitate physical troubleshooting (e.g. so that a standard cable tester can display port information), verify FAUCET stacking topology, and cue a phone to use the right voice VLAN.

Note: While FAUCET can receive and log LLDP from other devices, FAUCET does not do spanning tree. Those LLDP packets will have no influence on FAUCET’s forwarding decisions.

The following attributes can be configured within the ‘lldp_beacon’ configuration block at the dp level:

Table 4: dps: <dp name or id>: llpd_beacon: {}

Attribute	Type	Default	Description
system_name	string	The datapath name	System name inside LLDP packet
send_interval	integer	None	Seconds between sending beacons
max_per_interval	integer	None	The maximum number of beacons, across all ports to send each interval

Note: When stack ports are enabled FAUCET automatically configures LLDP with the default values for send_interval and max_per_interval to 5.

802.1X (DP)

Note: 802.1X support is experimental, and there may be incomplete features or bugs. If you find an issue please email the mailing list or create an Github issue.

Faucet implements 802.1X by forwarding EAPOL packets on the dataplane to a socket it is listening on. These packets are then passed through to a RADIUS server which performs the authentication and generates the reply message.

For each instance of Faucet there is only one 802.1X speaker. This 802.1X speaker is configured by the options below. Except for the ‘nfv_sw_port’ option, the configuration for the speaker is configured using the first dp’s dot1x config dictionary. For all other dps only the ‘nfv_sw_port’ option is required with the others ignored.

A basic network and configuration with two hosts may look like:

A brief overview of the current state of the implementation:

Implemented:

- EAP Types: MD5, PEAP, TLS, TTLS.
- Authentication session expiry default 3600 seconds. (configurable (per authentication) via returning the Session-Timeout attribute in the RADIUS Access-Accept message).
- Faucet connects to a single RADIUS server, and passes through all EAP messages.
- Client can end session with EAP-Logoff.
- Dynamic assignment of the native VLAN. Use RADIUS attribute Private-Group-Tunnel-ID in Radius Access-Accept with the name of the faucet VLAN.

Not Supported (yet):

- RADIUS Accounting.
- Multiple RADIUS Servers.
- Other EAP types. E.g. FAST, ...
- Dynamic assignment of ACL.

802.1X port authentication is configured in the dp configuration block and in the interface configuration block. At the dp level the following attributes can be configured with the configuration block ‘dot1x’:

Table 5: dps: <dp name or id>: dot1x: {}

Attribute	Type	Default	Description
nfv_intf	str		The interface for Faucet to listen for EAP packets from the dataplane. - NOTE: Faucet will only use the config from the first dp
nfv_sw_port	int		Switch port number that connects to the Faucet server's nfv_intf
radius_ip	str		IP address of RADIUS Server the 802.1X speaker will authenticate with. - NOTE: Faucet will only use the config from the first dp
radius_port	int	1812	UDP port of RADIUS Server the 802.1X speaker will authenticate with. - NOTE: Faucet will only use the config from the first dp
radius_secret	str		Shared secret used by the RADIUS server and the 802.1X speaker. - NOTE: Faucet will only use the config from the first dp
noauth_acl	str	None	The name of the defined ACL [refer to acls.yaml for more information] that will be set to all 802.1X ports by default, that is before any user is authenticated. - NOTE: Faucet will only use the config from the first dp
auth_acl	str	None	The name of the defined ACL [refer to acls.yaml for more information] that will be set to an 802.1X port when a user authenticates. - NOTE: Faucet will only use the config from the first dp
dot1x_assigned	boolean	False	True, if this ACL can be dynamically assigned by a RADIUS server during 802.1X authentication.

Interfaces

Configuration for each interface is entered in the ‘interfaces’ configuration block within the config for the datapath. Each interface configuration block is a dictionary keyed by the interface name.

Defaults for groups of interfaces can also be configured under the ‘interface-ranges’ attribute within the datapath configuration block. These provide default values for a number of interfaces which can be overwritten with the config block for an individual interface. These are keyed with a string containing a comma separated list of OFP port numbers, interface names or with OFP port number ranges (eg. 1-6).

Table 6: dps: <dp name or id>: interfaces: <interface name or OFP port number>: {}

Attribute	Type	Default	Description
acl_in	integer string	or None	Deprecated, replaced by acls_in which accepts a list. The acl that should be applied to all packets arriving on this port. referenced by name or list index
acls_in	a list of ACLs, as integers or strings	None	A list of ACLs that should be applied to all packets arriving on this port. referenced by name or list index. ACLs listed first take priority over those later in the list.
description	string	Name (which defaults to the configuration key)	Description, purely informational
dot1x	boolean	False	Enable 802.1X port authentication (NOTE: Requires ACL with dot1x_assigned attribute, for 802.1X Per User ACLs)
dot1x_acl	boolean	False	Enable 802.1X ACL functionality on port (NOTE: Requires dot1x attribute)
dot1x_mab	boolean	False	Enable 802.1X Mac Authentication Bypass on port (NOTE: Requires dot1x attribute)
enabled	boolean	True	Allow packets to be forwarded through this port.
hairpin	boolean	False	If True it allows packets arriving on this port to be output to this port. This is necessary to allow routing between two vlans on this port, or for use with a WIFI radio port.
lldp_beacon	dictionary	{}	Configuration block for lldp configuration
loop_protect	boolean	False	if True, do simple (host/access port) loop protection on this port.
loop_protect_external	boolean	False	if True, do external (other switch) loop protection on this port.
max_hosts	integer	255	the maximum number of mac addresses that can be learnt on this port.
mirror	a list of integers or strings	None	Mirror all allowed packets received from (subject to ACLs), and all packets transmitted to, the ports specified (by name or by port number), to this port. If mirroring of denied by ACL packets is desired, use the ACL rule mirror option. The mirrored packets are from the perspective of hosts on the mirrored port (for example, a packet with a VLAN tag, transmitted to a host on a mirrored and untagged port, will be mirrored without its original VLAN tag). NOTE: If packets are exchanged between two ports that are both mirrored, depending on the OpenFlow switch, only one copy of the mirrored traffic may be sent (when a port sends a packet, not when the other receives it). This is because some implementations cannot send a packet more than once to the same port.
1.4. Configuration	string	The configuration key.	a name to reference this port by.
native_vlan	integer string	or None	The vlan associated with untagged packets arriving and leaving this interface.
number	integer	The configura-	The OFP port number for this port.

Stacking (Interfaces)

Stacking port configuration indicates how datapaths are connected when using stacking. The configuration is found under the ‘stack’ attribute of an interface configuration block. The following attributes can be configured:

Table 7: dps: <dp name or id>: interfaces: <interface name or port number>: stack: {}

Attribute	Type	Default	Description
dp	integer string	or None	The name or dp_id of the dp connected to this port
port	integer string	or None	The name or OFP port number of the interface on the remote dp connected to this interface.

LLDP (Interfaces)

Interface specific configuration for LLDP.

Table 8: dps: <dp name or id>: interfaces: <interface name or port number>: lldp_beacon: {}

Attribute	Type	Default	Description
enable	boolean	False	Enable sending lldp beacons from this interface
org_tlv	list	[]	Definitions of Organisational TLVs to add to LLDP beacons
port_descr	string	Interface description	Port description to use in beacons from this interface
system_name	string	lldp_beacon (dp) system name	The System Name to use in beacons from this interface

LLDP Organisational TLVs (Interfaces)

Faucet allows defining organisational TLVs for LLDP beacons. These are configured in a list under lldp_beacons/org_tlv at the interfaces level of configuration.

Each list element contains a dictionary with the following elements:

Table 9: dps: <dp name or id>: interfaces: <interface name or port number>: lldp_beacon: org_tlv: - {}

Attribute	Type	Default	Description
info	string	None	The info field of the tlv, as a hex string
oui	integer	None	The Organisational Unique Identifier
subtype	integer	None	The organizationally defined subtype

Router

Routers config is used to allow routing between VLANs, and optionally BGP. Routers configuration is entered in the ‘routers’ configuration block at the top level of the faucet configuration file. Configuration for each router is an entry in the routers dictionary and is keyed by a name for the router. The following attributes can be configured:

Table 10: routers: <router name>: {}

Attribute	Type	Default	Description
vlangs	list of integers or strings	None	Enables inter-vlan routing on the given VLANs.
bgp	BGP configuration.	None	See below for BGP configuration.

BGP

Routers config to enable BGP routing.

Table 11: routers: <router name>: {}

Attribute	Type	Default	Description
as	integer	None	The local AS number to used when speaking BGP
connect_mode	string	“passive”	Must be “passive”
neighbor_addresses	list of strings (IP addresses)	None	The list of BGP neighbours
neighbor_as	integer	None	The AS Number for the BGP neighbours
routerid	string (IP address)	None	BGP router ID.
server_addresses	list of strings (IP addresses)	None	IP addresses for FAUCET to listen for incoming BGP addresses.
port	integer	None	Port to use for BGP sessions
vlan	string	None	The VLAN to add/remove BGP routes from.

VLAN

VLANs are configured in the ‘vlans’ configuration block at the top level of the faucet config file. The config for each vlan is an entry keyed by its vid or a name. The following attributes can be configured:

Table 12: vlans: <vlan name or vid>: {}

Attribute	Type	Default	Description
acl_in	string or integer	None	Deprecated, replaced by acls_in which accepts a list. The acl to be applied to all packets arriving on this vlan.
acls_in	a list of ACLs, as integers or strings	None	The acl to be applied to all packets arriving on this vlan. ACLs listed first take priority over those later in the list. NOTE: packets from coprocessor port are not subject to vlan acls, because coprocessors intentionally bypass normal input processing including vlan acls and switch/route learning.
description	string	None	Strictly informational
dot1x_assigned	bool	False	True, if this VLAN can be dynamically assigned by a RADIUS server during 802.1X authentication. Otherwise False
faucet_vips	list of strings (IP address prefixes)	None	The IP Address for Faucet's routing interface on this vlan
faucet_mac	string (MAC address)	None	Set MAC for FAUCET VIPs on this VLAN
max_hosts	integer	255	The maximum number of hosts that can be learnt on this vlan.
minimum_ip_size_check	boolean	True	If False, don't check that IP packets have a payload (must be False for OVS trace/tutorial to work)
name	string	the configuration key	A name that can be used to refer to this vlan.
proactive_arp_limit	integer	2052	Do not proactively ARP for hosts once this value has been reached (set to None for unlimited)
proactive_nd_limit	integer	2052	Don't proactively discover IPv6 hosts once this value has been reached (set to None for unlimited)
routes	list of routes	None	Static routes configured on this vlan (see below)
targeted_gw_resolution	boolean	False	If True, and a gateway has been resolved, target the first re-resolution attempt to the same port rather than flooding.
unicast_flood	boolean	True	If False packets to unknown ethernet destination MAC addresses will be dropped rather than flooded.
vid	integer	the configuration key	The vid for the vlan.

Static Routes

Static routes are given as a list. Each entry in the list contains a dictionary keyed with the keyword ‘route’ and contains a dictionary configuration block as follows:

Table 13: vlans: <vlan name or vid>: routes: - route: {}

Attribute	Type	Default	Description
ip_dst	string (IP subnet)	None	The destination subnet.
ip_gw	string (IP address)	None	The next hop for this route

Meters

Note: Meters are platform dependent and not all functions may be available.

Meters are configured under the ‘meters’ configuration block. The meters block contains a dictionary of individual meters each keyed by its name.

Table 14: meters: <meter name>:

Attribute	Type	Default	Description
meter_id	int		Unique identifier.
entry	dictionary		Defines the meter actions. Details Below.

Table 15: : meters: <meter name>: entry:

Attribute	Type	Default	Description
flags	string or list of strings	KBPS	Possible values are ‘KBPS’ (Rate value in kb/s (kilo-bit per second).), ‘PKTPS’ (Rate value in packet/sec.), ‘BURST’ (Do burst size), ‘STATS’ (Collect statistics)
bands	list of bands (which are dictionaries, see below)		

Table 16: : meters: <meter name>: entry: bands:

Attribute	Type	Default	Description
type	string		'DROP' - drop packets when the band rate is exceeded, or 'DSCP_REMARK' - use a simple DiffServ policer to remark the DSCP field in the IP header of packets that exceed the band rate.
rate	int		Rate for dropping or remarking packets, depending on the above type. Value is in KBPS or PKTPS flag depending on the flag set.
burst_size	int		Only used if flags includes BURST. Indicates the length of packet or byte burst to consider for applying the meter.
prec_level	int		Only used if type is DSCP_REMARK. The amount by which the drop precedence should be increased.

ACLs

ACLs are configured under the 'acls' configuration block. The acls block contains a dictionary of individual acls each keyed by its name.

Each acl contains a list of rules: a packet will have the first matching rule applied to it.

Each rule is a dictionary containing the single key 'rule' with matches and actions. Matches are key/values based on the ryu RESTful API. Actions is a dictionary of actions to apply upon match.

Note: When setting allow to true, the packet will be submitted to the next table AFTER having the output actions applied to it.

Table 17: : acls: <acl name>: - rule: actions: {}

Attribute	Type	Default	Description
allow	boolean	False	If True allow the packet to continue through the Faucet pipeline, if False drop the packet.
force_port_vlan	boolean	False	if True, don't verify VLAN/port association.
cookie	int, 0-2**16	defaults to datapath cookie value	If set, cookie on this flow will be set to this value.
meter	string	None	Meter to apply to the packet
mirror	string or integer	None	Copy the packet, before any modifications, to the specified port (NOTE: ACL mirroring is done in input direction only)
output	dictionary or list	None	Used to apply more specific output actions for an ACL
ct	dictionary	None	Used to apply connection tracking to the specified flow.

The output action contains a dictionary with the following elements:

Note: When using the dictionary format, Faucet will build the actions in the following order: pop_vlans, vlan_vids, swap_vid, vlan_vids, set_fields, port, ports and then failover. The ACL dictionary format also restricts using port & ports, vlan_vid & vlan_vids at the same time.

Note: When using the list format, the output actions will be applied in the user defined order.

Table 18: : acls: <acl name>: - rule: actions: output: {}

Attribute	Type	Default	Description
set_fields	list of dictionaries	None	A list of fields to set with values, eg. eth_dst: "1:2:3:4:5:6"
port	integer or string	None	The port to output the packet to.
ports	list of [integer or string]	None	The list of ports the packet will be output through.
pop_vlans	boolean	False	Pop vlan tag before output.
vlan_vid	integer	False	Push vlan tag before output.
swap_vid	integer	None	Rewrite the vlan vid of the packet when outputting
vlan_vids	list of [integer or {vid: integer, eth_type: integer}]	None	Push vlan tags on output, with optional eth_type.
failover	dictionary	None	Output with a failover port (see below).
tunnel	dictionary	None	Generic port output to any port in the stack

Failover is an experimental option, but can be configured as follows:

Table 19: : acls: <acl name>: - rule: actions: output: failover: {}

Attribute	Type	Default	Description
group_id	integer	None	The OFP group id to use for the failover group
ports	list	None	The list of ports the packet can be output through.

A tunnel ACL will encapsulate a packet before sending it through the stack topology.

Note: Currently tunnel ACLs only support VLAN encapsulation.

Table 20: : acls: <acl name>: - rule: actions: output: tunnel: {}

Attribute	Type	Default	Description
type	str	'vlan'	The encapsulation type for the packet. Default is to encapsulate using QinQ.
tunnel_id	int/str	VID that is greater than the largest configured VID	The ID for the encapsulation type
dp	int/str	None	The name or dp_id of the dp where the output port belongs
port	int/str	None	The name or port number of the interface on the remote DP to output the packet
exit_instructions	list	None	An additional list of output actions to apply to the packet after decapsulating from the tunnel and before outputting to the destination. This is in the form of the ordered ACL output actions.
maintain_encapsulation	bool	False	Forces the tunnel encapsulation to be kept on the packet upon exiting the tunnel
bi_directional	bool	False	If true, configures a reverse path (from the destination to the source) indicated by a different VLAN_PCP using the same tunnel ID
reverse	bool	False	If true, configures the tunnel to be solely a 'reverse' tunnel. Indicated by a different VLAN_PCP, potentially using a used tunnel ID. This provides a more general reverse tunnel output that can go to a different destination.

1.4.2 Gauge configuration

Gauge is configured similarly with, `gauge.yaml`. The following is an example demonstrating a few common features:

Listing 50: gauge.yaml

```
---
# Recommended configuration is Prometheus for all monitoring, with all_dps: true
faucet_configs:
  - '/etc/faucet/faucet.yaml'
watchers:
  port_status_poller:
    type: 'port_state'
    all_dps: true
    # dps: ['sw1', 'sw2']
    db: 'prometheus'
  port_stats_poller:
    type: 'port_stats'
    all_dps: true
    # dps: ['sw1', 'sw2']
    interval: 10
```

(continues on next page)

(continued from previous page)

```

db: 'prometheus'
# db: 'influx'
flow_table_poller:
    type: 'flow_table'
    all_dps: true
    interval: 60
    db: 'prometheus'
dbs:
    prometheus:
        type: 'prometheus'
        prometheus_addr: '0.0.0.0'
        prometheus_port: 9303
    ft_file:
        type: 'text'
        compress: true
        path: 'flow_tables'
    influx:
        type: 'influx'
        influx_db: 'faucet'
        influx_host: 'influxdb'
        influx_port: 8086
        influx_user: 'faucet'
        influx_pwd: 'faucet'
        influx_timeout: 10

```

1.4.3 Verifying configuration

You can verify that your configuration is correct with the `check_faucet_config` script:

```
check_faucet_config /etc/faucet/faucet.yaml
```

1.4.4 Configuration examples

For complete working examples of configuration features, see the unit tests, `tests/faucet_mininet_test.py`. For example, `FaucetUntaggedACLTest` shows how to configure an ACL to block a TCP port, `FaucetTaggedIPv4RouteTest` shows how to configure static IPv4 routing.

1.4.5 Applying configuration updates

You can update FAUCET's configuration by sending it a HUP signal. This will cause it to apply the minimum number of flow changes to the switch(es), to implement the change.

```
pkill -HUP -f faucet.faucet
```

1.4.6 Configuration in separate files

Extra DP, VLAN or ACL data can also be separated into different files and included into the main configuration file, as shown below. The `include` field is used for configuration files which are required to be loaded, and Faucet will log an error if there was a problem while loading a file. Files listed on `include-optional` will simply be skipped and a warning will be logged instead.

Files are parsed in order, and both absolute and relative (to the configuration file) paths are allowed. DPs, VLANs or ACLs defined in subsequent files overwrite previously defined ones with the same name.

`faucet.yaml`

```
include:
  - /etc/faucet/dps.yaml
  - /etc/faucet/vlans.yaml

include-optional:
  - acls.yaml
```

`dps.yaml`

```
# Recursive include is allowed, if needed.
# Again, relative paths are relative to this configuration file.
include-optional:
  - override.yaml

dps:
  test-switch-1:
    ...
  test-switch-2:
    ...
```

1.4.7 Environment variables

You can use environment variables to override default behaviour of faucet such as paths for configuration files and port numbers.

Environment Variable	Type	Default	Description
FAUCET_CONFIG	Colon-separated list of file paths	/etc/faucet/faucet.yaml: /etc/ryu/faucet/faucet.yaml	Faucet will load its configuration from the first valid file in list
FAUCET_STACK_ROOT_STATE_UP	int	10	Configures the number of seconds to wait before checking stack root health. If the current root is unhealthy, a new root will be nominated. If set to 0, Faucet will not check root node health.
FAUCET_CONFIG_AUTO_REVERT	boolean	False	If true, Faucet will attempt to revert a bad config file back to the last known good version.
FAUCET_CONFIG_STAT_RELOAD	boolean	False	If true, faucet will automatically reload itself and apply new configuration when FAUCET_CONFIG changes
FAUCET_LOG_LEVEL	Python log level	INFO	Log verbosity
FAUCET_LOG	File path or STD-OUT or STDERR	/var/log/faucet/faucet.log	Location for faucet to log messages to, can be special values STDOUT or STDERR
FAUCET_EXCEPTION_LOG	File path or STD-OUT or STDERR	/var/log/faucet/faucet_exception.log	Location for faucet log to log exceptions to, can be special values STDOUT or STDERR
FAUCET_EVENT_SOCK	Socket path		Location to a UNIX socket where faucet will write events to, or empty to disable events
FAUCET_EVENT_SOCK_HEARTBE	seconds	0	If set to a value greater than 0, it emits a dummy event every n seconds so that faucet knows if the event socket connection is broken and closes the connection on it's side.
FAUCET_PROMETHEUS_PORT	Port	9302	TCP port to listen on for faucet prometheus client
FAUCET_PROMETHEUS_ADDR	IP address	0.0.0.0	IP address to listen on for faucet prometheus client
GAUGE_CONFIG	Colon-separated list of file paths	/etc/faucet/gauge.yaml: /etc/ryu/faucet/gauge.yaml	Gauge will load it's configuration from the first valid file in list
GAUGE_CONFIG_STAT_RELOAD	boolean	False	If true, gauge will automatically reload itself and apply new configuration when GAUGE_CONFIG changes
GAUGE_LOG_LEVEL 1.4. Configuration	Python log level	INFO	Log verbosity
GAUGE_LOG	File path or STD-OUT or STDERR	/var/log/faucet/	Location for gauge to log messages to, can be special values STDOUT or STDERR

1.5 Monitoring

Faucet can be monitored in a number of ways. Both the faucet and gauge services export instrumentation data via a built-in Prometheus exporter which can be consumed by [Prometheus](#). By default the Prometheus exporter is available on port 9302, this can be changed with [Environment variables](#) (FAUCET_PROMETHEUS_PORT and FAUCET_PROMETHEUS_ADDR).

Gauge also collects conventional switch statistics (port counters, port state, etc) and can export these to a number of different databases (including Prometheus). For information on configuring gauge see the [Gauge configuration](#) section.

1.5.1 Prometheus metrics

Below is a list of the metrics exported by faucet and gauge.

Exported by faucet

Table 21: Faucet prometheus metrics

Metric	Type	Description
faucet_pbr_version	gauge	Faucet PBR version
ryu_config	gauge	ryu configuration option
faucet_stack_root_dpid	gauge	set to current stack root DPID
faucet_config_reload_requests_total	counter	number of config reload requests
faucet_config_load_error	gauge	1 if last attempt to re/load config failed
faucet_config_hash	info	file hashes for last successful config
faucet_config_hash_func	gauge	algorithm used to compute config hashes
faucet_config_applied	gauge	fraction of DPs that we have tried to apply config to
faucet_event_id	gauge	highest/most recent event ID to be sent
faucet_config_reload_warm_total	counter	number of warm, differences only config reloads executed
faucet_config_reload_cold_total	counter	number of cold, complete reprovision config reloads executed
of_ignored_packet_ins_total	counter	number of OF packet_ins received but ignored from DP (due to rate limiting)
of_unexpected_packet_ins_total	counter	number of OF packet_ins received that are unexpected from DP (e.g. for unknown VLAN)
of_packet_ins_total	counter	number of OF packet_ins received from DP
of_non_vlan_packet_ins_total	counter	number of OF packet_ins received from DP, not associated with a FAUCET VLAN
of_vlan_packet_ins_total	counter	number of OF packet_ins received from DP, associated with a FAUCET VLAN
of_flowmsgs_sent_total	counter	number of OF flow messages (and packet outs) sent to DP
of_errors_total	counter	number of OF errors received from DP
of_dp_connections_total	counter	number of OF connections from a DP
of_dp_disconnections_total	counter	number of OF connections from a DP
vlan_hosts_learned	gauge	number of hosts learned on a VLAN
port_vlan_hosts_learned	gauge	number of hosts learned on a port and VLAN
vlan_neighbors	gauge	number of L3 neighbors on a VLAN (whether resolved to L2 addresses, or not)
vlan_learn_bans	gauge	number of times learning was banned on a VLAN
faucet_config_table_names	gauge	number to names map of FAUCET pipeline tables

continues on next page

Table 21 – continued from previous page

Metric	Type	Description
faucet_packet_in_secs	his-togram	FAUCET packet in processing time
faucet_valve_service_secs	his-togram	FAUCET valve service processing time
bgp_neighbor_uptime	gauge	BGP neighbor uptime in seconds
bgp_neighbor_routes	gauge	BGP neighbor route count
learned_macs	gauge	MAC address stored as 64bit number to DP ID, port, VLAN, and n (discrete index)
port_status	gauge	status of switch ports
port_stack_state	gauge	state of stacking on a port
port_learn_bans	gauge	number of times learning was banned on a port
learned_l2_port	gauge	learned port of l2 entries
port_lacp_role	gauge	LACP role of a port
port_lacp_state	gauge	state of LACP on a port
dp_status	gauge	status of datapaths
dp_root_hop_port	gauge	port that leads to stack root DP
of_dp_desc_stats	gauge	DP description (OFPDescStatsReply)
stack_cabling_errors_total	counter	number of cabling errors detected in all FAUCET stacks
stack_probes_received_total	counter	number of stacking messages received
is_dp_stack_root	gauge	bool indicating if dp is stack root
dp_dot1x_success_total	counter	number of successful authentications on dp
dp_dot1x_failure_total	counter	number of authentications attempts failed on dp
dp_dot1x_logoff_total	counter	number of eap-logoff events on dp
port_dot1x_success_total	counter	number of successful authentications on port
port_dot1x_failure_total	counter	number of authentications attempts failed on port
port_dot1x_logoff_total	counter	number of eap-logoff events on port
lacp_port_id	gauge	lacp port ID for for port
port_stack_state_change_count_total	counter	number of changes in port stack state
port_lacp_state_change_count_total	counter	number of changes in port lacp state
stack_root_change_count_total	counter	number of changes in stack root

Exported by gauge

Table 22: Gauge prometheus metrics

Metric	Type	Description
faucet_pbr_version	gauge	Faucet PBR version
dp_status	gauge	status of datapaths
of_port_tx_packets	gauge	
of_port_rx_packets	gauge	
of_port_tx_bytes	gauge	
of_port_rx_bytes	gauge	
of_port_tx_dropped	gauge	
of_port_rx_dropped	gauge	
of_port_tx_errors	gauge	
of_port_rx_errors	gauge	
of_port_reason	gauge	
of_port_state	gauge	
of_port_curr_speed	gauge	
of_port_max_speed	gauge	
of_meter_flow_count	gauge	
of_meter_byte_in_count	gauge	
of_meter_packet_in_count	gauge	
of_meter_byte_band_count	gauge	
of_meter_packet_band_count	gauge	

1.6 Configuration Recipe Book

In this section we will cover some common network configurations and how you would configure these with the Faucet YAML configuration format.

1.6.1 Forwarding

1.6.2 Routing

1.6.3 Policy

1.7 Vendor-specific Documentation

1.7.1 Faucet on Allied Telesis products

Introduction

Allied Telesis has a wide portfolio of OpenFlow enabled switches that all support the Faucet pipeline. These OpenFlow enabled switches come in various port configurations of 10/18/28/52/96 with POE+ models as well. Here is a list of some of our most popular switches:

- AT-x930
- SBx908Gen2

- AT-x950
- AT-x510
- AT-x230

Setup

Switch

OpenFlow supported Firmware

OpenFlow has been supported since AlliedWarePlus version 5.4.6 onwards. To inquire more about compatibility of versions, you can contact our [customer support team](#).

OpenFlow configuration

For a **Pure OpenFlow** deployment, we recommend the following configurations on the switch. Most of these configuration steps will be shown with an example.

```
/* Create an OpenFlow native VLAN */
awplus (config)# vlan database
awplus (config-vlan)# vlan 4090

/* Set an IP address for Control Plane(CP)
 * Here we will use vlan1 for Management/Control Plane */
awplus (config)# interface vlan1
awplus (config-if)# ip address 192.168.1.1/24

/* Configure the FAUCET controller
 * Let's use TCP port 6653 for connection to Faucet */
awplus (config)# openflow controller tcp 192.168.1.10 6653

/* (OPTIONAL) Configure GAUGE controller
 * Let's use TCP port 6654 for connection to Gauge */
awplus (config)# openflow controller tcp 192.168.1.10 6654

/* NOTE - Starting from AlliedWarePlus version 5.4.8-2, we have added support for
controller name.
* You can specify a controller name with the optional <name> parameter.
* Users can still use the previous controller commands (without the name parameter) and
the switch will auto-generate
* a suitable name (starting with "oc") in that case.
* Here is an example to add a controller with name 'faucet' using TCP port 6653 */
awplus (config)# openflow controller faucet tcp 192.168.1.10 6653

/* User must set a dedicated native VLAN for OpenFlow ports
 * OpenFlow native VLAN MUST be created before it is set!
 * VLAN ID for this native VLAN must be different from the native VLAN for control plane
*/
awplus (config)# openflow native vlan 4090

/* Enable OpenFlow on desired ports */
awplus (config)# interface port1.0.1-1.0.46
awplus (config-if)# openflow
```

(continues on next page)

(continued from previous page)

```
/* Disable Spanning Tree Globally */
awplus (config)# no spanning-tree rstp enable

/* Disable Loop protection detection Globally */
awplus (config)# no loop-protection loop-detect

/* OpenFlow requires that ports under its control do not send any control traffic
 * So it is better to disable RSTP and IGMP Snooping TCN Query Solicitation.
 * Disable IGMP Snooping TCN Query Solicitation on the OpenFlow native VLAN */
awplus (config)# interface vlan4090
awplus (config-if)# no ip igmp snooping tcn query solicit
```

Once OpenFlow is up and running and connected to Faucet/Gauge controller, you should be able to verify the operation using some of our show commands.

```
/* To check contents of the DP flows */
awplus# show openflow flows

/* To check the actual rules as pushed by the controller */
awplus# show openflow rules

/* To check the OpenFlow configuration and other parameters */
awplus# show openflow status
awplus# show openflow config
awplus# show openflow coverage
```

Some other OPTIONAL configuration commands, that may be useful to modify some parameters, if needed.

```
/* Set the OpenFlow version other than default version(v1.3) */
awplus (config)# openflow version 1.0

/* Set IPv6 hardware filter size
 * User needs to configure the following command if a packet needs to be forwarded by ↴
 * IPv6 address matching! */
awplus (config)# platform hwfilter-size ipv4-full-ipv6

/* Set the datapath ID(DPID)
 * By default, we use the switch MAC address for datapath-ID.
 * To change the DPID to a hex value 0x1, use the following */
awplus (config)# openflow datapath-id 1

/* NOTE - For all software versions prior to 5.4.7, all data VLAN(s) must be included in ↴
 * the vlan database config
 * on the switch before they can be used by OpenFlow.
 * Here is an example to create DP VLANs 2-100 */
awplus (config)# vlan database
awplus (config-vlan)# vlan 2-100

/* NOTE - Starting from software version 5.4.8-2, in order to negate a controller, you ↴
 * need to specify the controller name.
 * In case you add the controller the legacy way (without the name), the newer software ↴
```

(continues on next page)

(continued from previous page)

```

→ will auto-generate a name which can be
* used to delete the controller.
* Here is an example to delete a controller with auto-generated name oc1 */
awplus (config)# no openflow controller oc1

```

Useful Switch related configurations

Note: If the Openflow controller is located in a different VLAN or Network segment, routing needs to be configured so that the switch can talk to the controller.

```

/* To set Timezone: Codes - https://www.timeanddate.com/time/zones/ */
/* For US Pacific Time zone */
awplus (config)# clock timezone NAPST minus 8

/* To set DNS, say a local Gateway also acting as a DNS forwarder 10.20.0.1 */
awplus (config)# ip name-server 10.20.0.1

/* To make sure that DNS and routing correctly work, Gateway address needs to be set.
 * Here, Gateway is set only to the management VLAN, vlan1; 255 is the max depth allowed.
→ */
awplus (config)# ip route 0.0.0.0/0 vlan1 255
awplus (config)# ip route 0.0.0.0/0 10.20.0.1

/* To see the configured Route database */
awplus# show ip route database

/* To test routing, ping Google.com - note the name to ip resolution */
awplus# ping google.com

```

Setting up PKI Certs for secure connectivity between Switch and Openflow Controller

Note: There are many ways to get the keys and certificates into the box. Here, both private key (unencrypted PEM formatted) and corresponding Certificate (PEM) as trusted by the Openflow Controller is provided to the Switch Admin for installation.

Getting keys into the Switch flash partition

```

/* Here SCP is used to copy. TFTP, USB, etc are other supported methods */
awplus# copy scp://user@10.20.5.5/home/user/switch-cert.pem switch-cert.pem
awplus# copy scp://user@10.20.5.5/home/user/switch-key_nopass.pem switch-key_nopass.pem

/* Showing only relevant files */
awplus# dir
1679 -rw- Dec 20 2017 09:04:35 switch-key_nopass.pem
11993 -rw- Dec 20 2017 09:04:03 switch-cert.pem

```

Setting up Trustpoint for SSL connectivity to Openflow Controller

```

/* Create a local trustpoint */
awplus (config)# crypto pki trustpoint local

```

(continues on next page)

(continued from previous page)

```
/* Point the switch to the OF controller */
awplus (config)# openflow controller ssl 192.168.1.10 6653

/* Allow OpenFlow to use local trustpoint */
awplus (config)# openflow ssl trustpoint local

/* Copy the new key and pvt keys to local trustpoint directory */
awplus# copy switch-key_nopass.pem .certs/pki/local/cakey.pem

Overwrite flash:/.certs/pki/local/cakey.pem (y/n) [n]:y
Copying...
Successful operation

awplus# copy switch-cert.pem .certs/pki/local/cacert.pem

Overwrite flash:/.certs/pki/local/cacert.pem (y/n) [n]:y
Copying...
Successful operation
```

Enabling SNMP for monitoring Management/Control Plane Port

Openflow enabled ports are monitored via Openflow Stats request/response protocol. This means that Management port (and if Openflow control channel port is separate), are not monitored on the switch. Hence, SNMP is used to monitor the same. SNMP v2 is the most widely used. As an example below, let us assume NMS is @ 10.20.30.71

```
/* Check contents of existing access-list */
awplus# show access-list

/* Enable the SNMP agent and enable the generation of authenticate
 * failure traps to monitor unauthorized SNMP access. */
awplus (config)# snmp-server enable trap auth

/* Creating a write access community called sfractalonprem1rw for use by
 * the central network management station at 10.20.30.71 */
awplus (config)# access-list 96 permit 10.20.30.71
awplus (config)# snmp-server community sfractalonprem1rw rw view atview 96

/* Enable link traps on VLANs or specific interfaces (in our case management port) */
awplus (config)# interface port1.0.1
awplus (config-if)# snmp trap link-status

/* Configuring Trap Hosts */
awplus (config)# snmp-server host 10.20.30.71 version 2c sfractalonprem1rw

/* Confirm all SNMP settings */
awplus# show snmp-server
SNMP Server ..... Enabled
IP Protocol ..... IPv4, IPv6
SNMP Startup Trap Delay ..... 30 Seconds
SNMPv3 Engine ID (configured name) ... Not set
SNMPv3 Engine ID (actual) ..... 0x80001f8880a2977c410e3bb658
```

(continues on next page)

(continued from previous page)

```

awplus# show snmp-server community
SNMP community information:
  Community Name ..... sfractalonprem1rw
    Access ..... Read-write
    View ..... atview

awplus# show run snmp
snmp-server
snmp-server enable trap auth
snmp-server community sfractalonprem1rw rw view atview 96
snmp-server host 10.20.30.71 version 2c sfractalonprem1rw
!

/* Check if the interface is configured for SNMP */
awplus# show interface port1.0.1
Interface port1.0.1
  Scope: both
  Link is UP, administrative state is UP
  Thrash-limiting
    Status Not Detected, Action learn-disable, Timeout 1(s)
  Hardware is Ethernet, address is 001a.eb96.6ef2
  index 5001 metric 1 mru 1500
  current duplex full, current speed 1000, current polarity mdi
  configured duplex auto, configured speed auto, configured polarity auto
  <UP,BROADCAST,RUNNING,MULTICAST>
  SNMP link-status traps: Sending (suppressed after 20 traps in 60 sec)
    Link-status trap delay: 0 sec
    input packets 14327037, bytes 3727488153, dropped 0, multicast packets 440768
      output packets 11172202, bytes 2028940085, multicast packets 233192 broadcastred
      packets 1889
    Time since last state change: 40 days 00:48:38

awplus# show access-list
Standard IP access list 96
  10 permit 10.20.30.71

```

Enabling sFlow for monitoring Management/Control Port

Openflow enabled ports are monitored via Openflow Stats request/response protocol. This means that Management port (and if Openflow control channel port is separate), are not monitored on the switch. Hence, sFlow is used to monitor the same. At this time, no TLS/SSL support is seen on the sFlow Controller channel.

```

/* Check for any existing sFlow configuration */
awplus# show running-config sflow
!

/* Enable sFlow globally */
awplus (config)# sflow enable
% INFO: sFlow will not function until collector address is non-zero
% INFO: sFlow will not function until agent address is set
awplus# show running-config sflow
!
sflow enable

```

(continues on next page)

(continued from previous page)

```
!
/* Confirm the new sFlow settings */
awplus# show sflow
sFlow Agent Configuration:                               Default Values
  sFlow Admin Status ..... Enabled                      [Disabled]
  sFlow Agent Address ..... [not set]                  [not set]
  Collector Address ..... 0.0.0.0                      [0.0.0.0]
  Collector UDP Port ..... 6343                        [6343]
  Tx Max Datagram Size ..... 1400                     [1400]

sFlow Agent Status:
  Polling/sampling/Tx ..... Inactive because:
    - Agent Addr is not set
    - Collector Addr is 0.0.0.0
    - Polling & sampling disabled on all ports

/* Agent IP MUST be the IP address of the management port of this switch */
awplus (config)# sflow agent ip 192.0.2.23

/* Default sFlow UDP collector port is 6343 */
awplus (config)# sflow collector ip 192.0.2.25 port 6343
awplus (config)# interface port1.0.1
awplus (config-if)# sflow polling-interval 120
awplus (config-if)# sflow sampling-rate 512

awplus# show running-config sflow
!
sflow agent ip 192.0.2.23
sflow collector ip 192.0.2.25
sflow enable
!
interface port1.0.1
  sflow polling-interval 120
  sflow sampling-rate 512
!
awplus#
```

Faucet

Edit the faucet configuration file (/etc/faucet/faucet.yaml) to add the datapath of the switch you wish to be managed by faucet. This yaml file also contains the interfaces that need to be seen by Faucet as openflow ports. The device type (hardware) should be set to **Allied-Telesis** in the configuration file.

Listing 51: /etc/faucet/faucet.yaml

```
dps:
  allied-telesis:
    dp_id: 0x0000eccd6d123456
    hardware: "Allied-Telesis"
    interfaces:
```

(continues on next page)

(continued from previous page)

```

1:
  native_vlan: 100
  name: "port1.0.1"
2:
  tagged_vlans: [2001,2002,2003]
  name: "port1.0.2"
  description: "windscale"

```

References

- Allied Telesis x930
- OpenFlow Configuration Guide
- Chapter 61 (SNMP)
- SNMP Feature Guide

1.7.2 Faucet on HPE-Aruba Switches

Introduction

All the Aruba's v3 generation of wired switches support the FAUCET pipeline. These switches include:

- 5400R
- 3810
- 2930F

The FAUCET pipeline is only supported from 16.03 release of the firmware onwards. HPE Aruba recommends use of the latest available firmware, which can be downloaded from [HPE Support](#).

For any queries, please post your question on HPE's [SDN forum](#).

Caveats

- IPv6 management of the switch, together OpenFlow is not supported.
- The OFPAT_DEC_NW_TTL action is not supported (when FAUCET is configured as a router, IP TTL will not be decremented).

Setup

In all configuration examples following, substitute 10.0.0.1 for your controller IP address, and 10.0.0.2 for your switch IP address, as appropriate. VLAN 2048 is used for the control plane - you can substitute this for another VID. In any case, the control plane VLAN VID you reserve cannot be used in FAUCET's configuration file (ie. it cannot be controlled by OpenFlow).

Switch

Chassis configuration (5400R only)

Skip this step if you have a fixed configuration system (2930 or 3810).

On a chassis system with insertable cards, new cards are configured to work in a backwards-compatible way (with reduced functionality) unless older cards are disabled in the chassis. To disable older (V2) cards and enable all functionality necessary to operate FAUCET, put the chassis into a mode where only V3 cards are allowed.

```
// Disable backwards compatibility, enable full Openflow flexibility
switch (config)# no allow-v2-modules
```

VLAN/port configuration

Aruba switches require the reservation of each VLAN VID you wish to use in FAUCET, on the switch. Some Aruba switches will allow you to reserve a large range of VIDs at once. If your switch has limited resources, then reserve just the VIDs you need.

The reservation of a VID is accomplished by defining a tagged VLAN. Note even you are using that VLAN VID untagged on a port in FAUCET, it must be reserved as tagged on the switch

- *Using OOBM control-plane (3810, 5400R)*

```
// Increase the maximum number of allowed VLANs on the box and save the configuration.
// If the switch cannot reserve the full range, reserve only the maximum you need.
switch (config)# max-vlans 4094
switch (config)# write mem

// Reboot the box for the new max-vlan configuration to take affect.
switch (config)# boot system

// Configure the control-plane IP address
switch (config)# oobm ip address 10.0.0.2/24

// Create maximum number of VLANs and tag every dataplane port available to each vlan. ↴
// Takes up to 30 minutes.
// If the switch cannot reserve the full range, reserve only the VLANs needed. ↴
// individually.
switch (config)# vlan 2-4094 tagged all
```

- *Using VLAN control-plane (2930)*

```
// Increase the maximum number of allowed VLANs on the box and save the configuration.
// If the switch cannot reserve the full range, reserve only the maximum you need.
switch (config)# max-vlans 2048
switch (config)# write mem

// Reboot the box for the new max-vlan configuration to take affect.
switch (config)# boot system

// Create a control-plane vlan and add a single control-plane port (port 48)
switch (config)# vlan 2048 untagged 48
switch (config)# vlan 2048 ip address 10.0.0.2/24

// Create maximum number of VLANs and tag every dataplane port available to each vlan,
```

(continues on next page)

(continued from previous page)

```
// except for the control-plane vlan (above). Note that the command below assumes it
// is run on a 52-port switch, with port 48 as the control-plane. Takes up to 20 minutes.
// If the switch cannot reserve the full range, reserve only the VLANs needed
// individually.
switch (config)# vlan 2-2047 tagged 1-47,49-52
```

OpenFlow configuration

Aruba switches reference a controller by ID, so first configure the controllers which will be used. The controller-interface matches the control-plane configuration above.

- *Using OOBM control-plane (3810, 5400R)*

```
// Enter OpenFlow context
switch (config)# openflow

// Configure an OpenFlow controller connection for FAUCET over tcp-port 6653
switch(openflow)# controller-id 1 ip 10.0.0.1 port 6653 controller-interface oobm

// Configure an OpenFlow controller connection for Gauge over tcp-port 6654
switch(openflow)# controller-id 2 ip 10.0.0.1 port 6654 controller-interface oobm
```

- *Using VLAN control-plane (2930)*

```
// Enter OpenFlow context
switch (config)# openflow

// Configure an OpenFlow controller connection for FAUCET over tcp-port 6653
switch(openflow)# controller-id 1 ip 10.0.0.1 port 6653 controller-interface vlan 2048

// Configure an OpenFlow controller connection for Gauge over tcp-port 6654
switch(openflow)# controller-id 2 ip 10.0.0.1 port 6654 controller-interface vlan 2048
```

```
// Enter the OpenFlow instance context
switch(openflow)# instance aggregate

// Associate the controllers to the instance
switch(of-inst-aggregate)# controller-id 1
switch(of-inst-aggregate)# controller-id 2

// Associate the controllers in secure mode to the instance
switch(of-inst-aggregate)# controller-id 1 secure
switch(of-inst-aggregate)# controller-id 2 secure

// Configure the OpenFlow version to be 1.3
switch(of-inst-aggregate)# version 1.3 only

// Configure the pipeline model type of the instance. It is a must to set it to custom.
switch(of-inst-aggregate)# pipeline-model custom

// Configure the payload in the packet-ins message to be sent in its original form.
switch(of-inst-aggregate)# packet-in vlan-tagging input-form
```

(continues on next page)

(continued from previous page)

```
// Ensure the switch re-attempts an OpenFlow connection at least once
// every 10 seconds when connection is dropped/inactive.
switch(of-inst-aggregate)# max-backoff-interval 10

// Allow OpenFlow to override some protocols which are otherwise excluded from OpenFlow
// processing in switch CPU.
switch(of-inst-aggregate)# override-protocol all
WARNING: Overriding the protocol can also potentially lead to control packets
          of the protocol to bypass any of the security policies like ACL(s).
Continue (y/n)? y

// Enable the instance
switch(of-inst-aggregate)# enable
switch(of-inst-aggregate)# exit

// Enable OpenFlow globally
switch(openflow)# enable
switch(openflow)# exit

// To save the Configuration
switch# save
switch# write mem

// Show running Configuration
switch# show running-config

// Check the OpenFlow instance configuration (includes Datapath ID associated)
switch# show openflow instance aggregate
...
// Easier way to get the Datapath ID associated with the OpenFlow instance
switch# show openflow instance aggregate | include Datapath ID
          : 00013863bbc41800
```

At this point, OpenFlow is enabled and running on the switch. If the FAUCET controller is running and has connected to the switch successfully, you should see the FAUCET pipeline programmed on the switch.

NOTE: following is an example only, and may look different depending on FAUCET version and which FAUCET features have been enabled.

```
switch# show openflow instance aggregate flow-table
```

OpenFlow Instance Flow Table Information

Table ID	Table Name	Flow Count	Miss Count	Goto Table
0	Port ACL	5	0	1, 2, 3, 4...
1	VLAN	10	0	2, 3, 4, 5...
2	VLAN ACL	1	0	3, 4, 5, 6...
3	Ethernet Source	2	0	4, 5, 6, 7, 8
4	IPv4 FIB	1	0	5, 6, 7, 8
5	IPv6 FIB	1	0	6, 7, 8

(continues on next page)

(continued from previous page)

6	VIP	1	0	7, 8
7	Ethernet Destination	2	0	8
8	Flood	21	0	*

Table

ID	Table Name	Available Free Flow Count
0	Port ACL	Ports 1-52 : 46
1	VLAN	Ports 1-52 : 91
2	VLAN ACL	Ports 1-52 : 50
3	Ethernet Source	Ports 1-52 : 99
4	IPv4 FIB	Ports 1-52 : 100
5	IPv6 FIB	Ports 1-52 : 100
6	VIP	Ports 1-52 : 20
7	Ethernet Destination	Ports 1-52 : 99
8	Flood	Ports 1-52 : 280

0	Port ACL	Ports 1-52	: 46
1	VLAN	Ports 1-52	: 91
2	VLAN ACL	Ports 1-52	: 50
3	Ethernet Source	Ports 1-52	: 99
4	IPv4 FIB	Ports 1-52	: 100
5	IPv6 FIB	Ports 1-52	: 100
6	VIP	Ports 1-52	: 20
7	Ethernet Destination	Ports 1-52	: 99
8	Flood	Ports 1-52	: 280

* Denotes that the pipeline could end here.

```
switch# show openflow instance aggregate
    Configured OF Version      : 1.3 only
    Negotiated OF Version     : 1.3
    Instance Name              : aggregate
    Data-path Description      : aggregate
    Administrator Status       : Enabled
    Member List                : VLAN 1, 2, 3, 4, 5, 6, 7, 8, 9, 10, 11, 12,
```

.....

.....

Controller Id	Connection Status	Connection State	Secure	Role
1	Connected	Active	Yes	Equal
2	Connected	Active	Yes	Equal

```
// To just get openflow controllers
switch (openflow)# show openflow controllers
```

Controller Information

Controller Id	IP Address	Hostname	Port	Interface
1	0.0.0.0	controller-1.t...	6653	VLAN 2048
2	0.0.0.0	controller-1.t...	6654	VLAN 2048

```
// Copy Running Config to a TFTP Server
// (first enable TFTP client)
switch (config)# tftp client
```

Faucet

On the FAUCET configuration file (`/etc/faucet/faucet.yaml`), add the datapath of the switch you wish to be managed by FAUCET. The device type (hardware) MUST be set to Aruba in the configuration file.

Listing 52: `/etc/faucet/faucet.yaml`

```
dps:  
  aruba-3810:  
    dp_id: <DP ID from *show openflow instance aggregate | include Datapath  
    ↵ID*>  
    hardware: "Aruba"  
    interfaces:  
      1:  
        native_vlan: 100  
      2:  
        native_vlan: 100
```

Debug

If you encounter a failure or unexpected behavior, it may help to enable debug output on Aruba switches. Debug output displays information about what OpenFlow is doing on the switch at message-level granularity.

```
switch# debug openflow  
switch# debug destination session  
switch# show debug  
  
Debug Logging  
  
Source IP Selection: Outgoing Interface  
Origin identifier: Outgoing Interface IP  
Destination:  
Session  
  
Enabled debug types:  
openflow  
openflow packets  
openflow events  
openflow errors  
openflow packets tx  
openflow packets rx  
openflow packets tx pkt_in  
openflow packets rx pkt_out  
openflow packets rx flow_mod
```

PKI setup on switch (OPTIONAL)

Only complete this section if you wish to secure the OpenFlow connection between switch and FAUCET with certificates.

Note: The root certificate container supports only one root certificate not a chain. So, install the one that the CSR (Certificate Signing Request) is signed with.

```
// Configure DNS. Here DNS is set to a local LAN DNS server
switch (config)# ip dns server-address priority 1 10.0.0.1

switch# show crypto pki application

    Certificate Extension Validation :

    Application      SAN/CN
    -----
    openflow          Disabled
    syslog            Disabled

// Here, we create CA profile
switch (config)# crypto pki ta-profile EXAMPLE_CA

// Copy the root certificate for the EXAMPLE_CA from a tftp server
switch# copy tftp ta-certificate EXAMPLE_CA 10.0.0.1 myswitch.cert.pem

switch# show crypto pki ta-profile EXAMPLE_CA
    Profile Name      Profile Status          CRL Configured  OCSP Configured
    -----
    EXAMPLE_CA 1 certificate installed        No           No

    Trust Anchor:
    Version: 3 (0x2)
    Serial Number: 4096 (0x1000)
    Signature Algorithm: sha256withRSAEncryption
    ...
    .....

    // Now we are ready to create a CSR so that a switch identity certificate that
    // is accepted by the controller can be set up.

switch (config)# crypto pki identity-profile hpe_sf_switch1 subject common-name myswitch_
    org MyOrgName org-unit MyOrgUnit locality MyCity state CA country US

switch (config)# show crypto pki identity-profile
    Switch Identity:
        ID Profile Name      : hpe_sf_switch1
        Common Name (CN) : myswitch
        Org Unit (OU)      : MyOrgUnit
        Org Name (O)       : MyOrgName
        Locality (L)       : MyCity
        State (ST)         : CA
```

(continues on next page)

(continued from previous page)

```
Country (C)      : US

// Generate CSR
switch (config)# crypto pki create-csr certificate-name hpewt_switch1_crt ta-profile_
→EXAMPLE_CA usage openflow

// Copy the printed CSR request and send it to "EXAMPLE_CA"

switch (config)# show crypto pki local-certificate summary
  Name          Usage       Expiration   Parent / Profile
  -----
  hpewt_switch1_crt  Openflow     CSR           EXAMPLE_CA

// Once the signed certificate is received, copy the same to switch.
switch (config)# copy tftp local-certificate 10.0.0.1 myswitch.cert.pem
  000M Transfer is successful

switch (config)# show crypto pki local-certificate summary
  Name          Usage       Expiration   Parent / Profile
  -----
  hpewt_switch1_crt  Openflow     2019/01/02  EXAMPLE_CA
```

References

- Aruba OpenFlow Administrator Guide (16.03)
- Aruba OS version as of Dec 2017 is 16.05
- Aruba Switches
- FAUCET
- Model 2390F Product Site
- 2930F top level documentation
- Password settings
- PKI Setup

1.7.3 Faucet on Lagopus

Introduction

Lagopus is a software OpenFlow 1.3 switch, that also supports DPDK.

FAUCET is supported as of Lagopus 0.2.11 (<https://github.com/lagopus/lagopus/issues/107>).

Setup

Lagopus install on a supported Linux distribution

Install Lagopus according to the [quickstart guide](#). You don't need to install Ryu since we will be using FAUCET and FAUCET's installation takes care of that dependency.

These instructions are for Ubuntu 16.0.4 (without DPDK). In theory any distribution, with or without DPDK, that Lagopus supports will work with FAUCET.

Create lagopus.dsl configuration file

In this example, Lagopus is controlling two ports, enp1s0f0 and enp1s0f1, which will be known as OpenFlow ports 1 and 2 on DPID 0x1. FAUCET and Lagopus are running on the same host (though of course, they don't need to be).

Listing 53: /usr/local/etc/lagopus/lagopus.dsl

```
channel channel01 create -dst-addr 127.0.0.1 -protocol tcp
controller controller01 create -channel channel01 -role equal -connection-type main
interface interface01 create -type ethernet-rawsock -device enp1s0f0
interface interface02 create -type ethernet-rawsock -device enp1s0f1
port port01 create -interface interface01
port port02 create -interface interface02
bridge bridge01 create -controller controller01 -port port01 1 -port port02 2 -dpid 0x1
bridge bridge01 enable
```

Create faucet.yaml

Listing 54: /etc/faucet/faucet.yaml

```
vlans:
  100:
    name: "test"
dps:
  lagopus-1:
    dp_id: 0x1
    hardware: "Lagopus"
    interfaces:
      1:
        native_vlan: 100
      2:
        native_vlan: 100
```

Start Lagopus

Start in debug mode, in a dedicated terminal.

```
lagopus -d
```

Run FAUCET

```
faucet --verbose --ryu-ofp-listen-host=127.0.0.1
```

Test connectivity

Host(s) on `enp1s0f0` and `enp1s0f1` in the same IP subnet, should now be able to communicate, and FAUCET's log file should indicate learning is occurring:

Listing 55: `/var/log/faucet/faucet.log`

```
May 11 13:04:57 faucet.valve INFO      DPID 1 (0x1) Configuring DP
May 11 13:04:57 faucet.valve INFO      DPID 1 (0x1) Delete VLAN vid:100 ports:1,2
May 11 13:04:57 faucet.valve INFO      DPID 1 (0x1) VLANs changed/added: [100]
May 11 13:04:57 faucet.valve INFO      DPID 1 (0x1) Configuring VLAN vid:100 ports:1,2
May 11 13:04:57 faucet.valve INFO      DPID 1 (0x1) Configuring VLAN vid:100 ports:1,2
May 11 13:04:57 faucet.valve INFO      DPID 1 (0x1) Port 1 added
May 11 13:04:57 faucet.valve INFO      DPID 1 (0x1) Sending config for port 1
May 11 13:04:57 faucet.valve INFO      DPID 1 (0x1) Port 2 added
May 11 13:04:57 faucet.valve INFO      DPID 1 (0x1) Sending config for port 2
May 11 13:04:57 faucet.valve INFO      DPID 1 (0x1) Packet_in src:00:16:41:6d:87:28 in_
→port:1 vid:100
May 11 13:04:57 faucet.valve INFO      learned 1 hosts on vlan 100
May 11 13:04:57 faucet.valve INFO      DPID 1 (0x1) Packet_in src:00:16:41:32:87:e0 in_
→port:2 vid:100
May 11 13:04:57 faucet.valve INFO      learned 2 hosts on vlan 100
```

1.7.4 Faucet on ZodiacFX

Introduction

ZodiacFX is a small 4 port multi table OF1.3 switch from [Northbound Networks](#).

Caveats

- ZodiacFX allows only one controller (so you cannot run Gauge).
- The default OF port is 6633; it is recommended to use 6653.
- It is recommended to enable ether type filtering to minimize corrupt packets.

Applying recommended config

You can use the following expect script to program the recommended configuration:

Listing 56: conf-zodiac.sh

```
#!/usr/bin/expect

##
## configure ZodiacFX with recommended settings.
##

# Serial port assigned to ZodiacFX
set port /dev/ttyACM0

# ZodiacFX network settings
set configip "10.0.1.99"
set confignetmask "255.255.255.0"
set configgateway "10.0.1.1"

# OpenFlow controller network settings
set configofcontroller "10.0.1.8"
set configofport 6653

set timeout 5
set prompt {Zodiac_FX\#}
set configprompt {Zodiac_FX\(config)\#}
set spawned [spawn -open [open $port w+]]

send_user "get initial prompt\n"
send "\r"
send "\r"
expect -re $prompt
send_user "found initial prompt\n"
send "config\r"
expect -re $configprompt
send_user "setting ethertype-filter\n"
send "set ethertype-filter enable\r"
expect -re $configprompt
send_user "setting IP address\n"
send "set ip-address $configip\r"
expect -re $configprompt
send "set netmask $confignetmask\r"
expect -re $configprompt
send "set gateway $configgateway\r"
expect -re $configprompt
send_user "setting OF controller\n"
send "set of-controller $configofcontroller\r"
expect -re $configprompt
send "set of-port $configofport\r"
expect -re $configprompt
send_user "save configuration\n"
send "show config\r"
```

(continues on next page)

(continued from previous page)

```
expect -re $configprompt
send "save\r"
expect -re $configprompt
send "exit\r"
expect -re $prompt
send "restart\r"
expect -re "Restarting"
```

Example of running the script:

```
$ sudo ./conf-zodiac.sh
spawn [open ...]
get initial prompt

____ / ____ _ _ / ( ) _ _ _ _ / _ / | / /
 / / / _ \ \ _ / / _ \ _ / / / _ | / /
 / / _ / / / / / / / / / / / / _ / / / |
/ _ / \ _ / \ _ , / _ / \ _ , / \ _ / / _ / / | _ |
by Northbound Networks
```

Type 'help' for a list of available commands

```
Zodiac_FX#
Zodiac_FX# found initial prompt
config
Zodiac_FX(config)# setting ethertype-filter
set ethertype-filter enable
EtherType Filtering Enabled
Zodiac_FX(config)# setting of-portset of-port 6653
OpenFlow Port set to 6653
Zodiac_FX(config)# save
Writing Configuration to EEPROM (197 bytes)
Zodiac_FX(config)# exit
Zodiac_FX# restart
Restarting the Zodiac FX, please reopen your terminal application.
```

1.7.5 Faucet on ZodiacGX

Introduction

ZodiacGX is a small 5 port multi table OF1.3 switch from [Northbound Networks](#). Please see the documentation for configuring OpenFlow on the switch, and use ZodiacGX as the FAUCET hardware type.

Caveats

- The default OF port is 6633; it is recommended to use 6653.
- Minimum firmware required is v1.01

1.7.6 Faucet on NoviFlow

Introduction

NoviFlow provide a range of switches known to work with FAUCET.

These instructions have been tested on NS1248, NS1132, NS2116, NS2128, NS2122, NS2150, NS21100 switches, using NoviWare versions starting from NW400.5.4, running with FAUCET v1.8.14.

Compared to older versions of NoviWare and Faucet, where manual pipeline configuration was required, it is possible to use the GenericTFM Hardware type to make Faucet automatically program the tables based on the needs of its current configuration.

Setup

Configure the CPN on the switch

The only configuration required in the switch is the definition of the IP and ports on which the Faucet controller must be reached. Optionally it is also possible to change the switch DPID. In this example, the server running FAUCET is 10.0.1.8; configuration for CPN interfaces is not shown.

```
set config controller controllergroup faucet controllerid 1 priority 1 ipaddr 10.0.1.8
  ↵port 6653 security none
set config controller controllergroup gauge controllerid 1 priority 1 ipaddr 10.0.1.8
  ↵port 6654 security none
set config switch dpid 0x1
```

Create faucet.yaml

In order to exploit the automatic pipeline configuration, the hardware specified in `faucet.yaml` must be GenericTFM

```
vlan:
  100:
    name: "test"
dps:
  noviflow-1:
    dp_id: 0x1
    hardware: "GenericTFM"
    interfaces:
      1:
        native_vlan: 100
      2:
        native_vlan: 100
    etc...
```

Run FAUCET

```
faucet --verbose
```

Using Older Faucet and NoviWare versions

Before the introduction of GenericTFM, Faucet used a static pipeline which needed to be configured in the switch before connecting to the controller. The following match configuration is known to pass the unit tests using NW400.4.3 with FAUCET 1.6.18, but take care to adjust ACL tables matches based on the type of ACL rules defined in the configuration file. Different FAUCET releases may also use different match fields in the other tables.

```
set config pipeline tablesizes 1524 1024 1024 5000 3000 1024 1024 5000 1024 tablewidths ↵
  ↵ 80 40 40 40 40 40 40 40
set config table tableid 0 matchfields 0 3 4 5 6 10 11 12 13 14 23 29 31
set config table tableid 1 matchfields 0 3 4 5 6
set config table tableid 2 matchfields 0 5 6 10 11 12 14
set config table tableid 3 matchfields 0 3 4 5 6 10
set config table tableid 4 matchfields 5 6 12
set config table tableid 5 matchfields 5 6 27
set config table tableid 6 matchfields 3 5 10 23 29
set config table tableid 7 matchfields 3 6
set config table tableid 8 matchfields 0 3 6
```

Note that this table configuration will allow most of the automated test cases to pass, except FaucetIPv6TupleTest (which requires IPv6 Src and Dst matching in the ACL table). In order to run this test, table 0 must be configured as follows:

```
set config table tableid 0 matchfields 0 5 6 10 26 27 13 14
```

1.7.7 Faucet on Cisco Switches

Introduction

Cisco supports Openflow with faucet pipeline on the Catalyst 9000 Series switches.

Cisco IOS XE first introduced faucet support in version 16.9.1, however since faucet support is being continually improved on Cisco platforms we recommend running the latest stable release. Currently we would recommend running 16.12.1c or later.

For official Cisco documentation on OpenFlow and faucet support see the following configuration guide:

- Programmability Configuration Guide, Cisco IOS XE Gibraltar 16.12.x

Setup

Boot up in Openflow Mode

The Catalyst 9K will be in traditional switching mode by default. The below command will enable Openflow mode on the switch.

```
Switch-C9300#
Switch-C9300#configure terminal
Switch-C9300(config)#boot mode ?
openflow  openflow forwarding mode

Switch-C9300(config)#boot mode openflow
Changes to the boot mode preferences have been stored,
but it cannot take effect until the next reload.
Use "show boot mode" to check the boot mode currently
active.
Switch-C9300(config)#end

Switch-C9300#show boot mode
System initialized in normal switching mode
System configured to boot in openflow forwarding mode

Reload required to boot switch in configured boot mode.

Switch-C9300#reload
```

Configure Openflow

** Configure the Management interface communicate with controller. **

```
Switch-C9300#
Switch-C9300#configure terminal
Switch-C9300(config)#interface GigabitEthernet0/0
Switch-C9300(config-if)#vrf forwarding Mgmt-vrf
Switch-C9300(config-if)#ip address 192.168.0.41 255.255.255.0
Switch-C9300(config-if)#negotiation auto
Switch-C9300(config-if)#end
Switch-C9300#
```

** Configure the Openflow feature and controller connectivity. **

```
Switch-C9300#
Switch-C9300#configure terminal
Switch-C9300(config)#feature openflow
Switch-C9300(config)#openflow
Switch-C9300(config-openflow)#switch 1 pipeline 1
Switch-C9300(config-openflow-switch)#controller ipv4 192.168.0.91 port 6653 vrf Mgmt-vrf_
↳ security none
Switch-C9300(config-openflow-switch)#controller ipv4 192.168.0.91 port 6654 vrf Mgmt-vrf_
↳ security none
Switch-C9300(config-openflow-switch)#datapath-id 0xABCD1234
```

(continues on next page)

(continued from previous page)

```
Switch-C9300(config-openflow-switch)#end  
Switch-C9300#
```

** Disable DTP/keepalive on OpenFlow ports which may interfere with FAUCET. **

The following example will disable DTP and keepalives for TenGigabitEthernet1/0/1-24; adjust the range as necessary.

```
Switch-C9300(config)#interface range TenGigabitEthernet1/0/1-24  
Switch-C9300(config-if-range)#switchport mode trunk  
Switch-C9300(config-if-range)#switchport nonegotiate  
Switch-C9300(config-if-range)#spanning-tree bpduguard enable  
Switch-C9300(config-if-range)#no keepalive  
Switch-C9300(config-if-range)#exit
```

** Configure TCP window. **

Configure a larger than default TCP window, so that the switch can output OpenFlow messages to controllers more efficiently.

See [https://www.cisco.com/c/en/us/td/docs/ios-xml/ios/ipapp/configuration/xe-3s/iap-xe-3s-book/](https://www.cisco.com/c/en/us/td/docs/ios-xml/ios/ipapp/configuration/xe-3s/iap-xe-3s-book/iap-tcp.html#GUID-69BF753F-A478-4B38-808F-D7830EB7B70F)
[iap-tcp.html#GUID-69BF753F-A478-4B38-808F-D7830EB7B70F](https://www.cisco.com/c/en/us/td/docs/ios-xml/ios/ipapp/configuration/xe-3s/iap-xe-3s-book/iap-tcp.html#GUID-69BF753F-A478-4B38-808F-D7830EB7B70F)

```
Switch-C9300#configure terminal  
Switch-C9300(config)#ip tcp window-size 65535  
Switch-C9300(config)#exit  
Switch-C9300#
```

Faucet

On the FAUCET configuration file (`/etc/faucet/faucet.yaml`), add the datapath of the switch you wish to be managed by FAUCET. The device type (hardware) should be set to `CiscoC9K` in the configuration file.

Listing 57: /etc/faucet/faucet.yaml

```

dps:
  Cisco-C9K:
    dp_id: 0xABCDEF1234
    hardware: "CiscoC9K"
    interfaces:
      1:
        native_vlan: 100
        name: "port1"
      2:
        native_vlan: 100
        name: "port2"

```

Troubleshooting

Command to check overall openflow configuration

```

Switch-C9300#
Switch-C9300#show openflow switch 1
Logical Switch Context
  Id: 1
  Switch type: Forwarding
  Pipeline id: 1
  Data plane: secure
  Table-Miss default: drop
  Configured protocol version: Negotiate
  Config state: no-shutdown
  Working state: enabled
  Rate limit (packet per second): 0
  Burst limit: 0
  Max backoff (sec): 8
  Probe interval (sec): 5
  TLS local trustpoint name: not configured
  TLS remote trustpoint name: not configured
  Logging flow changes: Disabled
  Stats collect interval (sec): 5
  Stats collect Max flows: 9216
  Stats collect period (sec): 1
  Minimum flow idle timeout (sec): 10
  OFA Description:
    Manufacturer: Cisco Systems, Inc.
    Hardware: C9300-48P
    Software: Cisco IOS Software [Fuji], Catalyst L3 Switch Software (CAT9K_IOSXE), ↴
    Version 16.8.1G03, RELEASE SOFTWARE (fc1) | openvswitch 2.1
    Serial Num: FCW2145L0FP
    DP Description: Faucet-C9300:sw1
  OF Features:
    DPID: 0x000000ABCDEF1234
    Number of tables: 9
    Number of buffers: 256

```

(continues on next page)

(continued from previous page)

```
Capabilities: FLOW_STATS TABLE_STATS PORT_STATS
Controllers:
    192.168.0.91:6653, Protocol: TCP, VRF: Mgmt-vrf
    192.168.0.91:6654, Protocol: TCP, VRF: Mgmt-vrf
Interfaces:
    GigabitEthernet1/0/1
    GigabitEthernet1/0/2
    ...
```

Command to check the openflow flows installed

```
Switch-C9300#
Switch-C9300#show openflow switch 1 flow list
    Logical Switch Id: 1
    Total flows: 9

    Flow: 1 Match: any Actions: drop, Priority: 0, Table: 0, Cookie: 0x0, Duration: 0x0
    ↪ 33812.029s, Packets: 46853, Bytes: 3636857
    ...
```

Command to check the state of the port status

```
Switch-C9300#
Switch-C9300#show openflow switch 1 ports
    Logical Switch Id: 1
    Port      Interface Name     Config-State     Link-State   Features
        1          Gi1/0/1      PORT_UP        LINK_UP     1GB-HD
        2          Gi1/0/2      PORT_UP        LINK_DOWN   1GB-HD
        3          Gi1/0/3      PORT_UP        LINK_DOWN   1GB-HD
        4          Gi1/0/4      PORT_UP        LINK_DOWN   1GB-HD
```

Command to check the status of the controller

```
Switch-C9300#
Switch-C9300#show openflow switch 1 controller
Logical Switch Id: 1
Total Controllers: 2

Controller: 1
    192.168.0.91:6653
    Protocol: tcp
    VRF: Mgmt-vrf
    Connected: Yes
    Role: Equal
    Negotiated Protocol Version: OpenFlow 1.3
    Last Alive Ping: 2018-10-03 18:43:07 NZST
    state: ACTIVE
    sec_since_connect: 13150

Controller: 2
    192.168.0.91:6654
    Protocol: tcp
    VRF: Mgmt-vrf
```

(continues on next page)

(continued from previous page)

```
Connected: Yes
Role: Equal
Negotiated Protocol Version: OpenFlow 1.3
Last Alive Ping: 2018-10-03 18:43:07 NZST
state: ACTIVE
sec_since_connect: 12960
```

Command to check controller statistics

```
Switch-C9300#
Switch-C9300#show openflow switch 1 controller stats
Logical Switch Id: 1
Total Controllers: 2

Controller: 1
address : tcp:192.168.0.91:6653%Mgmt-vrf
connection attempts : 165
successful connection attempts : 61
flow adds : 1286700
flow mods : 645
flow deletes : 909564
flow removals : 0
flow errors : 45499
flow unencodable errors : 0
total errors : 45499
echo requests : rx: 842945, tx:205
echo reply : rx: 140, tx:842945
flow stats : rx: 0, tx:0
barrier : rx: 8324752, tx:8324737
packet-in/packet-out : rx: 29931732, tx:8772758

Controller: 2
address : tcp:192.168.0.91:6654%Mgmt-vrf
connection attempts : 11004
successful connection attempts : 3668
flow adds : 0
flow mods : 0
flow deletes : 0
flow removals : 0
flow errors : 0
flow unencodable errors : 0
total errors : 0
echo requests : rx: 946257, tx:1420
echo reply : rx: 1420, tx:946257
flow stats : rx: 47330, tx:57870
barrier : rx: 0, tx:0
packet-in/packet-out : rx: 377, tx:0
```

References

- [Catalyst 9K at-a-glance](#)
- [Catalyst 9400 SUP1](#)
- [Catalyst 9400 Linecard](#)

1.7.8 Faucet on OVS with DPDK

Introduction

Open vSwitch is a software OpenFlow switch, that supports DPDK. It is also the reference switching platform for FAUCET.

Setup

Install OVS on a supported Linux distribution

Install OVS and DPDK per the [official OVS instructions](#), including enabling DPDK at compile time and in OVS's initial configuration.

These instructions are known to work for Ubuntu 16.0.4, with OVS 2.7.0 and DPDK 16.11.1, kernel 4.4.0-77. In theory later versions of these components should work without changes. A multiport NIC was used, based on the Intel 82580 chipset.

Bind NIC ports to DPDK

Note: If you have a multiport NIC, you must bind all the ports on the NIC to DPDK, even if you do not use them all.

From the DPDK source directory, determine the relationship between the interfaces you want to use with DPDK and their PCI IDs:

```
export DPDK_DIR=`pwd`  
$DPDK_DIR/tools/dpdk-devbind.py --status
```

In this example, we want to use enp1s0f0 and enp1s0f1.

```
$ ./tools/dpdk-devbind.py --status  
  
Network devices using DPDK-compatible driver  
=====  
<none>  
  
Network devices using kernel driver  
=====  
0000:01:00.0 '82580 Gigabit Network Connection' if=enp1s0f0 drv=igb unused=  
0000:01:00.1 '82580 Gigabit Network Connection' if=enp1s0f1 drv=igb unused=  
0000:01:00.2 '82580 Gigabit Network Connection' if=enp1s0f2 drv=igb unused=  
0000:01:00.3 '82580 Gigabit Network Connection' if=enp1s0f3 drv=igb unused=
```

Still from the DPDK source directory:

```
export DPDK_DIR=`pwd`
modprobe vfio-pci
chmod a+x /dev/vfio
chmod 0666 /dev/vfio/*
$DPDK_DIR/tools/dpdk-devbind.py --bind=vfio-pci 0000:01:00.0 0000:01:00.1 0000:01:00.2
↪ 0000:01:00.3
$DPDK_DIR/tools/dpdk-devbind.py --status
```

Confirm OVS has been configured to use DPDK

```
$ sudo /usr/local/share/openvswitch/scripts/ovs-ctl stop
* Exiting ovs-vswitchd (20510)
* Exiting ovsdb-server (20496)
$ sudo /usr/local/share/openvswitch/scripts/ovs-ctl start
* Starting ovsdb-server
* system ID not configured, please use --system-id
* Configuring Open vSwitch system IDs
EAL: Detected 4 lcore(s)
EAL: Probing VFIO support...
EAL: VFIO support initialized
EAL: PCI device 0000:01:00.0 on NUMA socket -1
EAL:   probe driver: 8086:150e net_e1000_igb
EAL:   using IOMMU type 1 (Type 1)
EAL: PCI device 0000:01:00.1 on NUMA socket -1
EAL:   probe driver: 8086:150e net_e1000_igb
EAL: PCI device 0000:01:00.2 on NUMA socket -1
EAL:   probe driver: 8086:150e net_e1000_igb
EAL: PCI device 0000:01:00.3 on NUMA socket -1
EAL:   probe driver: 8086:150e net_e1000_igb
EAL: PCI device 0000:02:00.0 on NUMA socket -1
EAL:   probe driver: 8086:150e net_e1000_igb
EAL: PCI device 0000:02:00.1 on NUMA socket -1
EAL:   probe driver: 8086:150e net_e1000_igb
EAL: PCI device 0000:02:00.2 on NUMA socket -1
EAL:   probe driver: 8086:150e net_e1000_igb
EAL: PCI device 0000:02:00.3 on NUMA socket -1
EAL:   probe driver: 8086:150e net_e1000_igb
Zone 0: name:<rte_eth_dev_data>, phys:0x7ffced40, len:0x30100, virt:0x7f843ffced40,
↪ socket_id:0, flags:0
* Starting ovs-vswitchd
* Enabling remote OVSDB managers
```

Configure an OVS bridge with the DPDK ports

```
ovs-vsctl add-br br0 -- set bridge br0 datapath_type=netdev protocols=OpenFlow13
ovs-vsctl add-port br0 dpdk0 -- set interface enp1s0f0 type=dpdk options:dpdk-
    ↪devargs=0000:01:00.0
ovs-vsctl add-port br0 dpdk1 -- set interface enp1s0f1 type=dpdk options:dpdk-
    ↪devargs=0000:01:00.1
ovs-vsctl set-fail-mode br0 secure
ovs-vsctl set-controller br0 tcp:127.0.0.1:6653
ovs-ofctl show br0
ovs-vsctl get bridge br0 datapath_id
```

Create faucet.yaml

Note: Change dp_id, to the value reported above, prefaced with “0x”.

Listing 58: /etc/faucet/faucet.yaml

```
vlans:
  100:
    name: "test"
dps:
  ovsdpdk-1:
    dp_id: 0x000090e2ba7e7564
    hardware: "Open vSwitch"
    interfaces:
      1:
        native_vlan: 100
      2:
        native_vlan: 100
```

Run FAUCET

```
faucet --verbose --ryu-ofp-listen-host=127.0.0.1
```

Test connectivity

Host(s) on enp1s0f0 and enp1s0f1 in the same IP subnet, should now be able to communicate, and FAUCET’s log file should indicate learning is occurring:

Listing 59: /var/log/faucet/faucet.log

```
May 11 14:53:32 faucet.valve INFO      DPID 159303465858404 (0x90e2ba7e7564)
  ↪Configuring DP
May 11 14:53:32 faucet.valve INFO      DPID 159303465858404 (0x90e2ba7e7564) Delete
  ↪VLAN vid:100 ports:1,2
May 11 14:53:32 faucet.valve INFO      DPID 159303465858404 (0x90e2ba7e7564) VLANs
  ↪(continues on next page)
```

(continued from previous page)


```

→changed/added: [100]
May 11 14:53:32 faucet.valve INFO DPID 159303465858404 (0x90e2ba7e7564) ↵
→Configuring VLAN vid:100 ports:1,2 DPID 159303465858404 (0x90e2ba7e7564) ↵
  May 11 14:53:32 faucet.valve INFO DPID 159303465858404 (0x90e2ba7e7564) Port 1 ↵
→Configuring VLAN vid:100 ports:1,2 DPID 159303465858404 (0x90e2ba7e7564) Port 1 ↵
  May 11 14:53:32 faucet.valve INFO DPID 159303465858404 (0x90e2ba7e7564) Sending ↵
→added DPID 159303465858404 (0x90e2ba7e7564) Sending ↵
→config for port 1 DPID 159303465858404 (0x90e2ba7e7564) Port 2 ↵
  May 11 14:53:32 faucet.valve INFO DPID 159303465858404 (0x90e2ba7e7564) Port 2 ↵
→added DPID 159303465858404 (0x90e2ba7e7564) Sending ↵
→config for port 2 DPID 159303465858404 (0x90e2ba7e7564) Packet_in ↵
  May 11 14:53:33 faucet.valve INFO learned 1 hosts on vlan 100 ↵
→src:00:16:41:6d:87:28 in_port:1 vid:100 DPID 159303465858404 (0x90e2ba7e7564) Packet_in ↵
  May 11 14:53:33 faucet.valve INFO learned 2 hosts on vlan 100 ↵
→src:00:16:41:32:87:e0 in_port:2 vid:100 DPID 159303465858404 (0x90e2ba7e7564) Packet_in ↵
  May 11 14:53:33 faucet.valve INFO learned 2 hosts on vlan 100 ↵

```

1.7.9 Faucet Testing with OVS on Hardware

Setup

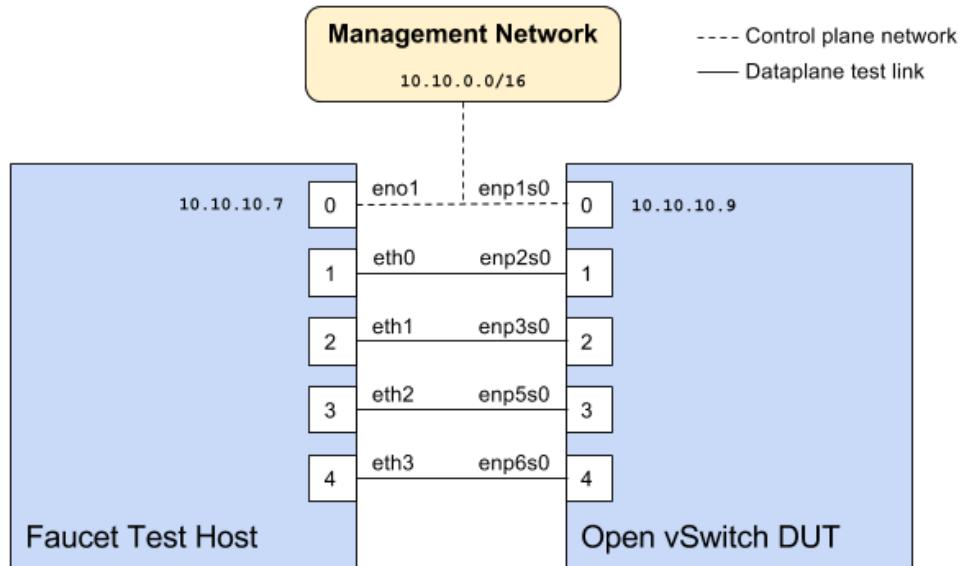

Faucet configuration file

Listing 60: /etc/faucet/hw_switch_config.yaml

```
# Faucet Configuration file: /etc/faucet/hw_switch_config.yaml
#
# If hw_switch value set to true, map a hardware OpenFlow switch to ports on this machine.
# Otherwise, run tests against OVS locally.
hw_switch: true
hardware: 'Open vSwitch'
dp_ports:
    1: eth0
    2: eth1
    3: eth2
    4: eth3

# Hardware switch's DPID
dpid: 0xacd28f18b
cpn_intf: eno1
of_port: 6636
gauge_of_port: 6637
```

Hardware

1. For Network Interface Cards (NICs), prefer Intel branded models.
2. I have also used Hi-Speed USB to dual Ethernet which works great

Software

1. Ubuntu 16.04 Xenial
2. Open vSwitch 2.7.2+

Commands

Commands to be executed on each side - **Faucet Test host** and **Open vSwitch**.

Commands on Faucet Test Host

Run these commands as root on the Ubuntu system (v16.04 used)

```
$ sudo mkdir -p /usr/local/src/
$ sudo mkdir -p /etc/faucet/
$ sudo cd /usr/local/src/
$ sudo git clone https://github.com/faucetsdn/faucet.git
$ cd faucet
$ sudo ip address show
1: lo: <LOOPBACK,UP,LOWER_UP> mtu 65536 qdisc noqueue state UNKNOWN group default qlen=1000
```

(continues on next page)

(continued from previous page)

```

link/loopback 00:00:00:00:00:00 brd 00:00:00:00:00:00
inet 127.0.0.1/8 scope host lo
valid_lft forever preferred_lft forever
inet6 ::1/128 scope host
valid_lft forever preferred_lft forever
2: eth0: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc mq state UP group default
  qlen 1000
link/ether b4:96:91:00:88:a4 brd ff:ff:ff:ff:ff:ff
inet6 fe80::b696:91ff:fe00:88a4/64 scope link
valid_lft forever preferred_lft forever
3: eth1: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc mq state UP group default
  qlen 1000
link/ether b4:96:91:00:88:a5 brd ff:ff:ff:ff:ff:ff
inet6 fe80::b696:91ff:fe00:88a5/64 scope link
valid_lft forever preferred_lft forever
4: eth2: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc mq state UP group default
  qlen 1000
link/ether b4:96:91:00:88:a6 brd ff:ff:ff:ff:ff:ff
inet6 fe80::b696:91ff:fe00:88a6/64 scope link
valid_lft forever preferred_lft forever
5: eth3: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc mq state UP group default
  qlen 1000
link/ether b4:96:91:00:88:a7 brd ff:ff:ff:ff:ff:ff
inet6 fe80::b696:91ff:fe00:88a7/64 scope link
valid_lft forever preferred_lft forever
6: eno1: <BROADCAST,MULTICAST,UP,LOWER_UP> mtu 1500 qdisc mq state UP group default
  qlen 1000
link/ether 00:1e:67:ff:f6:80 brd ff:ff:ff:ff:ff:ff
inet 10.10.10.7/16 brd 10.20.255.255 scope global eno1
valid_lft forever preferred_lft forever
inet6 cafe:babe::21e:67ff:feff:f680/64 scope global mngtmpaddr dynamic
valid_lft 86398sec preferred_lft 14398sec
inet6 fe80::21e:67ff:feff:f680/64 scope link
valid_lft forever preferred_lft forever

```

Tip: To locate the corresponding physical port, you can make the port LED blink with *Ethtool*.

Commands on Open vSwitch

Login as root on the Ubuntu system and install OpenvSwitch and start `openvswitch-switch` service

```

$ sudo apt-get install openvswitch-switch
$ sudo systemctl status openvswitch-switch.service
$ sudo ovs-vsctl add-br ovs-br0
$ sudo ovs-vsctl add-port ovs-br0 enp2s0 -- set Interface enp2s0 ofport_request=1
$ sudo ovs-vsctl add-port ovs-br0 enp3s0 -- set Interface enp3s0 ofport_request=2
$ sudo ovs-vsctl add-port ovs-br0 enp5s0 -- set Interface enp5s0 ofport_request=3
$ sudo ovs-vsctl add-port ovs-br0 enp6s0 -- set Interface enp6s0 ofport_request=4
$ sudo ovs-vsctl set-fail-mode ovs-br0 secure

```

(continues on next page)

(continued from previous page)

```
$ sudo ovs-vsctl set bridge ovs-br0 protocols=OpenFlow13
$ sudo ovs-vsctl set-controller ovs-br0 tcp:10.10.10.7:6636 tcp:10.10.10.7:6637
$ sudo ovs-vsctl get bridge ovs-br0 datapath_id
$ sudo ovs-vsctl show
308038ec-495d-412d-9b13-fe95bda4e176
    Bridge "ovs-br0"
        Controller "tcp:10.10.10.7:6636"
        Controller "tcp:10.10.10.7:6637"
        Port "enp3s0"
            Interface "enp3s0"
        Port "enp2s0"
            Interface "enp2s0"
        Port "enp6s0"
            Interface "enp6s0"
        Port "ovs-br0"
            Interface "ovs-br0"
                type: internal
        Port "enp5s0"
            Interface "enp5s0"
                type: system
    ovs_version: "2.7.0"

$ sudo ovs-vsctl -- --columns=name,ofport list Interface
name          : "ovs-br0"
ofport         : 65534

name          : "enp5s0"
ofport         : 3

name          : "enp2s0"
ofport         : 1

name          : "enp6s0"
ofport         : 4

name          : "enp3s0"
ofport         : 2
```

Tip: To locate the corresponding physical port, you can make the port LED blink with [Ethtool](#).

Check port speed information to make sure that they are at least 1Gbps

```
$ sudo ovs-ofctl -O OpenFlow13 dump-ports-desc ovs-br0
OFPST_PORT_DESC reply (OF1.3) (xid=0x2):
 1(enp2s0): addr:00:0e:c4:ce:77:25
    config: 0
    state: 0
    current: 1GB-FD COPPER AUTO_NEG
    advertised: 10MB-HD 10MB-FD 100MB-HD 100MB-FD 1GB-FD COPPER AUTO_NEG AUTO_PAUSE
    supported: 10MB-HD 10MB-FD 100MB-HD 100MB-FD 1GB-FD COPPER AUTO_NEG AUTO_PAUSE
    speed: 1000 Mbps now, 1000 Mbps max
```

(continues on next page)

(continued from previous page)

```

2(enp3s0): addr:00:0e:c4:ce:77:26
    config: 0
    state: 0
    current: 1GB-FD COPPER AUTO_NEG
    advertised: 10MB-HD 10MB-FD 100MB-HD 100MB-FD 1GB-FD COPPER AUTO_NEG AUTO_PAUSE
    supported: 10MB-HD 10MB-FD 100MB-HD 100MB-FD 1GB-FD COPPER AUTO_NEG AUTO_PAUSE
    speed: 1000 Mbps now, 1000 Mbps max
3(enp5s0): addr:00:0e:c4:ce:77:27
    config: 0
    state: 0
    current: 1GB-FD COPPER AUTO_NEG
    advertised: 10MB-HD 10MB-FD 100MB-HD 100MB-FD 1GB-FD COPPER AUTO_NEG AUTO_PAUSE
    supported: 10MB-HD 10MB-FD 100MB-HD 100MB-FD 1GB-FD COPPER AUTO_NEG AUTO_PAUSE
    speed: 1000 Mbps now, 1000 Mbps max
4(enp6s0): addr:00:0a:cd:28:f1:8b
    config: 0
    state: 0
    current: 1GB-FD COPPER AUTO_NEG
    advertised: 10MB-HD COPPER AUTO_NEG AUTO_PAUSE AUTO_PAUSE_ASYM
    supported: 10MB-HD 10MB-FD 100MB-HD 100MB-FD 1GB-HD 1GB-FD COPPER AUTO_NEG
    speed: 1000 Mbps now, 1000 Mbps max
LOCAL(ovs-br0): addr:00:0a:cd:28:f1:8b
    config: PORT_DOWN
    state: LINK_DOWN
    speed: 0 Mbps now, 0 Mbps max

```

Running the tests

Edit the `/etc/faucet/hw_switch_config.yaml` file as shown earlier in this document setting `hw_switch=false` initially for testing.

```

$ sudo cp /usr/local/src/faucet/hw_switch_config.yaml /etc/faucet/hw_switch_config.yaml
$ sudo $EDITOR /etc/faucet/hw_switch_config.yaml
$ cd /usr/local/src/faucet/

```

Install docker by following the [Installing docker](#) section and then run the hardware based tests by following the [Running the tests](#) section.

Once the above minitest version is successful with `hw_switch=false`, then edit the `/etc/faucet/hw_switch_config.yaml` file and set `hw_switch=true`.

Run tests again, verify they all pass.

Debugging

TCPDump

Many times, we want to know what is coming in on a port. To check on interface `enp2s0`, for example, use

```
$ sudo tcpdump -A -w enp2s0_all.pcap -i enp2s0
```

Or

```
$ sudo tcpdump -A -w enp2s0_all.pcap -i enp2s0 'dst host <controller-ip-address> and  
port 6653'
```

To read the pcap file, use

```
$ sudo tcpdump -r enp2s0_all.pcap
```

More detailed examples are available @ https://www.wains.be/pub/networking/tcpdump_advanced_filters.txt

Note: On which machine should one run tcpdump?

Depends, if you want to examine the packet_ins that are sent from switch to controller, run on the switch listening on the interface that is talking to the controller. If you are interested on what is coming in on a particular test port, then run it on the Test Host on that interface.

Ethtool

To locate a physical port say `enp2s0`, make the LED blink for 5 seconds:

```
$ sudo ethtool -p enp2s0 5
```

To figure out speed on the interface. Note that if Speed on the interface is at least not 1G, then tests may not run correctly.

```
$ sudo ethtool enp2s0  
$ sudo ethtool enp2s0 | grep Speed
```

References

<https://www.garron.me/en/linux/ubuntu-network-speed-duplex-lan.html>

1.8 External Resources

1.8.1 Blogs

- a FAUCET dev blog

1.8.2 Configuration

- `faucetagent` : gNMI agent for faucet configuration
- `faucetconfrpc` : RPC for Faucet configuration Files

1.8.3 Integrations

- `doveSnap` : Docker OVS Network Plugin
- `pipette` : SDN/NFV coprocessor controller
- `Poseidon` : SDN enabled traffic collection, feeding machine learning algorithms
- `DAQ` : Device Automated Qualification framework for IoT devices based on Faucet
- `Forch` : Faucet Orchestrator for controlling and monitoring a faucet-based network
- `GNS3 Faucet` A Faucet GNS3 appliance, to manage GNS3 OVS nodes

1.8.4 Online Tutorials

- <http://docs.openvswitch.org/en/latest/tutorials/faucet/>
- <http://costiser.ro/2017/03/07/sdn-lesson-2-introducing-faucet-as-an-openflow-controller/>
- <https://inside-openflow.com/openflow-tracks/faucet-controller-application-technical-track/>
- <https://blog.cyberreboot.org/building-a-software-defined-network-with-raspberry-pis-and-a-zodiac-fx-switch-97184032cdcl>

1.8.5 Tutorial Videos

- <https://www.youtube.com/watch?v=fuqzzjmcwlI>

DEVELOPER DOCUMENTATION

2.1 Developer Guide

This file contains an overview of architecture, coding design/practices, testing and style.

2.1.1 Before submitting a PR

- If you have general questions, feel free to reach out to the faucet-dev mailing list.
- If you are new to FAUCET, or are contemplating a major change, it's recommended to open a github issue with the proposed change. This will enable broad understanding of your work including being able to catch any potential snags very early (for example, adding new dependencies). Architectural and approach questions are best settled at this stage before any code is written.
- Please send relatively small, tightly scoped PRs (approx 200-300 LOC or less). This makes review and analysis easier and lowers risk, including risk of merge conflicts with other PRs. Larger changes must be refactored into incremental changes.
- You must add a test if FAUCET's functionality changes (ie. a new feature, or correcting a bug).
- All unit and integration tests must pass (please use the docker based tests; see *Software switch testing with docker*). Where hardware is available, please also run the hardware based integration tests also.
- You must use the github feature branches (see <https://gist.github.com/vlandham/3b2b79c40bc7353ae95a>), for your change and squash commits (<https://blog.github.com/2016-04-01-squash-your-commits/>) when creating the PR.
- Please use the supplied git pre-commit hook (see `../git-hook/pre-commit`), to automatically run the unit tests and pylint for you at git commit time.
- pylint must show no new errors or warnings.
- Code must conform to the style guide (see below).

2.1.2 PR handling guidelines

This section documents general guidelines for the maintainers in handling PRs. The overall intent is, to enable quality contributions with as low overhead as possible, maximizing the use of tools such as static analysis and unit/integration testing, and supporting rapid and safe advancement of the overall project.

In addition to the above PR submission guidelines, above:

- PRs require a positive review per github's built in gating feature. The approving reviewer executes the merge.
- PRs that should not be merged until some other criteria are met (e.g. not until release day) must include DO NOT MERGE in the title, with the details in PR comments.
- A typical PR review/adjust/merge cycle should be 2-3 days (timezones, weekends, etc permitting). If a PR upon review appears too complex or requires further discussion it is recommended it be refactored into smaller PRs or discussed in another higher bandwidth forum (e.g. a VC) as appropriate.
- A PR can be submitted at any time, but to simplify release logistics PR merges might not be done before release, on release days.

2.1.3 Code style

Please use the coding style documented at <https://github.com/google/styleguide/blob/gh-pages/pyguide.md>. Existing code not using this style will be incrementally migrated to comply with it. New code should comply.

2.1.4 Faucet Development Environment

A common way of developing faucet is inside a `virtualenv` with an IDE such as `PyCharm`.

Instructions on setting up PyCharm for developing faucet are below.

If you would rather develop on the command line directly, a short summary of the command line setup for development in a `venv` with Python 3.7+ is included after the PyCharm instructions.

Create a new project in PyCharm

Set the `Location` of the project to the directory where a checked out copy of the faucet code from git is, for this tutorial I will assume the path is `/Dev/faucet/`.

Ignore the `Project Interpreter` settings for now, we will set those up after the project is created.

Click `Create` when you have completed these steps.

When asked `Would you like to create a project from existing sources instead?` click `Yes`.

Create virtual environment

Now that the project is created and source code imported, click the `File -> Settings` menu. In the dialog box that opens click the `Project: faucet -> Project Interpreter` sub menu.

Click the cog and select `Add...`

Under `Virtualenv Environment` you want to select `New environment` and select a `Location` for the `virtualenv` (which can be inside the directory where the faucet code lives, e.g `/Dev/faucet/venv`).

The `Base interpreter` should be set to `/usr/bin/python3`.

Click `Ok` which will create the `virtualenv`.

Now while that virtualenv builds and we still have the settings dialog open we will tweak a few project settings to make them compatible with our code style. Click on the Tools -> Python Integrated Tools menu and change the Docstring format to Google.

Finally, click Ok again to get back to the main screen of PyCharm.

Install requirements

Inside the PyCharm editor window if we open one of the code files for faucet (e.g. faucet/faucet.py) we should now get a bar at the top of the window telling us of missing package requirements, click the Install requirements option to install the dependencies for faucet.

Create log and configuration directories

Now we need to create a log and configuration directory so that faucet can start:

```
mkdir -p /Dev/faucet/venv/var/log/faucet/  
mkdir -p /Dev/faucet/venv/etc/faucet/
```

Copy the sample faucet configuration file from /Dev/faucet/etc/faucet/faucet.yaml to /Dev/faucet/venv/etc/faucet/ and edit this configuration file as necessary.

Copy the sample gauge configuration file from /Dev/faucet/etc/faucet/gauge.yaml to /Dev/faucet/venv/etc/faucet/ and edit this configuration file as necessary.

If you are using the sample configuration “as is” you will also need to copy /Dev/faucet/etc/faucet/acls.yaml to /Dev/faucet/venv/etc/faucet/ as that included by the sample faucet.yaml file, and without it the sample faucet.yaml file cannot be loaded.

You may also wish to copy /Dev/faucet/etc/faucet/ryu.conf to /Dev/faucet/venv/etc/faucet/ as well so everything can be referenced in one directory inside the Python virtual environment.

Configure PyCharm to run faucet and gauge

Now we need to configure PyCharm to run faucet, gauge and the unit tests.

First, click the Run -> Run... menu, then select the Edit Configurations... option to get to the build settings dialog.

We will now add run configuration for starting faucet and gauge. Click the + button in the top left hand corner of the window. First, change the name from Unnamed to faucet. Change the Script path to point to ryu-manager inside the virtualenv, for me this was/venv/bin/ryu-manager. Then set the Parameters to faucet.faucet. Make sure the working directory is set to /Dev/faucet/faucet/.

We will use the same steps as above to add a run configuration for gauge. Changing the Script path to/venv/bin/ryu-manager and setting the Parameters this time to faucet.gauge. Make sure the working directory is set to /Dev/faucet/faucet/.

Configure PyCharm to run unit tests

For running tests we need a few additional dependencies installed, I couldn't work out how to do this through PyCharm so run this command from a terminal window to install the correct dependencies inside the virtualenv:

```
/Dev/faucet/venv/bin/pip3 install -r /Dev/faucet/test-requirements.txt
```

To add the test run configuration we will again click the + button in the top left hand corner, select Python tests -> Unitests. You can provide a Name of Faucet Unit Tests for the run configuration. For Target select Script path and enter the path /Dev/faucet/tests/unit/faucet. For Pattern enter test_*.py.

We will also add test run configuration for gauge using the same steps as above. Use Gauge Unit Tests as the Name and for Target select Script path and enter the path /Dev/faucet/tests/unit/gauge. For Pattern enter test_*.py.

You can click Apply and Close now that we've added all our new run configuration.

Now that everything is setup you can run either the faucet controller, gauge controller and test suite from the Run menu.

Developing with a Python 3.7+ venv

If you would prefer not to use PyCharm and are comfortable developing Python directly on the command line, these steps should get you started. They have been tested with Ubuntu 18.04 LTS, which includes Python 3.7, but similar instructions should work on other platforms that include Python 3.7+.

Install C/C++ compilers and Python development environment packages:

```
sudo apt-get install python3-venv libpython3.7-dev gcc g++ make
```

If you have not already, clone the faucet git repository:

```
git clone https://github.com/faucetsdn/faucet.git
```

Then create a Python venv environment within it:

```
cd faucet
python3 -m venv "${PWD}/venv"
```

and activate that virtual environment for all following steps:

```
. venv/bin/activate
```

Ensure that the faucet config is present within the virtual environment, copying from the default config files if required:

```
mkdir -p "${VIRTUAL_ENV}/var/log/faucet"
mkdir -p "${VIRTUAL_ENV}/etc/faucet"

for FILE in {acls,faucet,gauge}.yaml ryu.conf; do
    if [ -f "${VIRTUAL_ENV}/etc/faucet/${FILE}" ]; then
        echo "Preserving existing ${FILE}"
    else
        echo "Installing template ${FILE}"
        cp -p "etc/faucet/${FILE}" "${VIRTUAL_ENV}/etc/faucet/${FILE}"
    fi
done
```

Then install the runtime and development requirements

```
"${VIRTUAL_ENV}/bin/pip3" install wheel    # For bdist_wheel targets
"${VIRTUAL_ENV}/bin/pip3" install -r "${VIRTUAL_ENV}/../test-requirements.txt"
```

Finally install faucet in an editable form:

```
pip install -e .
```

And then confirm that you can run the unit tests:

```
pytest tests/unit/faucet/
pytest tests/unit/gauge/
```

2.1.5 Makefile

Makefile is provided at the top level of the directory. Output of `make` is normally stored in `dist` directory. The following are the targets that can be used:

- **uml**: Uses pyreverse to provide code class diagrams.
- **codefmt**: Provides command line usage to “Code Style” the Python file
- **codeerrors**: Uses pylint on all Python files to generate a code error report and is placed in `dist` directory.
- **stats**: Provides a list of all commits since the last release tag.
- **release**: Used for releasing FAUCET to the next version, Requires `version` and `next_version` variables.

To *directly install* faucet from the cloned git repo, you could use `sudo python setup.py install` command from the root of the directory.

To *build pip installable package*, you could use `python setup.py sdist` command from the root of the directory.

To *remove* any temporarily created directories and files, you could use `rm -rf dist *egg-info` command.

Building Documentation

The documentation is built with Sphinx, from within the `docs` directory.

To be able to build the documentation ensure you have the relevant packages installed:

```
cd docs
sudo apt-get install librsvg2-bin make
pip3 install -r requirements.txt
```

and then you can build HTML documentation with:

```
cd docs
make html
```

and the documentation will be found under `_build/html` in the `docs` directory.

2.1.6 Key architectural concepts/assumptions:

FAUCET's architecture depends on key assumptions, which must be kept in mind at all times.

- FAUCET is the only controller for the switch, that can add or remove flows.
- All supported dataplanes must implement OpenFlow functionally (hardware, software or both) identically. No TTP or switch specific drivers.

In addition:

- FAUCET provisions default deny flows (all traffic not explicitly programmed is dropped).
- Use of packet in is minimized.

FAUCET depends upon these assumptions to guarantee that the switch is always in a known and consistent state, which in turn is required to support high availability (FAUCET provides high availability, through multiple FAUCET controllers using the same version of configuration - any FAUCET can give the switch a consistent response - no state sharing between controllers is required). The FAUCET user can program customized flows to be added to the switch using FAUCET ACLs (see below).

FAUCET also programs the dataplane to do flooding (where configured). This minimizes the use of packet in. This is necessary to reduce competition between essential control plane messages (adding and removing flows), and traffic from the dataplane on the limited bandwidth OpenFlow control channel. Unconstrained packet in messages impact the switch CPU, may overwhelm the OpenFlow control channel, and will expose the FAUCET controller to unvalidated dataplane packets, all of which are security and reliability concerns. In future versions, packet in will be eliminated altogether. The FAUCET user is expected to use policy based forwarding (eg ACLs that redirect traffic of interest to high performance dataplane ports for NFV offload), not packet in.

FAUCET requires all supported dataplanes to implement OpenFlow (specifically, a subset of OpenFlow 1.3) in a functionally identical way. This means that there is no switch-specific driver layer - the exact same messages are sent, whether the switch is OVS or hardware. While this does prevent some earlier generation OpenFlow switches from being supported, commercially available current hardware does not have as many restrictions, and eliminating the need for a switch-specific (or TTP) layer greatly reduces implementation complexity and increases controller programmer productivity.

2.2 Architecture

2.2.1 Faucet Design and Architecture

Faucet enables practical SDN for the masses (see <http://queue.acm.org/detail.cfm?id=3015763>).

- Drop in/replacement for non-SDN L2/L3 IPv4/IPv6 switch/router (easy migration)
- Packet forwarding/flooding/multicasting done entirely by switch hardware (controller only notified on topology change)
- BGP and static routing (other routing protocols provided by NFV)
- Multi vendor/platform support using OpenFlow 1.3 multi table
- Multi switch, vendor neutral “stacking” (Faucet distributed switching, loop free topology without spanning tree)
- ACLs, as well as allow/drop, allow packets to be copied/rewritten for external NFV applications
- Monitored with Prometheus
- Small code base with high code test coverage and automated testing both hardware and software


See unit and integration tests for working configuration examples.

2.2.2 Faucet Openflow Switch Pipeline

This summarizes the global FAUCET pipeline; however, certain tables may be omitted if the functionality is not required. For example, if routing is not configured, neither FIB table nor the VIP table will be provisioned.

Usually the OpenFlow table IDs will be allocated sequentially for the tables actually used, so tables should be referenced by their name rather than the table ID in this diagram.

See also canonical pipeline definitions in `faucet_pipeline.py`.

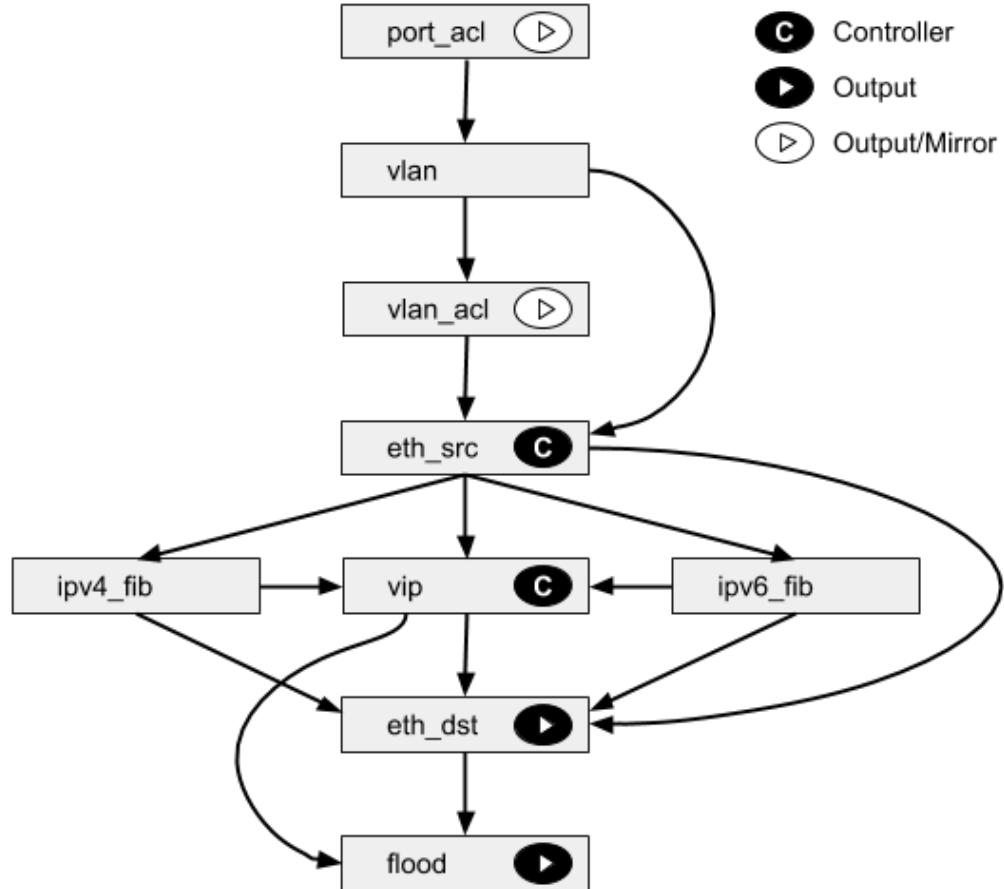

PORT_ACL Table

- Apply user supplied ACLs to a port and send to next table

VLAN Table

- Match fields: `eth_dst`, `eth_type`, `in_port`, `vlan_vid`
- **Operations:**
 - Drop unwanted L2 protocol traffic (and spoofing of Faucet's virtual MAC)
 - **For tagged ports**
 - * Match VLAN_VID and send to next table
 - **For untagged ports**

- * Push VLAN frame onto packet with VLAN_VID representing ports native VLAN and send to next table
- Interception of L2 control traffic (e.g. LACP, LLDP if configured).
- Unknown traffic is dropped

Coprocessor Table

- Match fields: `in_port`, `eth_type`, `vlan_vid`
- **Operations:**
 - For coprocessed ports only - allow an external NFV processor to output directly specific port, or ethernet destination address.

VLAN_ACL Table

- Apply user supplied ACLs to a VLAN and send to next table

ETH_SRC Table

- Match fields: `eth_dst`, `eth_src`, `eth_type`, `in_port`, `vlan_vid`
- **Operations:**
 - For IPv4/IPv6 traffic where Faucet is the next hop, send to IPV4_FIB or IPV6_FIB (route)
 - For known source MAC, send to ETH_DST (switch)
 - For unknown source MACs, copy header to controller via packet in (for learning) and send to FLOOD

IPV4_FIB Table

- Match fields: `eth_type`, `ipv4_dst`, `vlan_vid`
- **Operations:**
 - Route IPv4 traffic to a next-hop for each route we have learned
 - Set `eth_src` to Faucet's magic MAC address
 - Set `eth_dst` to the resolved MAC address for the next-hop
 - Decrement TTL
 - Send to ETH_DST/HAIRPIN/VIP table
 - Unknown traffic is dropped

IPV6_FIB Table

- Match fields: `eth_type`, `ipv6_dst`, `vlan_vid`
- **Operations:**
 - Route IPv4 traffic to a next-hop for each route we have learned
 - Set `eth_src` to Faucet's magic MAC address
 - Set `eth_dst` to the resolved MAC address for the next-hop
 - Decrement TTL
 - Send to ETH_DST/HAIRPIN/VIP table
 - Unknown traffic is dropped

VIP Table

- Match fields: `arp_tpa`, `eth_dst`, `eth_type`, `icmpv6_type`, `ip_proto`
- **Operations:**
 - Send traffic destined for FAUCET VIPs including IPv4 ARP and IPv6 ND to the controller, and traffic for unresolved hosts in connected IP subnets (if proactively learning).
 - IPv4 ARP/IPv6 ND traffic may be flooded also (sent to FLOOD)

ETH_DST_HAIRPIN Table

- Exact match (no wildcards)
- Match fields: `eth_dst`, `in_port`, `vlan_vid`
- **Operations:**
 - For destination MAC addresses we have learned output packet towards that host (popping VLAN frame if we are outputting on an untagged port), and where hairpinning is desired (e.g. routing between hosts on the same port, but different VLANS).
 - Unknown traffic is sent to ETH_DST table.

ETH_DST Table

- Exact match (no wildcards)
- Match fields: `eth_dst`, `vlan_vid`
- **Operations:**
 - For destination MAC addresses we have learned output packet towards that host (popping VLAN frame if we are outputting on an untagged port)
 - Unknown traffic is sent to FLOOD table

FLOOD Table

- Match fields: `eth_dst`, `in_port`, `vlan_vid`
- Operations:
 - Flood broadcast within VLAN
 - Flood multicast within VLAN
 - Unknown traffic is flooded within VLAN

2.2.3 Faucet Architecture

2.3 Testing

2.3.1 Installing docker

First, get yourself setup with docker based on our [Installing docker](#) documentation.

2.3.2 Software switch testing with docker

You can build and run the mininet tests with the following commands:


```
sudo docker build --pull -t faucet/tests -f Dockerfile.tests .
sudo apparmor_parser -R /etc/apparmor.d/usr.sbin.tcpdump
sudo modprobe openvswitch
sudo docker run --name=faucet-tests \
    --sysctl net.ipv6.conf.all.disable_ipv6=0 --privileged --rm \
    -v /var/local/lib/docker:/var/lib/docker \
    -v /tmp/faucet-pip-cache:/var/tmp/pip-cache \
    -ti faucet/tests
```

The apparmor command is currently required on Ubuntu hosts to allow the use of tcpdump inside the container.

If you need to use a proxy, the following to your docker run command.


```
--build-arg http_proxy=http://your.proxy:port
```

2.3.3 Hardware switch testing with docker

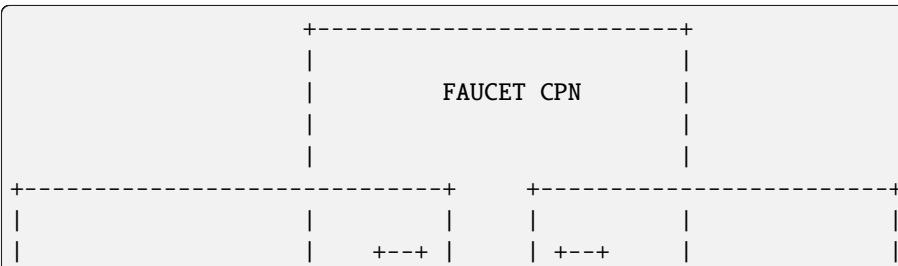

(continues on next page)

(continued from previous page)

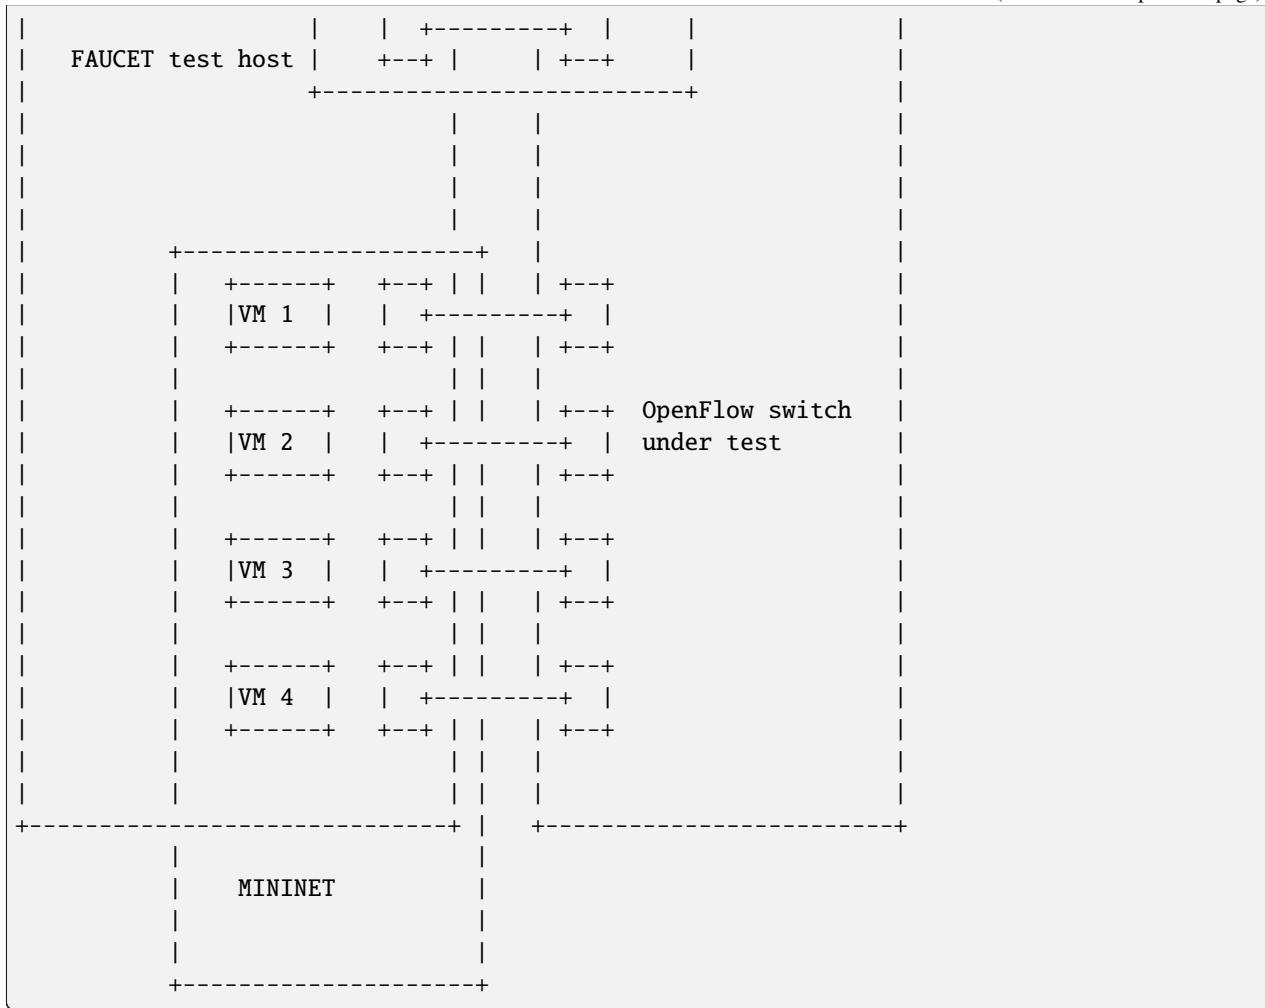

Requirements

Your test host, requires at least 5 interfaces. 4 interfaces to connect to the dataplane, and one for the CPN for OpenFlow. You will need to assign an IP address to the CPN interface on the host, and configure the switch with a CPN IP address and establish that they can reach each other (eg via ping).

You will need to configure the switch with two OpenFlow controllers, both with the host's CPN IP address, but with different ports (defaults are given below for *of_port* and *gauge_of_port*).

Note: It is very important to disable any process that could cause any traffic on the dataplane test interfaces, and the test interfaces should have all IPv4/IPv6 dynamic address assignment disabled. To achieve this, on Ubuntu for example, you can set the interfaces to “unmanaged” in Network Manager, and make sure processes like [Avahi](#) ignores the test interfaces.

Note: Hardware tests must not be run from virtualized hosts (such as under VMware). The tests need to control physical port status, and need low level L2 packet access (eg. to rewrite Ethernet source and destination addresses) which virtualization may interfere with.

Note: Hardware tests require the test switch to have all non-OpenFlow switching/other features (eg. RSTP, DHCP) disabled on the dataplane test interfaces. These features will conflict with the functions FAUCET itself provides (and in turn the tests).

It is assumed that you execute all following commands from your FAUCET source code directory (eg one you have git cloned).

Test configuration

Create a directory for the test configuration:

```
mkdir -p /etc/faucet  
$EDITOR /etc/faucet/hw_switch_config.yaml
```

`hw_switch_config.yaml` should contain the correct configuration for your switch:

```
hw_switch: true  
hardware: 'Open vSwitch'  
# Map ports on the hardware switch, to physical ports on this machine.  
dp_ports:  
    1: enp1s0f0  
    2: enp1s0f1  
    3: enp1s0f2  
    4: enp1s0f3  
# Hardware switch's DPID  
dpid: 0xecccd6d9936ed  
# Port on this machine that connects to hardware switch's CPN port.  
# Hardware switch must use IP address of this port as controller IP.  
cpn_intf: enp5s0  
# There must be two controllers configured on the hardware switch,  
# with same IP (see cpn_intf), but different ports - one for FAUCET,  
# one for Gauge.  
of_port: 6636  
gauge_of_port: 6637  
# If you wish to test OF over TLS to the hardware switch,  
# set the following parameters per Ryu documentation.  
# https://github.com/osrg/ryu/blob/master/doc/source/tls.rst  
# ctl_privkey: ctl-privkey.pem  
# ctl_cert: ctl-cert.pem  
# ca_certs: /usr/local/var/lib/openvswitch/pki/switchca/cacert.pem
```

Running the tests

Before starting the hardware test suite for the first time, you will need to install ebtables on the host machine:

```
sudo apt-get install ebtables
```

After every reboot of your host machine you will also need to manually load the `openvswitch` and `ebtables` kernel modules. If using apparmor you will also need to disable the profile for `tcpdump`:

```
sudo modprobe openvswitch
sudo modprobe ebtables
sudo apparmor_parser -R /etc/apparmor.d/usr.sbin.tcpdump
```

Then you can build and run the test suite:

```
sudo docker build --pull -t faucet/tests -f Dockerfile.tests .
sudo docker run --name=faucet-tests \
    --privileged --rm --net=host --cap-add=NET_ADMIN \
    -v /var/local/lib/docker:/var/lib/docker \
    -v /tmp/faucet-pip-cache:/var/tmp/pip-cache \
    -v /etc/faucet:/etc/faucet \
    -v /var/tmp:/var/tmp \
    -ti faucet/tests
```

2.3.4 Test suite options

In both the software and hardware version of the test suite we can provide flags inside the FAUCET_TESTS environment variable to run specific parts of the test suite.

Note: Multiple flags can be added to FAUCET_TESTS, below are just some examples of how individual flags work.

To find the full list of options you can pass to the test suite, set FAUCET_TESTS to `--help`.

```
-e FAUCET_TESTS="--help"
```

Running specific integration tests

If specific test names are listed in the FAUCET_TESTS environment then only these integration tests will be run and all others skipped.

If we add the following to either of the previous docker run commands then only the `FaucetUntaggedTest` will be run.

```
-e FAUCET_TESTS="FaucetUntaggedTest"
```

Running only the integration tests

Sometimes you will want to skip the pytype, linting and documentation tests in order to complete a faucet test suite run against hardware quicker.

```
-e FAUCET_TESTS="-i"
```

Skip code checks

Sometimes you will want to skip the pytype, linting and documentation tests.

This can be done with the `-n` flag:

```
-e FAUCET_TESTS="-n"
```

Skip unit tests

Sometimes you will want to skip the unit tests which are small tests that verify small chunks of the code base return the correct values. If these are skipped the integration tests (which spin up virtual networks and tests faucet controllers under different configurations) will still be run.

This can be done with the `-u` flag:

```
-e FAUCET_TESTS="-u"
```

Checking test results

If a test fails, you can look in `/var/tmp` - there will be subdirectories created for each test, which will contain all the logs and debug information (including tcpdumps).

By default the test suite cleans up these files but if we use the `-k` flag the test suite will keep these files.

```
-e FAUCET_TESTS="-k"
```

2.3.5 Repeatedly running tests until failure

You can run tests until a failure is detected (eg, to diagnose an unreliable test). Tests will continue to run forever until at least one fails or the test is interrupted.

```
-e FAUCET_TESTS="-r"
```

2.3.6 Test debugging

Often while debugging a failed integration test it can be useful to pause the test suite at the point of the failure. The test can then be inspected live to narrow down the exact issue. To do this, run your test with the `--debug` flag (replace `TEST_NAME` with actual name of test).

```
-e FAUCET_TESTS="--debug TEST_NAME"
```

The test suite will now run in a mode where it ignores successful tests and drops into a pdb shell when a failure occurs inside a test. There are a number of different `pdb commands` that can be run to check the actual test code.

It is also possible to login to the virtual container environment to run interactive debug commands to inspect the state of the system.

```
sudo sudo docker exec -it faucet-tests /bin/bash
```

One useful thing can be to find the running mininet containers and execute commands inside of them, e.g ping:

```
root@35b98943f736:/faucet-src# ps w | grep mininet:
995 pts/1    Ss+    0:00 bash --norc --noediting -is mininet:faucet-637
997 pts/2    Ss+    0:00 bash --norc --noediting -is mininet:u021
1001 pts/3    Ss+    0:00 bash --norc --noediting -is mininet:u022
1005 pts/4    Ss+    0:00 bash --norc --noediting -is mininet:u023
1009 pts/5    Ss+    0:00 bash --norc --noediting -is mininet:u024
1013 pts/6    Ss+    0:00 bash --norc --noediting -is mininet:s02
1077 pts/7    Ss+    0:00 bash --norc --noediting -is mininet:gauge-637

root@35b98943f736:/faucet-src# m u021 ping 127.0.0.1
```

2.4 Fuzzing

2.4.1 Fuzzing faucet config with docker

First, get yourself setup with docker based on our [Installing docker](#) documentation.

Then you can build and run the afl-fuzz tests:

```
docker build -t faucet/config-fuzzer -f Dockerfile.fuzz-config .

docker run -d \
-u $(id -u $USER) \
--name config-fuzzer \
-v /var/log/afl:/var/log/afl/ \
faucet/config-fuzzer
```

AFL then will run indefinitely. You can find the output in `/var/log/afl/`. You will then need to run the output configs with faucet to see the error produced.

2.4.2 Fuzzing faucet packet handling with docker

Build and run the afl-fuzz tests:

```
docker build -t faucet/packet-fuzzer -f Dockerfile.fuzz-packet .

docker run -d \
-u $(id -u $USER) \
--name packet-fuzzer \
-v /var/log/afl:/var/log/afl/ \
-v /var/log/faucet:/var/log/faucet/ \
-p 6653:6653 \
-p 9302:9302 \
faucet/packet-fuzzer
```

AFL will then fuzz the packet handling indefinitely. The afl output can be found in `/var/log/afl/`. To check the error produced by an afl crash file use `display_packet_crash`:

```
python3 tests/fuzzer/display_packet_crash.py /var/log/afl/crashes/X
```

Where X is the name of the crash file. The output can then be found in the faucet logs (/var/log/faucet/).

2.5 Source Code

2.5.1 faucet

faucet package

Submodules

faucet.acl module

Configuration for ACLs.

class `faucet.acl.ACL(_id, dp_id, conf)`

Bases: `Conf`

Contains the state for an ACL, including the configuration.

ACL Config

ACLs are configured under the ‘acls’ configuration block. The acls block contains a dictionary of individual acls each keyed by its name.

Each acl contains a list of rules, a packet will have the first matching rule applied to it.

Each rule is a dictionary containing the single key ‘rule’ with the value the matches and actions for the rule.

The matches are key/values based on the ryu RESTFul API. The key ‘actions’ contains a dictionary with keys/values as follows:

- allow (int): if 1 allow the packet to continue through the Faucet pipeline, if 0 drop the packet.
- force_port_vlan (int): if 1, do not verify the VLAN/port association for this packet and override any VLAN ACL on the forced VLAN.
- meter (str): meter to apply to the packet
- output (dict): used to output a packet directly. details below.
- cookie (int): set flow cookie to this value on this flow

The output action contains a dictionary with the following elements:

- tunnel (dict): the tunnel formation, creates a tunnel from the applied port(s) to the specified destination
- port (int or string): the port to output the packet to
- ports (list): a list of the ports (int or string) to output the packet to
- set_fields (list): a list of fields to set with values
- pop_vlans: (int): pop the packet vlan before outputting
- vlan_vid: (int): push the vlan vid on the packet when outputting
- vlan_vids: (list): push the list of vlans on the packet when outputting, with option eth_type
- swap_vid (int): rewrite the vlan vid of the packet when outputting
- failover (dict): Output with a failover port (experimental)

```

actions_types = {'allow': <class 'int'>, 'ct': <class 'dict'>, 'force_port_vlan':
<class 'int'>, 'meter': <class 'str'>, 'mirror': (<class 'str'>, <class 'int'>),
'output': (<class 'dict'>, <class 'list'>)}

add_tunnel_source(dp_name, port, reverse=False, bi_directional=False)
    Add a source dp/port pair for the tunnel ACL

build(meters, vid, port_num)
    Check that ACL can be built from config.

check_config()
    Check config at instantiation time for errors, typically via assert.

ct_action_nat_types = {'flags': <class 'int'>, 'range_ipv4_max': <class 'str'>,
'range_ipv4_min': <class 'str'>, 'range_ipv6_max': <class 'str'>,
'range_ipv6_min': <class 'str'>, 'range_proto_max': <class 'int'>,
'range_proto_min': <class 'int'>}

ct_action_types = {'alg': <class 'int'>, 'clear': <class 'bool'>, 'flags': <class
'int'>, 'nat': <class 'dict'>, 'table': <class 'int'>, 'zone': <class 'int'>,
'zone_src': <class 'int'>}

defaults: dict = {'dot1x_assigned': False, 'exact_match': False, 'rules': None}

defaults_types: dict = {'dot1x_assigned': <class 'bool'>, 'exact_match': <class
'bool'>, 'rules': <class 'list'>}

static does_rule_contain_tunnel(rule_conf)
    Return true if the ACL rule contains a tunnel

finalize()
    Configuration parsing marked complete.

get_meters()
    Yield meters for each rule in ACL

get_mirror_destinations()
    Yield mirror destinations for each rule in ACL

get_num_tunnels()
    Returns the number of tunnels specified in the ACL

get_tunnel_rules(tunnel_id)
    Return the list of rules that apply a specific tunnel ID

is_tunnel_acl()
    Return true if the ACL contains a tunnel

mutableAttrs: frozenset = frozenset({'tunnel_sources'})

output_actions_types = {'failover': <class 'dict'>, 'pop_vlans': <class 'int'>,
'port': (<class 'str'>, <class 'int'>), 'ports': <class 'list'>, 'set_fields':
<class 'list'>, 'swap_vid': <class 'int'>, 'tunnel': <class 'dict'>, 'vlan_vid':
<class 'int'>, 'vlan_vids': <class 'list'>}

requires_reverse_tunnel(tunnel_id)
    Returns true if the tunnel requires a reverse pathway

```

resolve_ports(*resolve_port_cb*, *resolve_tunnel_objects*)

Resolve the values for the actions of an ACL

```
rule_types = {'actions': <class 'dict'>, 'arp_op': (<class 'str'>, <class 'int'>),
  'arp_sha': (<class 'str'>, <class 'int'>), 'arp_spa': (<class 'str'>, <class
  'int'>), 'arp_tha': (<class 'str'>, <class 'int'>), 'arp_tpa': (<class 'str'>,
  <class 'int'>), 'cookie': <class 'int'>, 'ct_label': (<class 'str'>, <class
  'int'>), 'ct_mark': (<class 'str'>, <class 'int'>), 'ct_state': (<class 'str'>,
  <class 'int'>), 'ct_zone': (<class 'str'>, <class 'int'>), 'description': <class
  'str'>, 'dl_dst': (<class 'str'>, <class 'int'>), 'dl_src': (<class 'str'>, <class
  'int'>), 'dl_type': (<class 'str'>, <class 'int'>), 'dl_vlan': (<class 'str'>,
  <class 'int'>), 'eth_dst': (<class 'str'>, <class 'int'>), 'eth_src': (<class
  'str'>, <class 'int'>), 'eth_type': (<class 'str'>, <class 'int'>), 'icmpv4_code':
  (<class 'str'>, <class 'int'>), 'icmpv4_type': (<class 'str'>, <class 'int'>),
  'icmpv6_code': (<class 'str'>, <class 'int'>), 'icmpv6_type': (<class 'str'>,
  <class 'int'>), 'in_phy_port': (<class 'str'>, <class 'int'>), 'in_port': (<class
  'str'>, <class 'int'>), 'ip_dscp': (<class 'str'>, <class 'int'>), 'ip_ecn':
  (<class 'str'>, <class 'int'>), 'ip_proto': (<class 'str'>, <class 'int'>),
  'ipv4_dst': (<class 'str'>, <class 'int'>), 'ipv4_src': (<class 'str'>, <class
  'int'>), 'ipv6_dst': (<class 'str'>, <class 'int'>), 'ipv6_exthdr': (<class
  'str'>, <class 'int'>), 'ipv6_flabel': (<class 'str'>, <class 'int'>),
  'ipv6_nd_sll': (<class 'str'>, <class 'int'>), 'ipv6_nd_target': (<class 'str'>,
  <class 'int'>), 'ipv6_nd_tll': (<class 'str'>, <class 'int'>), 'ipv6_src': (<class
  'str'>, <class 'int'>), 'metadata': (<class 'str'>, <class 'int'>), 'mpls_bos':
  (<class 'str'>, <class 'int'>), 'mpls_label': (<class 'str'>, <class 'int'>),
  'mpls_tc': (<class 'str'>, <class 'int'>), 'nw_dst': (<class 'str'>, <class
  'int'>), 'nw_proto': (<class 'str'>, <class 'int'>), 'nw_src': (<class 'str'>,
  <class 'int'>), 'pbb_isid': (<class 'str'>, <class 'int'>), 'sctp_dst': (<class
  'str'>, <class 'int'>), 'sctp_src': (<class 'str'>, <class 'int'>), 'tcp_dst':
  (<class 'str'>, <class 'int'>), 'tcp_src': (<class 'str'>, <class 'int'>),
  'tunnel_id': (<class 'str'>, <class 'int'>), 'udp_dst': (<class 'str'>, <class
  'int'>), 'udp_src': (<class 'str'>, <class 'int'>), 'vlan_pcp': (<class 'str'>,
  <class 'int'>), 'vlan_vid': (<class 'str'>, <class 'int'>)}

tunnel_types = {'bi_directional': <class 'bool'>, 'dp': <class 'str'>,
  'exit_instructions': (<class 'list'>, None), 'maintain_encapsulation': <class
  'bool'>, 'port': (<class 'str'>, <class 'int'>, None), 'reverse': <class 'bool'>,
  'tunnel_id': (<class 'str'>, <class 'int'>, None), 'type': (<class 'str'>, None)}
```

update_reverse_tunnel_rules(*curr_dp*, *source_id*, *tunnel_id*, *out_port*, *output_table*)

Update the tunnel rulelist for when the output port has changed (reverse direction)

update_source_tunnel_rules(*curr_dp*, *source_id*, *tunnel_id*, *out_port*, *output_table*)

Update the tunnel rulelist for when the output port has changed

verify_tunnel_rules()

Make sure that matches & set fields are configured correctly to handle tunnels

faucet.check_faucet_config module

Standalone script to check FAUCET configuration, return 0 if provided config OK.

`faucet.check_faucet_config.check_config(conf_files, debug_level, check_output_file)`

Return True and successful config dict, if all config can be parsed.

`faucet.check_faucet_config.main()`

Mainline.

faucet.conf module

Base configuration implementation.

`class faucet.conf.Conf(_id, dp_id, conf=None)`

Bases: object

Base class for FAUCET configuration.

`check_config()`

Check config at instantiation time for errors, typically via assert.

`conf_diff(other)`

Return text diff between two Confs.

`conf_hash(subconf=True, ignore_keys=None)`

Return hash of keys configurably filtering attributes.

`defaults: dict = {}`

`defaults_types: dict = {}`

`dyn_finalized = False`

`dyn_hash = None`

`finalize()`

Configuration parsing marked complete.

`ignore_subconf(other, ignore_keys=None)`

Return True if this config same as other, ignoring sub config.

`merge_dyn(other_conf)`

Merge dynamic state from other conf object.

`mutableAttrs: frozenset = frozenset({})`

`set_defaults()`

Set default values and run any basic sanity checks.

`to_conf()`

Return configuration as a dict.

`update(conf)`

Parse supplied YAML config and sanity check.

`exception faucet.conf.InvalidConfigError`

Bases: `Exception`

This error is thrown when the config file is not valid.

`faucet.conf.test_config_condition(cond, msg)`

Evaluate condition and raise `InvalidConfigError` if condition True.

Parameters

- `cond (bool)` – Condition on which to raise an error if it is true
- `msg (str)` – Message for the error if the condition is true

`faucet.config_parser module`

Implement configuration file parsing.

`faucet.config_parser.dp_parser(config_file, logname, meta_dp_state=None)`

Parse a config file into DP configuration objects with hashes of config include/files.

`faucet.config_parser.dp_preparsed_parser(top_confs, meta_dp_state)`

Parse a prepared (after include files have been applied) FAUCET config.

`faucet.config_parser.get_config_for_api(valves)`

Return config as dict for all DPs.

`faucet.config_parser.watcher_parser(config_file, logname, prom_client)`

Return Watcher instances from config.

`faucet.config_parser_util module`

Utility functions supporting FAUCET/Gauge config parsing.

`faucet.config_parser_util.config_changed(top_config_file, new_top_config_file, config_hashes)`

Return True if configuration has changed.

Parameters

- `top_config_file (str)` – name of FAUCET config file
- `new_top_config_file (str)` – name, possibly new, of FAUCET config file.
- `config_hashes (dict)` – map of config file/includes and hashes of contents.

Returns

True if the file, or any file it includes, has changed.

Return type

`bool`

`faucet.config_parser_util.config_file_hash(config_file_name)`

Return hash of YAML config file contents.

`faucet.config_parser_util.config_hash_content(content)`

Return hash of config file content.

`faucet.config_parser_util.dp_config_path(config_file, parent_file=None)`

Return full path to config file.

`faucet.config_parser_util.dp_include(config_hashes, config_contents, config_file, logname, top_confs)`
Handles including additional config files

`faucet.config_parser_util.get_logger(logname)`
Return logger instance for config parsing.

`faucet.config_parser_util.read_config(config_file, logname)`
Return a parsed YAML config file or None.

`faucet.config_parser_util.yaml_dump(yaml_dict)`
Wrap YAML dump library.

`faucet.config_parser_util.yaml_load(yaml_str)`
Wrap YAML load library.

faucet.dp module

Configuration for a datapath.

`class faucet.dp.DP(_id, dp_id, conf)`

Bases: `Conf`

Stores state related to a datapath controlled by Faucet, including configuration.

`DEFAULT_LLDP_MAX_PER_INTERVAL = 5`

`DEFAULT_LLDP_SEND_INTERVAL = 5`

`add_acl(acl_ident, acl)`

Add an ACL to this DP.

`add_port(port)`

Add a port to this DP.

`add_router(router_ident, router)`

Add a router to this DP.

`all_lags_up()`

Return True if all LAGs have at least one port up.

`base_prom_labels()`

Return base Prometheus labels for this DP.

`bgp_routers()`

Return list of routers with BGP enabled.

`static canonical_port_order(ports)`

Return iterable of ports in consistent order.

`check_config()`

Check configuration of this dp

`classification_table()`

Returns classification table

`clone_dyn_state(prev_dp, dps=None)`

Clone dynamic state for this dp

```
cold_start(now)
    Update to reflect a cold start

coprocessor_ports()
    Return list of coprocessor ports.

default_table_sizes_types = {'classification': <class 'int'>, 'eth_dst': <class
'int'>, 'eth_dst_hairpin': <class 'int'>, 'eth_src': <class 'int'>, 'flood':
<class 'int'>, 'ipv4_fib': <class 'int'>, 'ipv6_fib': <class 'int'>, 'port_acl':
<class 'int'>, 'vip': <class 'int'>, 'vlan': <class 'int'>, 'vlan_acl': <class
'int'>}

defaults: dict = {'advertise_interval': 30, 'arp_neighbor_timeout': 30,
'cache_update_guard_time': 0, 'combinatorial_port_flood': False, 'cookie':
1524372928, 'description': None, 'dot1x': {}, 'dp_acls': None, 'dp_id': None,
'drop_broadcast_source_address': True, 'drop_spoofed_faucet_mac': True,
'egress_pipeline': False, 'fast_advertise_interval': 5, 'faucet_dp_mac':
'0e:00:00:00:00:01', 'global_vlan': 0, 'group_table': False, 'hardware': 'Open
vSwitch', 'high_priority': None, 'highest_priority': None, 'idle_dst': True,
'ignore_learn_ins': 10, 'interface_ranges': {}, 'interfaces': {}, 'lacp_timeout':
30, 'learn_ban_timeout': 0, 'learn_jitter': 0, 'lldp_beacon': {}, 'low_priority':
None, 'lowest_priority': None, 'max_host_fib_retry_count': 10,
'max_hosts_per_resolve_cycle': 5, 'max_resolve_backoff_time': 64,
'max_wildcard_table_size': 1280, 'metrics_rate_limit_sec': 0,
'min_wildcard_table_size': 32, 'multi_out': True, 'name': None,
'nd_neighbor_timeout': 30, 'ofchannel_log': None, 'packetin_pps': None,
'port_table_scale_factor': 1.0, 'priority_offset': 0, 'proactive_learn_v4': True,
'proactive_learn_v6': True, 'slowpath_pps': None, 'stack': None,
'strict_packet_in_cookie': True, 'table_sizes': {}, 'timeout': 300,
'use_classification': False, 'use_idle_timeout': False}

defaults_types: dict = {'advertise_interval': <class 'int'>,
'arp_neighbor_timeout': <class 'int'>, 'cache_update_guard_time': <class 'int'>,
'combinatorial_port_flood': <class 'bool'>, 'cookie': <class 'int'>,
'description': <class 'str'>, 'dot1x': <class 'dict'>, 'dp_acls': <class 'list'>,
'dp_id': <class 'int'>, 'drop_broadcast_source_address': <class 'bool'>,
'drop_spoofed_faucet_mac': <class 'bool'>, 'egress_pipeline': <class 'bool'>,
'fast_advertise_interval': <class 'int'>, 'faucet_dp_mac': <class 'str'>,
'global_vlan': <class 'int'>, 'group_table': <class 'bool'>, 'hardware': <class
'str'>, 'high_priority': <class 'int'>, 'highest_priority': <class 'int'>,
'idle_dst': <class 'bool'>, 'ignore_learn_ins': <class 'int'>, 'interface_ranges':
<class 'dict'>, 'interfaces': <class 'dict'>, 'lacp_timeout': <class 'int'>,
'learn_ban_timeout': <class 'int'>, 'learn_jitter': <class 'int'>, 'lldp_beacon':
<class 'dict'>, 'low_priority': <class 'int'>, 'lowest_priority': <class 'int'>,
'max_host_fib_retry_count': <class 'int'>, 'max_hosts_per_resolve_cycle': <class
'int'>, 'max_resolve_backoff_time': <class 'int'>, 'max_wildcard_table_size':
<class 'int'>, 'metrics_rate_limit_sec': <class 'int'>, 'min_wildcard_table_size':
<class 'int'>, 'multi_out': <class 'bool'>, 'name': <class 'str'>,
'nd_neighbor_timeout': <class 'int'>, 'ofchannel_log': <class 'str'>,
'packetin_pps': <class 'int'>, 'port_table_scale_factor': <class 'float'>,
'priority_offset': <class 'int'>, 'proactive_learn_v4': <class 'bool'>,
'proactive_learn_v6': <class 'bool'>, 'slowpath_pps': <class 'int'>, 'stack':
<class 'dict'>, 'strict_packet_in_cookie': <class 'bool'>, 'table_sizes': <class
'dict'>, 'timeout': <class 'int'>, 'use_classification': <class 'bool'>,
'use_idle_timeout': <class 'bool'>}
```

```
dot1x_defaults_types = {'auth_acl': <class 'str'>, 'nfv_intf': <class 'str'>,
'nfv_sw_port': <class 'int'>, 'noauth_acl': <class 'str'>, 'radius_ip': <class
'str'>, 'radius_port': <class 'int'>, 'radius_secret': <class 'str'>}
```

dot1x_ports()

Return list of ports with 802.1x enabled.

finalize()

Need to configure OF tables as very last step.

finalize_config(dps)

Perform consistency checks after initial config parsing.

finalize_tunnel_acls(dps)

Resolve each tunnels sources

get_config_changes(logger, new_dp)

Detect any config changes.

Parameters

- **logger** ([ValveLogger](#)) – logger instance
- **new_dp** ([DP](#)) – new dataplane configuration.

Returns

changes tuple containing:

deleted_ports (set): deleted port numbers. changed_ports (set): changed port numbers. added_ports (set): added port numbers. changed_acl_ports (set): changed ACL only port numbers. deleted_vlans (set): deleted VLAN IDs. changed_vlans (set): changed/added VLAN IDs. all_ports_changed (bool): True if all ports changed. all_meters_changed (bool): True if all meters changed deleted_meters (set): deleted meter numbers added_meters (set): Added meter numbers changed_meters (set): changed/added meter numbers

Return type

(tuple)

get_config_dict()

Return DP config as a dict for API call.

get_native_vlan(port_num)

Return native VLAN for a port by number, or None.

get_tables()

Return tables as dict for API call.

lacp_down_ports()

Return ports that have LACP not UP

lacp_nosync_ports()

Return ports that have LACP status NO_SYNC.

lacp_ports()

Return ports that have LACP.

lacp_up_ports()

Return ports that have LACP up.

lags()
Return dict of LAGs mapped to member ports.

lags_nosync()
Return dict of LAGs mapped to member ports that have LACP in NO SYNC.

lags_up()
Return dict of LAGs mapped to member ports that have LACP up.

lldp_beacon_defaults_types = {'max_per_interval': <class 'int'>, 'send_interval': <class 'int'>, 'system_name': <class 'str'>}

lldp_beacon_send_ports(*now*)
Return list of ports to send LLDP packets; stacked ports always send LLDP.

match_tables(*match_type*)
Return list of tables with matches of a specific match type.

mutable_attrs: frozenset = frozenset({'vlans'})

non_vlan_ports()
Ports that don't have VLANs on them.

output_table()
Returns first output table

output_tables()
Return tables that cause a packet to be forwarded.

pipeline_str()
Text description of pipeline.

pipeline_tableids()
Return pipeline table IDs.

port_labels(*port_no*)
Return port name and description labels for a port number.

port_no_valid(*port_no*)
Return True if supplied port number valid on this datapath.

reset_refs(*vlans=None*)
Resets VLAN references.

resolve_port(*port_name*)
Resolve a port by number or name.

resolve_stack_topology(*dps, meta_dp_state*)
Resolve inter-DP config for stacking

restricted_bcast_arpnd_ports()
Return ports that have restricted broadcast set.

set_defaults()
Set default values and run any basic sanity checks.

stack_ports()
Return list of stack ports

table_by_id(table_id)

Gets first table with table id

faucet.faucet module

OSKenApp shim between Ryu and Valve.

class faucet.faucet.EventFaucetAdvertise

Bases: EventBase

Event used to trigger periodic network advertisements (eg IPv6 RAs).

class faucet.faucet.EventFaucetEventSockHeartbeat

Bases: EventBase

Event used to trigger periodic events on event sock, causing it to raise an exception if conn is broken.

class faucet.faucet.EventFaucetFastAdvertise

Bases: EventBase

Event used to trigger periodic fast network advertisements (eg LACP).

class faucet.faucet.EventFaucetFastStateExpire

Bases: EventBase

Event used to trigger fast expiration of state in controller.

class faucet.faucet.EventFaucetMaintainStackRoot

Bases: EventBase

Event used to maintain stack root.

class faucet.faucet.EventFaucetMetricUpdate

Bases: EventBase

Event used to trigger update of metrics.

class faucet.faucet.EventFaucetResolveGateways

Bases: EventBase

Event used to trigger gateway re/resolution.

class faucet.faucet.EventFaucetStateExpire

Bases: EventBase

Event used to trigger expiration of state in controller.

class faucet.faucet.Faucet(*args, **kwargs)

Bases: *OSKenAppBase*

A OSKenApp that implements an L2/L3 learning VLAN switch.

Valve provides the switch implementation; this is a shim for the Ryu event handling framework to interface with Valve.

bgp = None

```
desc_stats_reply_handler(ryu_event)
    Handle OFPDescStatsReply from datapath.

    Parameters
        ryu_event (ryu.controller.ofp_event.EventOFPDescStatsReply) – trigger.

error_handler(ryu_event)
    Handle an OFPError from a datapath.

    Parameters
        ryu_event (ryu.controller.ofp_event.EventOFPErrorMsg) – trigger

event_socket_heartbeat_time = 0

exc_logname = 'faucet.exception'

features_handler(ryu_event)
    Handle receiving a switch features message from a datapath.

    Parameters
        ryu_event (ryu.controller.ofp_event.EventOFPSwitchFeatures) – trigger.

flowremoved_handler(ryu_event)
    Handle a flow removed event.

    Parameters
        ryu_event (ryu.controller.ofp_event.EventOFPFlowRemoved) – trigger.

logname = 'faucet'

metric_update(_)
    Handle a request to update metrics in the controller.

notifier = None

packet_in_handler(ryu_event)
    Handle a packet in event from the dataplane.

    Parameters
        ryu_event (ryu.controller.event.EventReplyBase) – packet in message.

port_desc_stats_reply_handler(ryu_event)
    Handle OFPPortDescStatsReply from datapath.

    Parameters
        ryu_event (ryu.controller.ofp_event.EventOFPPortDescStatsReply) – trigger.

port_status_handler(ryu_event)
    Handle a port status change event.

    Parameters
        ryu_event (ryu.controller.ofp_event.EventOFPPortStatus) – trigger.

reload_config(ryu_event)
    Handle a request to reload configuration.

start()
    Start controller.

valves_manager = None
```

`faucet.faucet_bgp module`

BGP implementation for FAUCET.

class `faucet.faucet_bgp.BgpSpeakerKey(dp_id, vlan_vid, ipv)`

Bases: `object`

Uniquely describe a BGP speaker.

class `faucet.faucet_bgp.FaucetBgp(logger, exc_logname, metrics, send_flow_msgs)`

Bases: `object`

Wrapper for Ryu BGP speaker.

`exc_logname = None`

`reset(valves)`

Set up a BGP speaker for every VLAN that requires it.

`shutdown_bgp_speakers()`

Shutdown any active BGP speakers.

`update_metrics(_now)`

Update BGP metrics.

`faucet.faucet_dot1x module`

802.1x implementation for FAUCET.

class `faucet.faucet_dot1x.FaucetDot1x(logger, exc_logname, metrics, send_flow_msgs)`

Bases: `object`

Wrapper for experimental Chewie 802.1x authenticator.

`auth_handler(address, port_id, *args, **kwargs)`

Callback for when a successful auth happens.

`create_flow_pair(dp_id, dot1x_port, nfv_sw_port, valve)`

Creates the pair of flows that redirects the eapol packets to/from the supplicant and nfv port

Parameters

- `dp_id (int)` –
- `dot1x_port (Port)` –
- `nfv_sw_port (Port)` –
- `valve (Valve)` –

Returns

list

`create_mab_flow(dp_id, dot1x_port, nfv_sw_port, valve)`

Creates a flow that mirrors UDP packets from port 68 (DHCP) from the supplicant to the nfv port

Parameters

- `dp_id (int)` –
- `dot1x_port (Port)` –

- **nfv_sw_port** ([Port](#)) –

- **valve** ([Valve](#)) –

Returns

list

exc_logname = None

failure_handler(*address, port_id*)

Callback for when a EAP failure happens.

log_auth_event(*valve, port_num, mac_str, status*)

Log an authentication attempt event

log_port_event(*event_type, port_type, valve, port_num*)

Log a dot1x port event

logoff_handler(*address, port_id*)

Callback for when an EAP logoff happens.

nfv_sw_port_up(*dp_id, dot1x_ports, nfv_sw_port*)

Setup the dot1x forward port acls when the nfv_sw_port comes up. :param dp_id: :type dp_id: int :param dot1x_ports: :type dot1x_ports: Iterable of Port objects :param nfv_sw_port: :type nfv_sw_port: Port

Returns

list of flowmods

port_down(*dp_id, dot1x_port, nfv_sw_port*)

Remove the acls added by FaucetDot1x.get_port_acls :param dp_id: :type dp_id: int :param dot1x_port: :type dot1x_port: Port :param nfv_sw_port: :type nfv_sw_port: Port

Returns

list of flowmods

port_up(*dp_id, dot1x_port, nfv_sw_port*)

Setup the dot1x forward port acls. :param dp_id: :type dp_id: int :param dot1x_port: :type dot1x_port: Port :param nfv_sw_port: :type nfv_sw_port: Port

Returns

list of flowmods

reset(*valves*)

Set up a dot1x speaker.

set_mac_str(*valve, valve_index, port_num*)

Parameters

- **valve** ([Valve](#)) –
- **valve_index** (*int*) –
- **port_num** (*int*) –

Returns

str

`faucet.faucet_dot1x.get_mac_str(valve_index, port_num)`

Gets the mac address string for the valve/port combo :param valve_index: The internally used id of the valve. :type valve_index: int :param port_num: port number :type port_num: int

Returns

str

[faucet.faucet_event module](#)

FAUCET event notification.

class faucet.faucet_event.FaucetEventNotifier(socket_path, metrics, logger)

Bases: object

Event notification, via Unix domain socket.

check_path(socket_path)

Check that socket_path is valid.

get_event()**notify(dp_id, dp_name, event_dict)**

Notify of an event.

start()

Start socket server.

class faucet.faucet_event.NonBlockLock

Bases: object

Non blocking lock that can be used as a context manager.

acquire_nonblock()

Attempt to acquire a lock.

release()

Release lock when done.

[faucet.faucet_metadata module](#)

This module contains code relating to the use of OpenFlow Metadata within Faucet.

faucet.faucet_metadata.get_egress_metadata(port_num, vid)

Return the metadata value to output a packet to port port_num on vlan vid

[faucet.faucet_metrics module](#)

Implement Prometheus statistics.

class faucet.faucet_metrics.FaucetMetrics(reg=None)Bases: *PromClient*

Container class for objects that can be exported to Prometheus.

inc_var(var, labels, val=1)

Increment a variable.

reset_dpid(dp_labels)

Set all DPID-only counter/gauges to 0.

faucet.faucet_pipeline module

Standard FAUCET pipeline.

```
class faucet.faucet_pipeline.ValveTableConfig(name, table_id, exact_match=None, meter=None,
                                              output=True, miss_goto=None, size=None,
                                              match_types=None, set_fields=None, dec_ttl=None,
                                              vlan_scale=None, vlan_port_scale=None,
                                              next_tables=None, metadata_match=0,
                                              metadata_write=0)
```

Bases: object

Configuration for a single table.

faucet.fctl module

Report state based on FAUCET/Gauge/Prometheus variables.

```
faucet.fctl.decode_value(metric_name, value)
```

Convert values to human readable format based on metric name

```
faucet.fctl.get_samples(endpoints, metric_name, label_matches, nonzero_only=False, retries=3)
```

return a list of Prometheus samples for a given metric

Prometheus Sample objects are named tuples with the fields: name, labels, value, timestamp, exemplar.

Parameters

- **endpoints** (*list of strings*) – the prometheus endpoints to query
- **metric_name** (*string*) – the metric to retrieve
- **label_matches** (*dict*) – filters results by label
- **nonzero_only** (*bool*) – only return samples with non-zero values
- **retries** (*int*) – number of retries when querying

Returns

list of Prometheus Sample objects

```
faucet.fctl.main()
```

```
faucet.fctl.parse_args(sys_args)
```

Parse and return CLI args.

```
faucet.fctl.report_label_match_metrics(report_metrics, metrics, display_labels=None,
                                         nonzero_only=False, delim='\t', label_matches=None)
```

Text report on a list of Prometheus metrics.

```
faucet.fctl.scrape_prometheus(endpoints, retries=3, err_output_file=<_io.TextIOWrapper name='<stdout>' mode='w' encoding='utf-8'>)
```

Scrape a list of Prometheus/FAUCET/Gauge endpoints and aggregate results.

faucet.gauge module

OSKenApp shim between Ryu and Gauge.

class `faucet.gauge.Gauge(*args, **kwargs)`

Bases: `OSKenAppBase`

Ryu app for polling Faucet controlled datapaths for stats/state.

It can poll multiple datapaths. The configuration files for each datapath should be listed, one per line, in the file set as the environment variable GAUGE_CONFIG. It logs to the file set as the environment variable GAUGE_LOG,

```
exc_logname = 'gauge.exception'
```

```
logname = 'gauge'
```

```
reload_config(ryu_event)
```

Handle request for Gauge config reload.

```
update_watcher_handler(ryu_event)
```

Handle any kind of stats/change event.

Parameters

`ryu_event (ryu.controller.event.EventReplyBase)` – stats/change event.

faucet.gauge_influx module

Library for interacting with InfluxDB.

class `faucet.gauge_influx.GaugeFlowTableInfluxDBLogger(conf, logname, prom_client)`

Bases: `GaugeFlowTablePoller, InfluxShipper`

Example

```
> use faucet
Using database faucet
> show series where table_id = '0' and in_port = '2'
key
---
flow_byte_count,dp_name=windscale-faucet-1,eth_type=2048,in_port=2,ip_proto=17,
↪priority=9099,table_id=0,udp_dst=53
flow_byte_count,dp_name=windscale-faucet-1,eth_type=2048,in_port=2,ip_proto=6,
↪priority=9098,table_id=0,tcp_dst=53
flow_byte_count,dp_name=windscale-faucet-1,in_port=2,priority=9097,table_id=0
flow_packet_count,dp_name=windscale-faucet-1,eth_type=2048,in_port=2,ip_proto=17,
↪priority=9099,table_id=0,udp_dst=53
flow_packet_count,dp_name=windscale-faucet-1,eth_type=2048,in_port=2,ip_proto=6,
↪priority=9098,table_id=0,tcp_dst=53
flow_packet_count,dp_name=windscale-faucet-1,in_port=2,priority=9097,table_id=0
> select * from flow_byte_count where table_id = '0' and in_port = '2' and ip_proto
↪= '17' and time > now() - 5m
name: flow_byte_count
time                  arp_tpa dp_name          eth_dst eth_src eth_type icmpv6_type

```

(continues on next page)

(continued from previous page)

in_port	ip_proto	ipv4_dst	ipv6_dst	priority	table_id	tcp_dst	udp_dst	value	vlan_
vid									
-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
-----	-----	-----	-----	-----	-----	-----	-----	-----	-----
15011547970000000000		windscale-faucet-1			2048				
→2	17	9099	0		53	9414			
15011548570000000000		windscale-faucet-1			2048				
→2	17	9099	0		53	10554			
15011549170000000000		windscale-faucet-1			2048				
→2	17	9099	0		53	10554			
15011549770000000000		windscale-faucet-1			2048				
→2	17	9099	0		53	12164			
15011550370000000000		windscale-faucet-1			2048				
→2	17	9099	0		53	12239			

`class faucet.gauge_influx.GaugePortStateInfluxDBLogger(conf, logname, prom_client)`Bases: `GaugePortStatePoller, InfluxShipper`

Example

```
> use faucet
Using database faucet
> precision rfc3339
> select * from port_state_reason where port_name = 'port1.0.1' order by time desc
→limit 10;
name: port_state_reason
-----
time          dp_name      port_name    value
2017-02-21T02:12:29Z  windscale-faucet-1  port1.0.1  2
2017-02-21T02:12:25Z  windscale-faucet-1  port1.0.1  2
2016-07-27T22:05:08Z  windscale-faucet-1  port1.0.1  2
2016-05-25T04:33:00Z  windscale-faucet-1  port1.0.1  2
2016-05-25T04:32:57Z  windscale-faucet-1  port1.0.1  2
2016-05-25T04:31:21Z  windscale-faucet-1  port1.0.1  2
2016-05-25T04:31:18Z  windscale-faucet-1  port1.0.1  2
2016-05-25T04:27:07Z  windscale-faucet-1  port1.0.1  2
2016-05-25T04:27:04Z  windscale-faucet-1  port1.0.1  2
2016-05-25T04:24:53Z  windscale-faucet-1  port1.0.1  2
```

no_response()

Called when a polling cycle passes without receiving a response.

send_req()

Send a stats request to a datapath.

`class faucet.gauge_influx.GaugePortStatsInfluxDBLogger(conf, logname, prom_client)`Bases: `GaugePortStatsPoller, InfluxShipper`

Periodically sends a port stats request to the datapath and parses and outputs the response.

Example

```
> use faucet
Using database faucet
> show measurements
name: measurements
-----
bytes_in
bytes_out
dropped_in
dropped_out
errors_in
packets_in
packets_out
port_state_reason
> precision rfc3339
> select * from packets_out where port_name = 'port1.0.1' order by time desc limit ↴10;
name: packets_out
-----
time          dp_name      port_name    value
2017-03-06T05:21:42Z  windscale-faucet-1  port1.0.1  76083431
2017-03-06T05:21:33Z  windscale-faucet-1  port1.0.1  76081172
2017-03-06T05:21:22Z  windscale-faucet-1  port1.0.1  76078727
2017-03-06T05:21:12Z  windscale-faucet-1  port1.0.1  76076612
2017-03-06T05:21:02Z  windscale-faucet-1  port1.0.1  76074546
2017-03-06T05:20:52Z  windscale-faucet-1  port1.0.1  76072730
2017-03-06T05:20:42Z  windscale-faucet-1  port1.0.1  76070528
2017-03-06T05:20:32Z  windscale-faucet-1  port1.0.1  76068211
2017-03-06T05:20:22Z  windscale-faucet-1  port1.0.1  76065982
2017-03-06T05:20:12Z  windscale-faucet-1  port1.0.1  76063941
```

```
class faucet.gauge_influx.InfluxShipper
    Bases: object
    Convenience class for shipping values to InfluxDB.
    Inheritors must have a WatcherConf object as conf.
    conf = None
    logger = None
    static make_point(tags, rcv_time, stat_name, stat_val)
        Make an InfluxDB point.
    make_port_point(dp_name, port_name, rcv_time, stat_name, stat_val)
        Make an InfluxDB point about a port measurement.
    ship_error_prefix = 'error shipping points: '
    ship_points(points)
        Make a connection to InfluxDB and ship points.
```

`faucet.gauge_pollers` module

Library for polling dataplanes for statistics.

`class faucet.gauge_pollers.GaugeFlowTablePoller(conf, logname, prom_client)`

Bases: `GaugeThreadPoller`

Periodically dumps the current datapath flow table as a yaml object.

Includes a timestamp and a reference (\$DATAPATHNAME-flowtables). The flow table is dumped as an OF-FlowStatsReply message (in yaml format) that matches all flows.

`send_req()`

Send a stats request to a datapath.

`class faucet.gauge_pollers.GaugeMeterStatsPoller(conf, logname, prom_client)`

Bases: `GaugeThreadPoller`

Poll for all meter stats.

`send_req()`

Send a stats request to a datapath.

`class faucet.gauge_pollers.GaugePoller(conf, logname, prom_client)`

Bases: `object`

Abstraction for a poller for statistics.

`static is_active()`

Return True if the poller is controlling the request loop for its stat

`no_response()`

Called when a polling cycle passes without receiving a response.

`report_dp_status(dp_status)`

Report DP status.

`running()`

Return True if the poller is running.

`send_req()`

Send a stats request to a datapath.

`start(ryudp, active)`

Start the poller.

`stop()`

Stop the poller.

`update(rcv_time, msg)`

Handle the responses to requests.

Called when a reply to a stats request sent by this object is received by the controller.

It should acknowledge the receipt by setting self.reply_pending to false.

Parameters

- `rcv_time` – the time the response was received
- `msg` – the stats reply message

```
class faucet.gauge_pollers.GaugePortStatePoller(conf, logname, prom_client)
```

Bases: *GaugePoller*

Abstraction for port state poller.

no_response()

Called when a polling cycle passes without receiving a response.

send_req()

Send a stats request to a datapath.

```
class faucet.gauge_pollers.GaugePortStatsPoller(conf, logname, prom_client)
```

Bases: *GaugeThreadPoller*

Periodically sends a port stats request to the datapath and parses and outputs the response.

send_req()

Send a stats request to a datapath.

```
class faucet.gauge_pollers.GaugeThreadPoller(conf, logname, prom_client)
```

Bases: *GaugePoller*

A ryu thread object for sending and receiving OpenFlow stats requests.

The thread runs in a loop sending a request, sleeping then checking a response was received before sending another request.

The methods send_req, update and no_response should be implemented by subclasses.

is_active()

Return True if the poller is controlling the request loop for its stat

send_req()

Send a stats request to a datapath.

start(ryudp, active)

Start the poller.

stop()

Stop the poller.

faucet.gauge_prom module

Prometheus for Gauge.

```
class faucet.gauge_prom.GaugeFlowTablePrometheusPoller(conf, logname, prom_client)
```

Bases: *GaugeFlowTablePoller*

Export flow table entries to Prometheus.

```
class faucet.gauge_prom.GaugeMeterStatsPrometheusPoller(conf, logger, prom_client)
```

Bases: *GaugePortStatsPoller*

Exports meter stats to Prometheus.

```
class faucet.gauge_prom.GaugePortStatePrometheusPoller(conf, logname, prom_client)
```

Bases: *GaugePortStatePoller*

Export port state changes to Prometheus.

`no_response()`

Called when a polling cycle passes without receiving a response.

`send_req()`

Send a stats request to a datapath.

`class faucet.gauge_prom.GaugePortStatsPrometheusPoller(conf, logger, prom_client)`

Bases: `GaugePortStatsPoller`

Exports port stats to Prometheus.

`class faucet.gauge_prom.GaugePrometheusClient(reg=None)`

Bases: `PromClient`

Wrapper for Prometheus client that is shared between all pollers.

`reregister_flow_vars(table_name, table_tags)`

Register the flow variables needed for this client

`reregister_nonflow_vars()`

Reset all metrics to empty.

`faucet.meter module`

Configure meters.

`class faucet.meter.Meter(_id, dp_id, conf)`

Bases: `Conf`

Implement FAUCET configuration for an OpenFlow meter.

`check_config()`

Check config at instantiation time for errors, typically via assert.

`defaults: dict = {'entry': None, 'meter_id': None}`

`defaults_types: dict = {'entry': <class 'dict'>, 'meter_id': <class 'int'>}`

`entry = None`

`entry_msg = None`

`meter_id = None`

`faucet.port module`

Port configuration.

`class faucet.port.Port(_id, dp_id, conf=None)`

Bases: `Conf`

Stores state for ports, including the configuration.

`actor_init()`

Set the LACP actor state to INIT

```

actor_none()
    Set the LACP actor state to NONE

actor_nosync()
    Set the LACP actor state to NOSYNC

actor_notconfigured()
    Set the LACP actor state to NOTCONFIGURED

actor_state()
    Return the current LACP actor state

static actor_state_name(state)
    Return the string of the actor state

actor_up()
    Set the LACP actor state to UP

check_config()
    Check config at instantiation time for errors, typically via assert.

clone_dyn_state(prev_port)

contains_tunnel_acl(tunnel_id=None)
    Searches through acls_in for a tunnel ACL with a matching tunnel_id

coprocessor_defaults_types = {'strategy': <class 'str'>, 'vlan_vid_base': <class 'int'>}

deconfigure_port()
    Set LACP port state to NOTCONFIGURED

defaults: dict = {'acl_in': None, 'acls_in': None, 'coprocessor': {},
'count_untag_vlan_miss': False, 'description': None, 'dot1x': False, 'dot1x_acl':
False, 'dot1x_dyn_acl': False, 'dot1x_mab': False, 'enabled': True, 'hairpin':
False, 'hairpin_unicast': False, 'lacp': 0, 'lacp_active': False,
'lacp_collect_and_distribute': False, 'lacp_passthrough': None, 'lacp_port_id':
-1, 'lacp_port_priority': 255, 'lacp_resp_interval': 1, 'lacp_selected': False,
'lacp_standby': False, 'lacp_unselected': False, 'lldp_beacon': {},
'lldp_peer_mac': None, 'loop_protect': False, 'loop_protect_external': False,
'max_hosts': 255, 'max_lldp_lost': 3, 'mirror': None, 'name': None,
'native_vlan': None, 'number': None, 'opstatus_reconf': True, 'output_only':
False, 'permanent_learn': False, 'receive_lldp': False, 'restricted_bcast_arptd':
False, 'stack': None, 'tagged_vlans': None, 'unicast_flood': True}

```

```
defaults_types: dict = {'acl_in': (<class 'str'>, <class 'int'>), 'acls_in':  
<class 'list'>, 'coprocessor': <class 'dict'>, 'count_untag_vlan_miss': <class  
'bool'>, 'description': <class 'str'>, 'dot1x': <class 'bool'>, 'dot1x_acl':  
<class 'bool'>, 'dot1x_dyn_acl': <class 'bool'>, 'dot1x_mab': <class 'bool'>,  
'enabled': <class 'bool'>, 'hairpin': <class 'bool'>, 'hairpin_unicast': <class  
'bool'>, 'lacp': <class 'int'>, 'lacp_active': <class 'bool'>,  
'lacp_collect_and_distribute': <class 'bool'>, 'lacp_passthrough': <class 'list'>,  
'lacp_port_id': <class 'int'>, 'lacp_port_priority': <class 'int'>,  
'lacp_resp_interval': <class 'int'>, 'lacp_selected': <class 'bool'>,  
'lacp_standby': <class 'bool'>, 'lacp_unselected': <class 'bool'>, 'lldp_beacon':  
<class 'dict'>, 'lldp_peer_mac': <class 'str'>, 'loop_protect': <class 'bool'>,  
'loop_protect_external': <class 'bool'>, 'max_hosts': <class 'int'>,  
'max_lldp_lost': <class 'int'>, 'mirror': (<class 'list'>, <class 'str'>, <class  
'int'>), 'name': <class 'str'>, 'native_vlan': (<class 'str'>, <class 'int'>),  
'number': <class 'int'>, 'opstatus_reconf': <class 'bool'>, 'output_only': <class  
'bool'>, 'permanent_learn': <class 'bool'>, 'receive_lldp': <class 'bool'>,  
'restricted_bcast_arpnd': <class 'bool'>, 'stack': <class 'dict'>, 'tagged_vlans':  
<class 'list'>, 'unicast_flood': <class 'bool'>}
```

deselect_port()

UNSELECT the current LACP port

finalize()

Configuration parsing marked complete.

get_lacp_flags()

Get the LACP flags for the state the port is in Return sync, collecting, distributing flag values

hosts(vlans=None)

Return all host cache entries this port has learned (on all or specified VLANs).

hosts_count(vlans=None)

Return count of all hosts this port has learned (on all or specified VLANs).

is_actor_init()

Return true if the LACP actor state is INIT

is_actor_none()

Return true if the LACP actor state is NONE

is_actor_nosync()

Return true if the LACP actor state is NOSYNC

is_actor_up()

Return true if the LACP actor state is UP

is_port_selected()

Return true if the lacp is a SELECTED port

is_port_standby()

Return true if the lacp is a port in STANDBY

is_port_unselected()

Return true if the lacp is an UNSELECTED port

is_stack_admin_down()

Return True if port is in ADMIN_DOWN state.

is_stack_bad()
Return True if port is in BAD state.

is_stack_gone()
Return True if port is in GONE state.

is_stack_init()
Return True if port is in INIT state.

is_stack_none()
Return True if port is in NONE state.

is_stack_up()
Return True if port is in UP state.

lacp_actor_update(*lacp_up*, *now=None*, *lacp_pkt=None*, *cold_start=False*)
Update the LACP actor state :param lacp_up: The intended LACP/port state :type lacp_up: bool :param now: Current time :type now: float :param lacp_pkt: Received LACP packet :type lacp_pkt: PacketMeta :param cold_start: Whether the port is being cold started :type cold_start: bool

Returns
current LACP actor state

lacp_port_state()
Return the current LACP port state

lacp_port_update(*selected*, *cold_start=False*)
Updates the LACP port selection state :param selected: Whether the port's DPID is the selected one :type selected: bool :param cold_start: Whether the port is being cold started :type cold_start: bool

Returns
current lacp port state

lldp_beacon_defaults_types = {'enable': <class 'bool'>, 'org_tlv': <class 'list'>, 'port_descr': <class 'str'>, 'system_name': <class 'str'>}

lldp_beacon_enabled()
Return True if LLDP beacon enabled on this port.

lldp_org_tlv_defaults_types = {'info': (<class 'str'>, <class 'bytearray'>), 'oui': (<class 'int'>, <class 'bytearray'>), 'subtype': (<class 'int'>, <class 'bytearray'>)}

mirror_actions()
Return OF actions to mirror this port.

non_stack_forwarding()
Returns True if port is not-stacking and, and able to forward packets.

static port_role_name(*state*)
Return the LACP port role state name

running()
Return True if port enabled and up.

select_port()
SELECT the current LACP port

set_defaults()

Set default values and run any basic sanity checks.

stack_admin_down()

Change the current stack state to ADMIN_DOWN.

stack_bad()

Change the current stack state to BAD.

stack_defaults_types = {'dp': <class 'str'>, 'port': (<class 'str'>, <class 'int'>)}

stack_descr()

Return stacking annotation if this is a stacking port.

stack_gone()

Change the current stack state to GONE.

stack_init()

Change the current stack state to INIT_DOWN.

stack_port_update(*now*)

Progresses through the stack link state machine

Parameters

now (*float*) – Current time

Returns

Current (new) stack port state string: reason for the state change and additional information

Return type

int

stack_state()

Return the current port stack state

static stack_state_name(*state*)

Return stack state name

stack_up()

Change the current stack state to UP.

standby_port()

Set LACP port state to STANDBY

tunnel_acls()

Return any tunnel ACLs on this port.

vlans()

Return all VLANs this port is in.

faucet.prom_client module

Implement Prometheus client.

```
class faucet.prom_client.PromClient(reg=None)
    Bases: object
    Prometheus client.

    REQUIRED_LABELS = ['dp_id', 'dp_name']

    start(prom_port, prom_addr, use_test_thread=False)
        Start webserver.

faucet.prom_client.make_wsgi_app(registry)
    Create a WSGI app which serves the metrics from a registry.
```

faucet.router module

Configure routing between VLANs.

```
class faucet.router.Router(_id, dp_id, conf)
    Bases: Conf
    Implement FAUCET configuration for a router.

    bgp_as()
        Return BGP AS.

    bgp_connect_mode()
        Return BGP connect mode.

    bgp_defaults_types = {'as': <class 'int'>, 'connect_mode': <class 'str'>,
    'neighbor_addresses': <class 'list'>, 'neighbor_as': <class 'int'>, 'port':
    <class 'int'>, 'routerid': <class 'str'>, 'server_addresses': <class 'list'>,
    'vlan': (<class 'str'>, <class 'int'>)}

    bgp_ipvs()
        Return list of IP versions for BGP configured on this VLAN.

    bgp_neighbor_addresses()
        Return BGP neighbor addresses.

    bgp_neighbor_addresses_by_ipv(ipv)
        Return BGP neighbor addresses with specified IP version on this VLAN.

    bgp_neighbor_as()
        Return BGP neighbor AS number.

    bgp_port()
        Return BGP port.

    bgp_routerid()
        Return BGP router ID.

    bgp_server_addresses()
        Return BGP server addresses.
```

```
bgp_server_addresses_by_ipv(ipv)
    Return BGP server addresses with specified IP version on this VLAN.

bgp_vlan()
    Return BGP VLAN.

check_config()
    Check config at instantiation time for errors, typically via assert.

defaults: dict = {'bgp': {}, 'vlans': None}

defaults_types: dict = {'bgp': <class 'dict'>, 'vlans': <class 'list'>}

finalize()
    Configuration parsing marked complete.

ipaddress_fields = ('neighbor_addresses', 'server_addresses')

set_bgp_vlan(vlan)
    Set BGP VLAN.

vip_map(ipa)
    Return VIP for IP address, if any.
```

faucet.stack module

Configuration for a stack.

```
class faucet.stack.Stack(_id, dp_id, name, canonical_port_order, lacp_down_ports, lacp_ports, conf)
    Bases: Conf

    Stores state related to DP stack information, this includes the current elected root as that is technically a fixed allocation for this DP Stack instance.

    add_port(port)
        Add a port to this stack

    any_port_up()
        Return true if any stack port is UP

    canonical_up_ports(ports=None)
        Obtains list of UP stack ports in canonical order

    clone_dyn_state(prev_stack, dps=None)
        Copy dyn state from the old stack instance when warm/cold starting

    defaults: dict = {'down_time_multiple': 3, 'min_lacp_health': 1.0,
        'min_stack_health': 1.0, 'priority': None, 'route_learning': False}

    defaults_types: dict = {'down_time_multiple': <class 'int'>, 'min_lacp_health':
        <class 'float'>, 'min_stack_health': <class 'float'>, 'priority': <class 'int'>,
        'route_learning': <class 'bool'>}

    down_ports()
        Return tuple of not running stack ports
```

get_node_link_data()

Return network stacking graph as a node link representation

hash()

Return hash of a topology graph

is_edge()

Return True if this DP is a stack edge.

is_in_path(*src_dp*, *dst_dp*)

Return True if the current DP is in the path from *src_dp* to *dst_dp*

Parameters

- ***src_dp* (*str*)** – DP name
- ***dst_dp* (*str*)** – DP name

Returns

True if self is in the path from the *src_dp* to the *dst_dp*.

Return type

bool

is_root()

Return True if this DP is the root of the stack.

is_root_candidate()

Return True if this DP could be a root of the stack.

lacp_port_healthy()

Determines the percentage of UP LACP ports, and whether the current stack node can be considered healthy according to the *min_lacp_health* configuration option.

Returns

Whether threshold from DOWN LACP ports is met; considered healthy, float: Percentage of LACP ports UP out of all lacp ports

Return type

bool

live_timeout_healthy(*last_live_time*, *now*, *update_time*)

Determines the timeout of the current stack node, and whether the current stack node can be considered healthy according to the *down_time_multiple* number of stack root update time intervals.

Parameters

- ***last_live_time* (*float*)** – Last known live time for this current stack node
- ***now* (*float*)** – Current time
- ***update_time* (*int*)** – Update time interval

Returns

If node down time is still in update time interval threshold; considered healthy, float: Time elapsed since timed out

Return type

bool

longest_path_to_root_len()

Return length of the longest path to root in the stack.

modify_link(dp, port, add=True)

Update the stack topology according to the event

static modify_topology(graph, dp, port, add=True)

Add/remove an edge to the stack graph which originates from this dp and port.

static nominate_stack_root(stacks)

Return stack names in priority order and the chosen root

peer_symmetric_up_ports(peer_dp)

Return list of stack ports that are up towards us from a peer

peer_up_ports(peer_dp)

Return list of stack ports that are up towards a peer.

resolve_topology(dps, meta_dp_state)

Resolve & verify correct inter-DP stacking config

Parameters

- **dps** (*list*) – List of configured DPs
- **meta_dp_state** ([MetaDPState](#)) – Provided if reloading when choosing a new root DP

shortest_path(dest_dp, src_dp=None)

Return shortest path to a DP, as a list of DPs.

shortest_path_port(dest_dp)

Return first port on our DP, that is the shortest path towards dest DP.

shortest_path_to_root(src_dp=None)

Return shortest path to root DP, as list of DPs.

shortest_symmetric_path_port(peer_dp)

Return port on our DP that is the first port of the adjacent DP towards us

stack_port_healthy()

Determines the percentage of UP stack ports, and whether the current stack node can be considered healthy according to the *min_stack_health* configuration option.

Returns

Whether threshold from DOWN stack ports is met; considered healthy, float: Percentage of stack ports UP out of all stack ports

Return type

bool

update_health(now, dp_last_live_time, update_time)

Determines whether the current stack node is healthy

Parameters

- **now** (*float*) – Current time
- **last_live_times** (*dict*) – Last live time value for each DP
- **update_time** (*int*) – Stack root update interval time

Returns

Current stack node health state, str: Reason for the current state

Return type

tuple

faucet.tfm_pipeline module

Configure switch tables with TFM messages.

`faucet.tfm_pipeline.fill_required_properties(new_table)`

Ensure TFM has all required properties.

`faucet.tfm_pipeline.init_table(table_id, name, max_entries, metadata_match, metadata_write)`

Initialize a TFM.

`faucet.tfm_pipeline.load_tables(dp, valve_cl, max_table_id, min_max_flows, use_oxm_ids, fill_req)`

Configure switch tables with TFM messages.

faucet.valve module

Implementation of Valve learning layer 2/3 switch.

`class faucet.valve.AlliedTelesis(dp, logname, metrics, notifier, dot1x)`

Bases: `OVSValve`

Valve implementation for AT.

`DEC_TTL = False`

`acl_manager`

`dot1x`

`dp`

`logger`

`logname`

`metrics`

`notifier`

`ofchannel_logger`

`pipeline`

`recent_ofmsgs`

`stack_manager`

`stale_root`

`switch_manager`

`class faucet.valve.ArubaValve(dp, logname, metrics, notifier, dot1x)`

Bases: `TfmValve`

Valve implementation for Aruba.

`DEC_TTL = False`

`FILL_REQ = False`

```
acl_manager
dot1x
dp
logger
logname
metrics
notifier
ofchannel_logger
pipeline
recent_ofmsgs
stack_manager
stale_root
switch_manager

class faucet.valve.CiscoC9KValve(dp, logname, metrics, notifier, dot1x)
```

Bases: [TfmValve](#)

Valve implementation for C9K.

```
acl_manager
dot1x
dp
logger
logname
metrics
notifier
ofchannel_logger
pipeline
recent_ofmsgs
stack_manager
stale_root
switch_manager
```

```
class faucet.valve.Dot1xManager(dot1x, dp_id, dot1x_ports, nfv_sw_port)
```

Bases: [ValveManagerBase](#)

Dot1x protocol manager. Has to be here to avoid eventlet monkey patch in faucet_dot1x

```
add_port(port)
    install flows in response to a new port
del_port(port)
    delete flows in response to a port removal
class faucet.valve.NoviFlowValve(dp, logname, metrics, notifier, dot1x)
    Bases: Valve
    Valve implementation for NoviFlow with static pipeline.
    STATIC_TABLE_IDS = True
    USE_BARRIERS = True
    acl_manager
    dot1x
    dp
    logger
    logname
    metrics
    notifier
    ofchannel_logger
    pipeline
    recent_ofmsgs
    stack_manager
    stale_root
    switch_manager
class faucet.valve.OVSTfmValve(dp, logname, metrics, notifier, dot1x)
    Bases: TfmValve
    Valve implementation for OVS.
    MAX_TABLE_ID = 253
    MIN_MAX_FLOWS = 1000000
    USE_BARRIERS = False
    USE_OXM_IDS = False
    acl_manager
    dot1x
    dp
    logger
```

```
logname
metrics
notifier
ofchannel_logger
pipeline
recent_ofmsgs
stack_manager
stale_root
switch_manager

class faucet.valve.OVSVlve(dp, logname, metrics, notifier, dot1x)
    Bases: Valve
    Valve implementation for OVS.

    USE_BARRIERS = False

    acl_manager
    dot1x
    dp
    logger
    logname
    metrics
    notifier
    ofchannel_logger
    pipeline
    recent_ofmsgs
    stack_manager
    stale_root
    switch_manager

class faucet.valve.TfmVlve(dp, logname, metrics, notifier, dot1x)
    Bases: Valve
    Valve implementation that uses OpenFlow send table features messages.

    FILL_REQ = True
    MAX_TABLE_ID = 0
    MIN_MAX_FLOWS = 0
```

```

USE_OXM_IDS = True
acl_manager
dot1x
dp
logger
logname
metrics
notifier
ofchannel_logger
pipeline
recent_ofmsgs
stack_manager
stale_root
switch_manager

class faucet.valve.Valve(dp, logname, metrics, notifier, dot1x)
Bases: object
Generates the messages to configure a datapath as a l2 learning switch.
Vendor specific implementations may require sending configuration flows. This can be achieved by inheriting
from this class and overwriting the function switch_features.

DEC_TTL = True
GROUPS = True
STATIC_TABLE_IDS = False
USE_BARRIERS = True

acl_manager
add_dot1x_native_vlan(port_num, vlan_name)
add_route(vlan, ip_gw, ip_dst)
    Add route to VLAN routing table.
add_vlan(vlan, cold_start=False)
    Configure a VLAN.
add_vlans(vlans, cold_start=False)
advertise(now, _other_values)
    Called periodically to advertise services (eg. IPv6 RAs).
close_logs()
    Explicitly close any active loggers.

```

datapath_connect(*now, discovered_up_ports*)
Handle Ryu datapath connection event and provision pipeline.

Parameters

- **now** (*float*) – current epoch time.
- **discovered_up_ports** (*set*) – datapath port numbers that are up.

Returns

OpenFlow messages to send to datapath.

Return type

list

datapath_disconnect(*now*)
Handle Ryu datapath disconnection event.

del_dot1x_native_vlan(*port_num*)

del_route(*vlan, ip_dst*)
Delete route from VLAN routing table.

del_vlan(*vlan*)
Delete a configured VLAN.

del_vlans(*vlans*)

dot1x

dot1x_event(*event_dict*)

dp

dp_init(*new_dp=None, valves=None*)
Initialize datapath state at connection/re/config time.

fast_advertise(*now, _other_valves*)
Called periodically to send LLDP/LACP packets.

fast_state_expire(*now, other_valves*)
Called periodically to verify the state of stack ports.

floods_to_root()
Return True if our dp floods (only) to root switch

flow_timeout(*now, table_id, match*)
Call flow timeout message handler:

Parameters

- **now** (*float*) – current epoch time.
- **table_id** (*int*) – ID of table where flow was installed.
- **match** (*dict*) – match conditions for expired flow.

Returns

OpenFlow messages, if any.

Return type

list

lacp_update(*port, lacp_up, now=None, lacp_pkt=None, other_valves=None, cold_start=False*)

Update the port's LACP states and enables/disables pipeline processing.

Parameters

- **port** – The port the packet is being received on
- **lacp_up** (*bool*) – Whether the lacp actor is up
- **now** (*float*) – The current time
- **lacp_pkt** ([PacketMeta](#)) – The received LACP packet
- **other_valves** (*list*) – List of other valves (in the stack)
- **cold_start** (*bool*) – Whether port is cold starting.

Returns

ofmsgs

learn_host(*now, pkt_meta, other_valves*)

Possibly learn a host on a port.

Parameters

- **now** (*float*) – current epoch time.
- **pkt_meta** ([PacketMeta](#)) – PacketMeta instance for packet received.
- **other_valves** (*list*) – all Valves other than this one.

Returns

OpenFlow messages, if any.

Return type

list

lldp_handler(*now, pkt_meta, other_valves*)

Handle an LLDP packet.

Parameters

- **pkt_meta** ([PacketMeta](#)) – packet for control plane.

logger

logname

metrics

notifier

notify(*event_dict*)

Send an event notification.

ofchannel_log(*ofmsgs*)

Log OpenFlow messages in text format to debugging log.

ofchannel_logger

ofdescstats_handler(*body*)

Handle OF DP description.

oferror(msg)

Correlate OFError message with flow we sent, if any.

Parameters

msg (*ryu.controller.ofp_event.EventOFPMsgBase*) – message from datapath.

parse_pkt_meta(msg)

Parse OF packet-in message to PacketMeta.

parse_rcv_packet(in_port, vlan_vid, eth_type, data, orig_len, pkt, eth_pkt, vlan_pkt)

Parse a received packet into a PacketMeta instance.

Parameters

- **in_port** (*int*) – port packet was received on.
- **vlan_vid** (*int*) – VLAN VID of port packet was received on.
- **eth_type** (*int*) – Ethernet type of packet.
- **data** (*bytes*) – Raw packet data.
- **orig_len** (*int*) – Original length of packet.
- **pkt** (*ryu.lib.packet.packet*) – parsed packet received.
- **ekt_pkt** (*ryu.lib.packet.ethernet*) – parsed Ethernet header.
- **vlan_pkt** (*ryu.lib.packet.vlan*) – parsed VLAN Ethernet header.

Returns

PacketMeta instance.

pipeline

port_add(port_num)

Handle addition of a single port.

Parameters

port_num (*list*) – list of port numbers.

Returns

OpenFlow messages, if any.

Return type

list

port_delete(port_num, keep_cache=False, other_valves=None)

Return flow messages that delete port from pipeline.

port_desc_stats_reply_handler(port_desc_stats, _other_valves, now)

port_status_handler(port_no, reason, state, _other_valves, now)

Return OpenFlow messages responding to port operational status change.

ports_add(port_nums, cold_start=False, log_msg='up')

Handle the addition of ports.

Parameters

- **port_num** (*list*) – list of port numbers.
- **cold_start** (*bool*) – True if configuring datapath from scratch.

Returns

OpenFlow messages, if any.

Return type

list

ports_delete(*port_nums*, *log_msg*='down', *keep_cache*=False, *other_valves*=None, *now*=None)

Handle the deletion of ports.

Parameters

port_nums (list) – list of port numbers.

Returns

OpenFlow messages, if any.

Return type

list

prepare_send_flows(*flow_msgs*)

Prepare to send flows to datapath.

Parameters

flow_msgs (list) – OpenFlow messages to send.

rate_limit_packet_ins(*now*)

Return True if too many packet ins this second.

rcv_packet(*now*, *other_valves*, *pkt_meta*)

Handle a packet from the dataplane (eg to re/learn a host).

The packet may be sent to us also in response to FAUCET initiating IPv6 neighbor discovery, or ARP, to resolve a nexthop.

Parameters

- **other_valves** (list) – all Valves other than this one.
- **pkt_meta** (PacketMeta) – packet for control plane.

Returns

OpenFlow messages, if any by Valve.

Return type

dict

recent_ofmsgs

reload_config(*_now*, *new_dp*, *valves*=None)

Reload configuration new_dp.

Following config changes are currently supported:

- **Port config: support all available configs**
(e.g. native_vlan, acl_in) & change operations (add, delete, modify) a port
- **ACL config:support any modification, currently reload all**
rules belonging to an ACL
- VLAN config: enable, disable routing, etc...

Parameters

- **now** (float) – current epoch time.

- **new_dp** ([DP](#)) – new dataplane configuration.
- **valves** (*list*) – List of all valves

Returns

OpenFlow messages.

Return type

ofmsgs (list)

resolve_gateways(*now, other_valves*)

Call route managers to re/resolve gateways.

Returns

OpenFlow messages, if any by Valve.

Return type

dict

router_rcv_packet(*now, pkt_meta*)

Process packets destined for router or run resolver.

Parameters

- **now** (*float*) – current epoch time.
- **pkt_meta** ([PacketMeta](#)) – packet for control plane.

Returns

OpenFlow messages.

Return type

list

router_vlan_for_ip_gw(*vlan, ip_gw*)**send_flows**(*ryu_dp, flow_msgs, now*)

Send flows to datapath (or disconnect an OF session).

Parameters

- **ryu_dp** ([ryu.controller.controller.Datapath](#)) – datapath.
- **flow_msgs** (*list*) – OpenFlow messages to send.

stack_manager**stale_root****state_expire**(*now, other_valves*)

Expire controller caches/state (e.g. hosts learned).

Parameters

- **now** (*float*) – current epoch time.
- **other_valves** (*list*) – all Valves other than this one.

Returns

OpenFlow messages, if any by Valve.

Return type

dict

switch_features(_msg)
Send configuration flows necessary for the switch implementation.

Parameters

msg (*OFPSwitchFeatures*) – msg sent from switch.

Vendor specific configuration should be implemented here.

switch_manager**update_config_metrics()**

Update table names for configuration.

update_metrics(now, updated_port=None, rate_limited=False)

Update Gauge/metrics.

class faucet.valve.ValveLogger(logger, dp_id, dp_name)

Bases: `object`

Logger for a Valve that adds DP ID.

debug(log_msg)

Log debug level message.

error(log_msg)

Log error level message.

info(log_msg)

Log info level message.

warning(log_msg)

Log warning level message.

faucet.valve.valve_factory(dp)

Return a Valve object based dp's hardware configuration field.

Parameters

dp ([DP](#)) – DP instance with the configuration for this Valve.

faucet.valve_acl module

Compose ACLs on ports.

class faucet.valve_acl.ValveAclManager(port_acl_table, vlan_acl_table, egress_acl_table, pipeline, meters, dp_acls=None)

Bases: `ValveManagerBase`

Handle installation of ACLs on a DP

add_authed_mac(port_num, mac)

Add authed mac address

add_meters(added_meters)

Add new meters.

add_port(port)

Install port acls if configured

add_port_acl(*acl, port_num, mac=None*)
Create ACL openflow rules for Port

add_vlan(*vlan, cold_start*)
Install VLAN ACL if configured.

build_reverse_tunnel_rules_ofmsgs(*source_id, tunnel_id, acl*)
Build a (reverse) tunnel only generated rule

build_tunnel_acl_rule_ofmsgs(*source_id, tunnel_id, acl*)
Build a rule of an ACL that contains a tunnel

build_tunnel_rules_ofmsgs(*source_id, tunnel_id, acl*)
Build a tunnel only generated rule

cold_start_port(*port*)
Reload acl for a port by deleting existing rules and calling add_port

create_dot1x_flow_pair(*port_num, nfv_sw_port_num, mac*)
Create dot1x flow pair

create_mab_flow(*port_num, nfv_sw_port_num, mac*)

Create MAB ACL for sending IP Activity to Chewie NFV

Returns flowmods to send all IP traffic to Chewie

Parameters

- **port_num (int)** – Number of port in
- **nfv_sw_port_num (int)** – Number of port out
- **mac (str)** – MAC address of the valve/port combo

del_authed_mac(*port_num, mac=None, strict=True*)

remove authed mac address

del_dot1x_flow_pair(*port_num, nfv_sw_port_num, mac*)

Deletes dot1x flow pair

del_mab_flow(*port_num, nfv_sw_port_num, mac*)

Remove MAB ACL for sending IP Activity to Chewie NFV

Returns flowmods to send all IP traffic to Chewie

Parameters

- **port_num (int)** – Number of port in
- **nfv_sw_port_num (int)** – Number of port out
- **mac (str)** – MAC address of the valve/port combo

del_meters(*deleted_meters*)

del_port(*port*)

delete flows in response to a port removal

del_port_acl(*acl, port_num, mac=None*)

Delete ACL rules for Port

```
del_vlan(vlan)
    Remove VLAN ACLs if configured.

initialise_tables()
    Install dp acls if configured

faucet.valve_acl.add_mac_address_to_match(match, eth_src)
    Add or change the value of a match type

faucet.valve_acl.build_acl_entry(acl_table, rule_conf, meters, acl_allow_inst, acl_force_port_vlan_inst,
                                   port_num=None, vlan_vid=None, tunnel_rules=None, source_id=None)
    Build flow/groupmods for one ACL rule entry.

faucet.valve_acl.build_acl_ofmsgs(acls, acl_table, acl_allow_inst, acl_force_port_vlan_inst,
                                    highest_priority, meters, exact_match, port_num=None,
                                    vlan_vid=None, tunnel_rules=None, source_id=None, flowdel=False)
    Build flow/groupmods for all entries in an ACL.

faucet.valve_acl.build_acl_port_of_msgs(acl, vid, port_num, acl_table, goto_table, priority)
    A Helper function for building Openflow Mod Messages for Port ACLs

faucet.valve_acl.build_ct_actions(acl_table, ct_dict)
    Build conntrack action from ACL rule

faucet.valve_acl.build_ordered_output_actions(acl_table, output_list, tunnel_rules=None,
                                               source_id=None)
    Build actions from ordered ACL output list

faucet.valve_acl.build_output_actions(acl_table, output_dict, tunnel_rules=None, source_id=None)
    Implement actions to alter packet/output.

faucet.valve_acl.build_rule_ofmsgs(rule_conf, acl_table, acl_allow_inst, acl_force_port_vlan_inst,
                                    highest_priority, acl_rule_priority, meters, exact_match,
                                    port_num=None, vlan_vid=None, tunnel_rules=None,
                                    source_id=None, flowdel=False)
    Build an ACL rule and return OFMSGS

faucet.valve_acl.build_tunnel_ofmsgs(rule_conf, acl_table, priority, port_num=None, vlan_vid=None,
                                       flowdel=False, reverse=False)
    Build a specific tunnel only ofmsgs

faucet.valve_acl.push_vlan(acl_table, vlan_vid)
    Push a VLAN tag with optional selection of eth type.

faucet.valve_acl.rewrite_vlan(acl_table, output_dict)
    Implement actions to rewrite VLAN headers.
```

`faucet.valve_coprocessor module`

Implementation of Valve coprocessor.

```
class faucet.valve_coprocessor.CoprocessorManager(ports, copro_table, vlan_table, eth_src_table,
                                                output_table, low_priority, high_priority)
```

Bases: `ValveManagerBase`

Implementation of Valve coprocessor.

add_port(*port*)

Add flows to allow coprocessor to inject or output packets.

`faucet.valve_lldp module`

Manage LLDP.

```
class faucet.valve_lldp.ValveLLDPManager(vlan_table, highest_priority, logger, notify, inc_var, set_var,
                                         set_port_var, stack_manager)
```

Bases: `ValveManagerBase`

Manage LLDP.

add_port(*port*)

install flows in response to a new port

del_port(*port*)

delete flows in response to a port removal

update_stack_link_state(*ports*, *now*, *valve*, *other_valves*)

Update the stack link states of the set of provided stack ports

Parameters

- **ports** (*list*) – List of stack ports to update the state of
- **now** (*float*) – Current time
- **valve** (`Valve`) – Valve that owns this LLDPManager instance
- **other_valves** (*list*) – List of other valves

Returns

ofmsgs by valve

Return type

dict

```
verify_lldp(port, now, valve, other_valves, remote_dp_id, remote_dp_name, remote_port_id,
            remote_port_state)
```

Verify correct LLDP cabling, then update port to next state

Parameters

- **port** (`Port`) – Port that received the LLDP
- **now** (*float*) – Current time
- **other_valves** (*list*) – Other valves in the topology
- **remote_dp_id** (*int*) – Received LLDP remote DP ID

- **remote_dp_name** (*str*) – Received LLDP remote DP name
- **remote_port_id** (*int*) – Received LLDP port ID
- **remote_port_state** (*int*) – Received LLDP port state

Returns

Ofmsgs by valve

Return type

dict

faucet.valve_manager_base module

Valve Manager base class

```
class faucet.valve_manager_base.ValveManagerBase
```

Bases: object

Base class for ValveManager objects.

Expected to control the installation of flows into datapath tables.

Ideally each datapath table should be controlled by 1 manager only.

add_port(*port*)

install flows in response to a new port

add_vlan(*vlan*, *cold_start*)

install flows in response to a new VLAN

del_port(*port*)

delete flows in response to a port removal

del_vlan(*vlan*)

delete flows in response to a VLAN removal

initialise_tables()

initialise tables controlled by this manager.

update_vlan(*vlan*)

flows in response to updating an existing VLAN.

faucet.valve_of module

Utility functions to parse/create OpenFlow messages.

```
class faucet.valve_of.NullRyuDatapath
```

Bases: object

Placeholder Ryu Datapath.

```
ofproto = <module 'os_ken.ofproto.ofproto_v1_3' from
'/home/docs/checkouts/readthedocs.org/user_builds/faucet/envs/1.10.9/lib/python3.10/
site-packages/os_ken/ofproto/ofproto_v1_3.py'>
```

`faucet.valve_of.apply_actions(actions)`

Return instruction that applies action list.

Parameters

`actions (list)` – list of OpenFlow actions.

Returns

instruction of actions.

Return type

`ryu.ofproto.ofproto_v1_3_parser.OFPInstruction`

`faucet.valve_of.apply_meter(meter_id)`

Return instruction to apply a meter.

`faucet.valve_of.barrier()`

Return OpenFlow barrier request.

Returns

barrier request.

Return type

`ryu.ofproto.ofproto_v1_3_parser.OFPBarrierRequest`

`faucet.valve_of.bucket(weight=0, watch_port=4294967295, watch_group=4294967295, actions=None)`

Return a group action bucket with provided actions.

`faucet.valve_of.build_group_flood_buckets(vlan_flood_accts)`

Return a list of group buckets to implement flooding on a VLAN.

`faucet.valve_of.build_match_dict(in_port=None, vlan=None, eth_type=None, eth_src=None, eth_dst=None, eth_dst_mask=None, icmpv6_type=None, nw_proto=None, nw_dst=None, metadata=None, metadata_mask=None, vlan_pcp=None, udp_src=None, udp_dst=None)`

`faucet.valve_of.controller_pps_meteradd(datapath=None, pps=0)`

Add a PPS meter towards controller.

`faucet.valve_of.controller_pps_meterdel(datapath=None)`

Delete a PPS meter towards controller.

`faucet.valve_of.ct(**kwds)`

Return connection tracker action.

Parameters

`kwds (dict)` – exactly one connection tracker action.

Returns

connection tracker action.

Return type

`ryu.ofproto.nx_actions.NXActionCT`

`faucet.valve_of.ct_clear()`

Return clear connection tracker state action.

Parameters

`kwds (dict)` – exactly one clear connection tracker state action.

Returns

clear connection tracker state action.

Return type
`ryu.ofproto.nx_actions.NXActionCTClear`
`faucet.valve_of.ct_nat(**kwds)`

Return network address translation connection tracker action.

Parameters
`kwds (dict)` – exactly one network address translation connection tracker action.
Returns
network address translation connection tracker action.

Return type
`ryu.ofproto.nx_actions.NXActionNAT`

`faucet.valve_of.dec_ip_ttl()`
Return OpenFlow action to decrement IP TTL.

Returns
decrement IP TTL.

Return type
`ryu.ofproto.ofproto_v1_3_parser.OFPActionDecNwTtl`

`faucet.valve_of.dedupe_ofmsgs(input_ofmsgs, random_order, flowkey)`
Return deduplicated ofmsg list.

`faucet.valve_of.dedupe_output_port_accts(output_port_accts)`
Deduplicate parser.OFPActionOutputs (because Ryu doesn't define `__eq__`).

Parameters
`ryu.ofproto.ofproto_v1_3_parser.OFPActionOutput (list of)` – output to port actions.

Returns
output to port actions.

Return type
list of `ryu.ofproto.ofproto_v1_3_parser.OFPActionOutput`

`faucet.valve_of.dedupe_overlaps_ofmsgs(input_ofmsgs, random_order, flowkey)`

`faucet.valve_of.desc_stats_request(datapath=None)`
Query switch description.

`faucet.valve_of.devid_present(vid)`
Return VLAN VID without VID_PRESENT flag set.

Parameters
`vid (int)` – VLAN VID with VID_PRESENT.

Returns
VLAN VID.

Return type
`int`

`faucet.valve_of.faucet_async(datapath=None, notify_flow_removed=False, packet_in=True, port_status=True)`

Return async message config for FAUCET/Gauge

`faucet.valve_of.faucet_config(datapath=None)`

Return switch config for FAUCET.

`faucet.valve_of.flood_port_outputs(tagged_ports, untagged_ports, in_port=None, exclude_ports=None)`

Return actions for both tagged and untagged ports.

`faucet.valve_of.flood_tagged_port_outputs(ports, in_port=None, exclude_ports=None)`

Return list of actions necessary to flood to list of tagged ports.

`faucet.valve_of.flood_untagged_port_outputs(ports, in_port=None, exclude_ports=None)`

Return list of actions necessary to flood to list of untagged ports.

`faucet.valve_of.flowmod(cookie, command, table_id, priority, out_port, out_group, match_fields, inst, hard_timeout, idle_timeout, flags=0)`

`faucet.valve_of.goto_table(table)`

Return instruction to goto table.

Parameters

`table` ([ValveTable](#)) – table to goto.

Returns

goto instruction.

Return type

`ryu.ofproto.ofproto_v1_3_parser.OFPIInstruction`

`faucet.valve_of.goto_table_id(table_id)`

Return instruction to goto table by table ID.

Parameters

`table` (`int`) – table by ID to goto.

Returns

goto instruction.

Return type

`ryu.ofproto.ofproto_v1_3_parser.OFPIInstruction`

`faucet.valve_of.group_act(group_id)`

Return an action to run a group.

`faucet.valve_of.groupadd(datapath=None, type_=0, group_id=0, buckets=None)`

Add a group.

`faucet.valve_of.groupadd_ff(datapath=None, group_id=0, buckets=None)`

Add a fast failover group.

`faucet.valve_of.groupdel(datapath=None, group_id=4294967292)`

Delete a group (default all groups).

`faucet.valve_of.ignore_port(port_num)`

Return True if FAUCET should ignore this port.

Parameters

`port_num` (`int`) – switch port.

Returns

True if FAUCET should ignore this port.

Return type
bool

`faucet.valve_of.is_apply_actions(instruction)`

Return True if an apply action.

Parameters
`instruction` – OpenFlow instruction.

Returns
True if an apply action.

Return type
bool

`faucet.valve_of.is_ct(action)`

`faucet.valve_of.is_flowaddmod(ofmsg)`

Return True if flow message is a FlowMod, add or modify.

Parameters
`ofmsg` – ryu.ofproto.ofproto_v1_3_parser message.

Returns
True if is a FlowMod, add or modify.

Return type
bool

`faucet.valve_of.is_flowdel(ofmsg)`

Return True if flow message is a FlowMod and a delete.

Parameters
`ofmsg` – ryu.ofproto.ofproto_v1_3_parser message.

Returns
True if is a FlowMod delete/strict.

Return type
bool

`faucet.valve_of.is_flowmod(ofmsg)`

Return True if flow message is a FlowMod.

Parameters
`ofmsg` – ryu.ofproto.ofproto_v1_3_parser message.

Returns
True if is a FlowMod

Return type
bool

`faucet.valve_of.is_global_flowdel(ofmsg)`

Is a delete of all flows in all tables.

`faucet.valve_of.is_global_groupdel(ofmsg)`

Is a delete of all groups.

`faucet.valve_of.is_global_meterdel(ofmsg)`

Is a delete of all meters.

`faucet.valve_of.is_groupadd(ofmsg)`

Return True if OF message is a GroupMod and command is add.

Parameters

`ofmsg` – ryu.ofproto.ofproto_v1_3_parser message.

Returns

True if is a GroupMod add

Return type

bool

`faucet.valve_of.is_groupdel(ofmsg)`

Return True if OF message is a GroupMod and command is delete.

Parameters

`ofmsg` – ryu.ofproto.ofproto_v1_3_parser message.

Returns

True if is a GroupMod delete

Return type

bool

`faucet.valve_of.is_groupmod(ofmsg)`

Return True if OF message is a GroupMod.

Parameters

`ofmsg` – ryu.ofproto.ofproto_v1_3_parser message.

Returns

True if is a GroupMod

Return type

bool

`faucet.valve_of.is_meter(instruction)`

Return True if a meter.

Parameters

`instruction` – OpenFlow instruction.

Returns

True if a meter.

Return type

bool

`faucet.valve_of.is_meteradd(ofmsg)`

Return True if OF message is a MeterMod and command is add.

Parameters

`ofmsg` – ryu.ofproto.ofproto_v1_3_parser message.

Returns

True if is a MeterMod add

Return type

bool

`faucet.valve_of.is_meterdel(ofmsg)`

Return True if OF message is a MeterMod and command is delete.

Parameters

ofmsg – ryu.ofproto.ofproto_v1_3_parser message.

Returns

True if is a MeterMod delete

Return type

bool

`faucet.valve_of.is_metermod(ofmsg)`

Return True if OF message is a MeterMod.

Parameters

ofmsg – ryu.ofproto.ofproto_v1_3_parser message.

Returns

True if is a MeterMod

Return type

bool

`faucet.valve_of.is_output(ofmsg)`

Return True if flow message is an action output message.

Parameters

ofmsg – ryu.ofproto.ofproto_v1_3_parser message.

Returns

True if is a OFPActionOutput.

Return type

bool

`faucet.valve_of.is_packetout(ofmsg)`

Return True if OF message is a PacketOut

Parameters

ofmsg – ryu.ofproto.ofproto_v1_3_parser message.

Returns

True if is a PacketOut

Return type

bool

`faucet.valve_of.is_set_field(action)`

`faucet.valve_of.is_table_features_req(ofmsg)`

Return True if flow message is a TFM req.

Parameters

ofmsg – ryu.ofproto.ofproto_v1_3_parser message.

Returns

True if is a TFM req.

Return type

bool

`faucet.valve_of.match(match_fields)`

Return OpenFlow matches from dict.

Parameters

match_fields (*dict*) – match fields and values.

Returns

matches.

Return type

ryu.ofproto.ofproto_v1_3_parser.OFPMatch

`faucet.valve_of.match_from_dict(match_dict)`

Parse a match dict into a OFPMatch object

`faucet.valve_of.metadata_goto_table(metadata, mask, table)`

Return instructions to write metadata and goto table.

Parameters

- **metadata** (*int*) – metadata to write to packet
- **mask** (*int*) – mask to apply to metadata
- **table** ([ValveTable](#)) – table to goto.

Returns

list of OFPInstructions

`faucet.valve_of.meteradd(meter_conf, command=0)`

Add a meter based on YAML configuration.

`faucet.valve_of.meterdel(datapath=None, meter_id=4294967295)`

Delete a meter (default all meters).

`faucet.valve_of.output_controller(max_len=194)`

Return OpenFlow action to packet in to the controller.

Parameters

max_len (*int*) – max number of bytes from packet to output.

Returns

packet in action.

Return type

ryu.ofproto.ofproto_v1_3_parser.OFPActionOutput

`faucet.valve_of.output_in_port()`

Return OpenFlow action to output out input port.

Returns

ryu.ofproto.ofproto_v1_3_parser.OFPActionOutput.

`faucet.valve_of.output_non_output_actions(flood Acts)`

Split output actions into deduped actions, output ports, and non-output port actions.

Parameters

ryu.ofproto.ofproto_v1_3_parser.OFPActions (*list of*) – flood actions.

Returns

set of deduped actions, output ports, and non-output actions.

`faucet.valve_of.output_port(port_num, max_len=0)`

Return OpenFlow action to output to a port.

Parameters

- **port_num** (*int*) – port to output to.
- **max_len** (*int*) – maximum length of packet to output (default no maximum).

Returns

output to port action.

Return type

`ryu.ofproto.ofproto_v1_3_parser.OFPActionOutput`

`faucet.valve_of.packetout(port_num, data)`

Return OpenFlow action to packet out to dataplane from controller.

Parameters

- **port_num** (*int*) – port to output to.
- **data** (*str*) – raw packet to output.

Returns

packet out action.

Return type

`ryu.ofproto.ofproto_v1_3_parser.OFPActionOutput`

`faucet.valve_of.packetouts(port_nums, data)`

Return OpenFlow action to multiply packet out to dataplane from controller.

Parameters

- **port_num** (*list*) – ints, ports to output to.
- **data** (*str*) – raw packet to output.

Returns

packet out action.

Return type

`ryu.ofproto.ofproto_v1_3_parser.OFPActionOutput`

`faucet.valve_of.pop_vlan()`

Return OpenFlow action to pop outermost Ethernet 802.1Q VLAN header.

Returns

Pop VLAN.

Return type

`ryu.ofproto.ofproto_v1_3_parser.OFPActionPopVlan`

`faucet.valve_of.port_status_from_state(state)`

Return True if OFPPS_LINK_DOWN is not set.

`faucet.valve_of.ports_from_output_portActs(output_portActs)`

Return unique port numbers from OFPActionOutput actions.

Parameters

`ryu.ofproto.ofproto_v1_3_parser.OFPActionOutput (list of)` – output to port actions.

Returns

set of port number ints.

`faucet.valve_of.push_vlan_act(table, vlan_vid, eth_type=33024)`

Return OpenFlow action list to push Ethernet 802.1Q header with VLAN VID.

Parameters

`vid (int)` – VLAN VID

Returns

actions to push 802.1Q header with VLAN VID set.

Return type

list

`faucet.valve_of.remove_overlap_ofmsgs(input_ofmsgs, overlap_input_ofmsgs)`

`faucet.valve_of.set_field(**kwds)`

Return action to set any field.

Parameters

`kwds (dict)` – exactly one field to set

Returns

set field action.

Return type

`ryu.ofproto.ofproto_v1_3_parser.OFPActionSetField`

`faucet.valve_of.slowpath_pps_meteradd(datapath=None, pps=0)`

Add a PPS meter towards controller.

`faucet.valve_of.slowpath_pps_meterdel(datapath=None)`

Delete a PPS meter towards controller.

`faucet.valve_of.sort_flows(input_ofmsgs)`

Sort flows in canonical order, descending table and priority.

`faucet.valve_of.table_features(body)`

`faucet.valve_of.valve_flowreorder(input_ofmsgs, use_barriers=True)`

Reorder flows for better OFA performance.

`faucet.valve_of.valve_match_vid(value)`

`faucet.valve_of.verify_flowmod(flowmod_msg)`

Verify flowmod can be serialized.

`faucet.valve_of.vlan_present(vid)`

Return VLAN VID with VID_PRESENT flag set.

Parameters

`vid (int)` – VLAN VID

Returns

VLAN VID with VID_PRESENT.

Return type

int

faucet.valve_of_old module

Deprecated OF matches.

faucet.valve_outonly module

Implementation of Valve output only.

```
class faucet.valve_outonly.OutputOnlyManager(vlan_table, highest_priority)
```

Bases: *ValveManagerBase*

Implementation of Valve output only.

```
add_port(port)
```

install flows in response to a new port

```
del_port(port)
```

delete flows in response to a port removal

faucet.valve_packet module

Utility functions for parsing and building Ethernet packet/contents.

```
class faucet.valve_packet.PacketMeta(data, orig_len, pkt, eth_pkt, vlan_pkt, port, valve_vlan, eth_src, eth_dst, eth_type)
```

Bases: *object*

Original, and parsed Ethernet packet metadata.

```
ETH_TYPES_PARSERS = {2048: (4, <functools._lru_cache_wrapper object>, <class 'os_ken.lib.packet.ipv4.ipv4'>), 2054: (None, None, <class 'os_ken.lib.packet.arp.arp'>), 34525: (6, None, <class 'os_ken.lib.packet.ipv6.ipv6'>)}
```

```
MAX_ETH_TYPE_PKT_SIZE = {2048: 174, 2054: 64}
```

```
MIN_ETH_TYPE_PKT_SIZE = {2048: 38, 2054: 46, 34525: 58}
```

data

eth_dst

eth_pkt

eth_src

eth_type

ip_ver()

Return IP version number.

13_dst

13_pkt

13_src

log()

orig_len

packet_complete()

True if we have the complete packet.

pkt

port

reparse(max_len)

Reparse packet using data up to the specified maximum length.

reparse_all()

Reparse packet with all available data.

reparse_ip(payload=0)

Reparse packet with specified IP header type and optionally payload.

vlan

vlan_pkt

`faucet.valve_packet.arp_reply(vid, eth_src, eth_dst, src_ip, dst_ip)`

Return an ARP reply packet.

Parameters

- **vid (int or None)** – VLAN VID to use (or None).
- **eth_src (str)** – Ethernet source address.
- **eth_dst (str)** – destination Ethernet MAC address.
- **src_ip (ipaddress.IPv4Address)** – source IPv4 address.
- **dst_ip (ipaddress.IPv4Address)** – destination IPv4 address.

Returns

serialized ARP reply packet.

Return type

`ryu.lib.packet.arp`

`faucet.valve_packet.arp_request(vid, eth_src, eth_dst, src_ip, dst_ip)`

Return an ARP request packet.

Parameters

- **vid (int or None)** – VLAN VID to use (or None).
- **eth_src (str)** – Ethernet source address.
- **eth_dst (str)** – Ethernet destination address.
- **src_ip (ipaddress.IPv4Address)** – source IPv4 address.
- **dst_ip (ipaddress.IPv4Address)** – requested IPv4 address.

Returns

serialized ARP request packet.

Return type

`ryu.lib.packet.arp`

`faucet.valve_packet.build_pkt_header(vid, eth_src, eth_dst, dl_type)`

Return an Ethernet packet header.

Parameters

- **vid** (*int or None*) – VLAN VID to use (or None).
- **eth_src** (*str*) – source Ethernet MAC address.
- **eth_dst** (*str*) – destination Ethernet MAC address.
- **dl_type** (*int*) – EtherType.

Returns

Ethernet packet with header.

Return type

`ryu.lib.packet.ethernet`

`faucet.valve_packet.echo_reply(vid, eth_src, eth_dst, src_ip, dst_ip, data)`

Return an ICMP echo reply packet.

Parameters

- **vid** (*int or None*) – VLAN VID to use (or None).
- **eth_src** (*str*) – Ethernet source address.
- **eth_dst** (*str*) – destination Ethernet MAC address.
- **src_ip** (*ipaddress.IPv4Address*) – source IPv4 address.
- **dst_ip** (*ipaddress.IPv4Address*) – destination IPv4 address.

Returns

serialized ICMP echo reply packet.

Return type

`ryu.lib.packet.icmp`

`faucet.valve_packet.faucet_lldp_stack_state_tlvs(dp, port)`

Return a LLDP TLV for state of a stack port.

`faucet.valve_packet.faucet_lldp_tlvs(dp)`

Return LLDP TLVs for a datapath.

`faucet.valve_packet.faucet_oui(mac)`

Return first 3 bytes of MAC address (given as str).

`faucet.valve_packet.faucet_tlvs(lldp_pkt, faucet_dp_mac)`

Return list of TLVs with FAUCET OUI.

`faucet.valve_packet.icmpv6_echo_reply(vid, eth_src, eth_dst, src_ip, dst_ip, hop_limit, id_, seq, data)`

Return IPv6 ICMP echo reply packet.

Parameters

- **vid** (*int or None*) – VLAN VID to use (or None).
- **eth_src** (*str*) – source Ethernet MAC address.
- **eth_dst** (*str*) – destination Ethernet MAC address.
- **src_ip** (*ipaddress.IPv6Address*) – source IPv6 address.
- **dst_ip** (*ipaddress.IPv6Address*) – destination IPv6 address.

- **hop_limit** (*int*) – IPv6 hop limit.
- **id** (*int*) – identifier for echo reply.
- **seq** (*int*) – sequence number for echo reply.
- **data** (*str*) – payload for echo reply.

Returns

Serialized IPv6 ICMP echo reply packet.

Return type

ryu.lib.packet.ethernet

`faucet.valve_packet.int_from_mac(mac)`

`faucet.valve_packet.int_in_mac(mac, to_int)`

`faucet.valve_packet.ipv4_parseable(ip_header_data)`

Return True if an IPv4 packet we could parse.

`faucet.valve_packet.ipv6_link_eth_mcast(dst_ip)`

Return an Ethernet multicast address from an IPv6 address.

See RFC 2464 section 7.

Parameters

dst_ip (*ipaddress.IPv6Address*) – IPv6 address.

Returns

Ethernet multicast address.

Return type

str

`faucet.valve_packet.ipv6_solicited_node_from_unicast(ucast)`

Return IPv6 solicited node multicast address from IPv6 unicast address.

See RFC 3513 section 2.7.1.

Parameters

ucast (*ipaddress.IPv6Address*) – IPv6 unicast address.

Returns

IPv6 solicited node multicast address.

Return type

ipaddress.I Pv6Address

`faucet.valve_packet.lacp_actor_up(lacp_pkt)`

Return 1 if remote LACP link is up.

`faucet.valve_packet.lacp_reqreply(eth_src, actor_system, actor_key, actor_port, actor_port_priority=0,
actor_state_synchronization=0, actor_state_activity=0,
actor_state_collecting=1, actor_state_distributing=1,
partner_system='00:00:00:00:00:00', partner_key=0, partner_port=0,
partner_system_priority=0, partner_port_priority=0,
partner_state_defaulted=0, partner_state_expired=0,
partner_state_timeout=0, partner_state_collecting=0,
partner_state_distributing=0, partner_state_aggregation=0,
partner_state_synchronization=0, partner_state_activity=0)`

Return a LACP frame.

Parameters

- **eth_src** (*str*) – source Ethernet MAC address.
- **actor_system** (*str*) – actor system ID (MAC address)
- **actor_key** (*int*) – actor's LACP key assigned to this port.
- **actor_port** (*int*) – actor port number.
- **actor_state_synchronization** (*int*) – 1 if we will use this link.
- **actor_state_activity** (*int*) – 1 if actively sending LACP.
- **actor_state_collecting** (*int*) – 1 if receiving on this link.
- **actor_state_distributing** (*int*) – 1 if transmitting on this link.
- **partner_system** (*str*) – partner system ID (MAC address)
- **partner_key** (*int*) – partner's LACP key assigned to this port.
- **partner_port** (*int*) – partner port number.
- **partner_system_priority** (*int*) – partner's system priority.
- **partner_port_priority** (*int*) – partner's port priority.
- **partner_state_defaulted** (*int*) – 1 if partner reverted to defaults.
- **partner_state_expired** (*int*) – 1 if partner thinks LACP expired.
- **partner_state_timeout** (*int*) – 1 if partner has short timeout.
- **partner_state_collecting** (*int*) – 1 if partner receiving on this link.
- **partner_state_distributing** (*int*) – 1 if partner transmitting on this link.
- **partner_state_aggregation** (*int*) – 1 if partner can aggregate this link.
- **partner_state_synchronization** (*int*) – 1 if partner will use this link.
- **partner_state_activity** (*int*) – 1 if partner actively sends LACP.

Returns

Ethernet packet with header.

Return type

`ryu.lib.packet.ethernet`

```
faucet.valve_packet.lldp_beacon(eth_src, chassis_id, port_id, ttl, org_tlvs=None, system_name=None,
                                 port_descr=None)
```

Return an LLDP frame suitable for a host/access port.

Parameters

- **eth_src** (*str*) – source Ethernet MAC address.
- **chassis_id** (*str*) – Chassis ID.
- **port_id** (*int*) – port ID,
- **TTL** (*int*) – TTL for payload.
- **org_tlvs** (*list*) – list of tuples of (OUI, subtype, info).

Returns

Ethernet packet with header.

Return type

ryu.lib.packet.ethernet

`faucet.valve_packet.mac_addr_all_zeros(mac_addr)`

Returns True if mac_addr is all zeros.

Parameters`mac_addr (str)` – MAC address.**Returns**

True if all zeros.

Return type

bool

`faucet.valve_packet.mac_addr_is_unicast(mac_addr)`

Returns True if mac_addr is a unicast Ethernet address.

Parameters`mac_addr (str)` – MAC address.**Returns**

True if a unicast Ethernet address.

Return type

bool

`faucet.valve_packet.mac_byte_mask(mask_bytes=0)`

Return a MAC address mask with n bytes masked out.

`faucet.valve_packet.mac_mask_bits(mac_mask)`

Return number of bits in MAC mask or 0.

`faucet.valve_packet.nd_advert(vid, eth_src, eth_dst, src_ip, dst_ip)`

Return IPv6 neighbor advertisement packet.

Parameters

- `vid (int or None)` – VLAN VID to use (or None).
- `eth_src (str)` – source Ethernet MAC address.
- `eth_dst (str)` – destination Ethernet MAC address.
- `src_ip (ipaddress.IPv6Address)` – source IPv6 address.
- `dst_ip (ipaddress.IPv6Address)` – destination IPv6 address.

Returns

Serialized IPv6 neighbor discovery packet.

Return type

ryu.lib.packet.ethernet

`faucet.valve_packet.nd_request(vid, eth_src, eth_dst, src_ip, dst_ip)`

Return IPv6 neighbor discovery request packet.

Parameters

- `vid (int or None)` – VLAN VID to use (or None).
- `eth_src (str)` – source Ethernet MAC address.
- `eth_dst (str)` – Ethernet destination address.

- **src_ip** (*ipaddress.IPv6Address*) – source IPv6 address.
- **dst_ip** (*ipaddress.IPv6Address*) – requested IPv6 address.

Returns

Serialized IPv6 neighbor discovery packet.

Return type

`ryu.lib.packet.ethernet`

`faucet.valve_packet.parse_ether_pkt(pkt)`

Return parsed Ethernet packet.

Parameters

pkt (`ryu.lib.packet.packet`) – packet received from dataplane.

Returns

Ethernet packet.

Return type

`ryu.lib.packet.ethernet`

`faucet.valve_packet.parse_faucet_lldp(lldp_pkt, faucet_dp_mac)`

Parse and return FAUCET TLVs from LLDP packet.

`faucet.valve_packet.parse_lacp_pkt(pkt)`

Return parsed LACP packet.

Parameters

pkt (`ryu.lib.packet.packet`) – packet received from dataplane.

Returns

LACP packet.

Return type

`ryu.lib.packet.lacp`

`faucet.valve_packet.parse_lldp(pkt)`

Return parsed LLDP packet.

Parameters

pkt (`ryu.lib.packet.packet`) – packet received from dataplane.

Returns

LLDP packet.

Return type

`ryu.lib.packet.lldp`

`faucet.valve_packet.parse_packet_in_pkt(data, max_len, eth_pkt=None, vlan_pkt=None)`

Parse a packet received via packet in from the dataplane.

Parameters

- **data** (`bytearray`) – packet data from dataplane.
- **max_len** (`int`) – max number of packet data bytes to parse.

Returns

raw packet `ryu.lib.packet.ethernet`: parsed Ethernet packet. `int`: Ethernet type of packet (inside VLAN) `int`: VLAN VID (or None if no VLAN)

Return type

`ryu.lib.packet.packet`

`faucet.valve_packet.router_advert(vid, eth_src, eth_dst, src_ip, dst_ip, vips, pi_flags=6)`

Return IPv6 ICMP Router Advert.

Parameters

- **vid** (*int or None*) – VLAN VID to use (or None).
- **eth_src** (*str*) – source Ethernet MAC address.
- **eth_dst** (*str*) – dest Ethernet MAC address.
- **src_ip** (*ipaddress.IPv6Address*) – source IPv6 address.
- **vips** (*list*) – prefixes (*ipaddress.IPv6Address*) to advertise.
- **pi_flags** (*int*) – flags to set in prefix information field (default set A and L)

Returns

Serialized IPv6 ICMP RA packet.

Return type

`ryu.lib.packet.ethernet`

`faucet.valve_packet.tlv_cast(tlvs, tlv_attr, cast_func)`

Return cast'd attribute of first TLV or None.

`faucet.valve_packet.tlvs_by_subtype(tlvs, subtype)`

Return list of TLVs with matching type.

`faucet.valve_packet.tlvs_by_type(tlvs, tlv_type)`

Return list of TLVs with matching type.

`faucet.valve_pipeline` module

Manages movement of packets through the faucet pipeline.

`class faucet.valve_pipeline.ValvePipeline(dp)`

Bases: `ValveManagerBase`

Responsible for maintaining the integrity of the Faucet pipeline for a single valve.

Controls what packets a module sees in its tables and how it can pass packets through the pipeline.

Responsible for installing flows in the vlan, egress and classification tables

`accept_to_classification(actions=None)`

Get instructions to forward packet through the pipeline to classification table. :param actions: (optional) list of actions to apply to packet.

Returns

list of instructions

`accept_to_egress(actions=None)`

Get instructions to forward packet through the pipeline to egress table

Raises an assertion error if egress pipeline is not configured

Parameters

`actions` – (optional) list of actions to apply to the packet

Return type

list of instructions

accept_to_l2_forwarding(actions=None)

Get instructions to forward packet through the pipeline to l2 forwarding. :param actions: (optional) list of actions to apply to packet.

Returns

list of instructions

accept_to_vlan(actions=None)

Get instructions to forward packet through the pipeline to vlan table. :param actions: (optional) list of actions to apply to packet.

Returns

list of instructions

add_port(port)

install flows in response to a new port

del_port(port)

delete flows in response to a port removal

filter_packets(match_dict, priority_offset=0)

get a list of flow modification messages to filter packets from the pipeline. :param match_dict: a dictionary specifying the match fields :param priority_offset: used to prevent overlapping entries

initialise_tables()

Install rules to initialise the classification_table

output(port, vlan, hairpin=False, external_forwarding_requested=None)

Get instructions list to output a packet through the regular pipeline.

Parameters

- **port** – Port object of port to output packet to
- **vlan** – Vlan object of vlan to output packet on
- **hairpin** – if True, hairpinning is required
- **apply_egress_acl** – if True the packet will be sent to the egress acl table before being output

Returns

list of Instructions

remove_filter(match_dict, strict=True, priority_offset=0)

retrieve flow mods to remove a filter from the classification table

select_packets(target_table, match_dict, actions=None, priority_offset=0)

retrieve rules to redirect packets matching match_dict to table

`faucet.valve_route module`

Valve IPv4/IPv6 routing implementation.

class `faucet.valve_route.AnonVLAN(vid)`

Bases: `object`

The anonymous VLAN for global routing

class `faucet.valve_route.NextHop(eth_src, port, now)`

Bases: `object`

Describes a directly connected (at layer 2) nexthop.

age(now)

Return age of this nexthop.

cache_time

dead(max_fib_retries)

Return True if this nexthop is considered dead.

eth_src

last_retry_time

next_retry(now, max_resolve_backoff_time)

Increment state for next retry.

next_retry_time

port

resolution_due(now, max_age)

Return True if this nexthop is due to be re resolved/retried.

resolve_retries

class `faucet.valve_route.ValveIPv4RouteManager(logger, notify, global_vlan, neighbor_timeout,`
`max_hosts_per_resolve_cycle,`
`max_host_fib_retry_count, max_resolve_backoff_time,`
`proactive_learn, dec_ttl, multi_out, fib_table,`
`vip_table, pipeline, routers, stack_manager)`

Bases: `ValveRouteManager`

Implement IPv4 RIB/FIB.

CONTROL_ETH_TYPES = (2048, 2054)

ETH_TYPE = 2048

ICMP_SIZE = 174

ICMP_TYPE = 1

IPV = 4

IP_PKT

alias of `ipv4`

```

active
advertise(_vlan)
control_plane_handler(now, pkt_meta)
    Handle packets destined for router otherwise proactively learn host information
dec_ttl
fib_table
global_routing
global_vlan
logger
max_host_fib_retry_count
max_hosts_per_resolve_cycle
max_resolve_backoff_time
multi_out
neighbor_timeout
notify
pipeline
proactive_learn
route_priority
routers
switch_manager
vip_table

class faucet.valve_route.ValveIPv6RouteManager(logger, notify, global_vlan, neighbor_timeout,
                                max_hosts_per_resolve_cycle,
                                max_host_fib_retry_count, max_resolve_backoff_time,
                                proactive_learn, dec_ttl, multi_out, fib_table,
                                vip_table, pipeline, routers, stack_manager)

Bases: ValveRouteManager

Implement IPv6 FIB.

CONTROL_ETH_TYPES = (34525,)
ETH_TYPE = 34525
ICMP_SIZE = 194
ICMP_TYPE = 58
IPV = 6

```

```
IP_PKT
    alias of ipv6

active

advertise(vlan)

control_plane_handler(now, pkt_meta)
    Resolve packets destined for router or proactively learn host information

dec_ttl

fib_table

global_routing

global_vlan

logger

max_host_fib_retry_count

max_hosts_per_resolve_cycle

max_resolve_backoff_time

multi_out

neighbor_timeout

notify

pipeline

proactive_learn

route_priority

routers

switch_manager

vip_table

class faucet.valve_route.ValveRouteManager(logger, notify, global_vlan, neighbor_timeout,
                                             max_hosts_per_resolve_cycle, max_host_fib_retry_count,
                                             max_resolve_backoff_time, proactive_learn, dec_ttl,
                                             multi_out, fib_table, vip_table, pipeline, routers,
                                             stack_manager)
```

Bases: [ValveManagerBase](#)

Base class to implement RIB/FIB.

CONTROL_ETH_TYPES = ()

ETH_TYPE = None

ICMP_SIZE = None

ICMP_TYPE = None

```

IPV = 0
IP_PKT = None
MAX_PACKET_IN_SIZE = 194
active
add_host_fib_route_from_pkt(now, pkt_meta)
    Add a host FIB route given packet from host.

    Parameters
        • now (float) – seconds since epoch.
        • pkt_meta (PacketMeta) – received packet.

    Returns
        OpenFlow messages.

    Return type
        list

add_route(vlan, ip_gw, ip_dst)
    Add a route to the RIB.

    Parameters
        • vlan (vlan) – VLAN containing this RIB.
        • ip_gw (ipaddress.ip_address) – IP address of nexthop.
        • ip_dst (ipaddress.ip_network) – destination IP network.

    Returns
        OpenFlow messages.

    Return type
        list

add_vlan(vlan, cold_start)
    Add a VLAN.

advertise(vlan)

control_plane_handler(now, pkt_meta)

dec_ttl

del_route(vlan, ip_dst)
    Delete a route from the RIB.

    Only one route with this exact destination is supported.

    Parameters
        • vlan (vlan) – VLAN containing this RIB.
        • ip_dst (ipaddress.ip_network) – destination IP network.

    Returns
        OpenFlow messages.

    Return type
        list

```

del_vlan(vlan)

Delete a VLAN.

expire_port_nexthops(port)

Expire all hosts on a port

fib_table**global_routing****global_vlan****logger****max_host_fib_retry_count****max_hosts_per_resolve_cycle****max_resolve_backoff_time****multi_out****neighbor_timeout****nexthop_dead(nexthop_cache_entry)**

Returns true if the nexthop_cache_entry is considered dead

notify**notify_learn(pkt_meta)****pipeline****proactive_learn****resolve_expire_hosts(vlan, now, resolve_all=True)**

Re/resolve hosts.

Parameters

- **vlan** (*vlan*) – VLAN containing this RIB/FIB.
- **now** (*float*) – seconds since epoch.
- **resolve_all** (*bool*) – attempt to resolve all unresolved gateways.

Returns

OpenFlow messages.

Return type

list

resolve_gateways(vlan, now, resolve_all=True)

Re/resolve gateways.

Parameters

- **vlan** (*vlan*) – VLAN containing this RIB/FIB.
- **now** (*float*) – seconds since epoch.
- **resolve_all** (*bool*) – attempt to resolve all unresolved gateways.

Returns
 OpenFlow messages.

Return type
 list

route_priority

router_vlan_for_ip_gw(vlan, ip_gw)
 Return router VLAN for IP gateway (or None).

Parameters

- **vlan (vlan)** – VLAN containing this RIB.
- **ip_gw (ipaddress.ip_address)** – IP address of nexthop.

Returns
 VLAN for this gateway or None.

routers

switch_manager

vip_table

faucet.valve_ryuapp module

OSKenApp base class for FAUCET/Gauge.

class faucet.valve_ryuapp.EventReconfigure

Bases: EventBase

Event sent to controller to cause config reload.

class faucet.valve_ryuapp.OSKenAppBase(*args, **kwargs)

Bases: OSKenApp

OSKenApp base class for FAUCET/Gauge.

OFP_VERSIONS = [4]

A list of supported OpenFlow versions for this OSKenApp. The default is all versions supported by the framework.

Examples:

```
OFP_VERSIONS = [ofproto_v1_0.OFP_VERSION,
                ofproto_v1_2.OFP_VERSION]
```

If multiple OSKen applications are loaded in the system, the intersection of their OFP_VERSIONS is used.

connect_or_disconnect_handler(ryu_event)

Handle connection or disconnection of a datapath.

Parameters

ryu_event (ryu.controller.dpset.EventDP) – trigger.

exc_logname = ''

```
get_setting(setting, path_eval=False)
    Return config setting prefaced with logname.

logname = ''

reconnect_handler(ryu_event)
    Handle reconnection of a datapath.

    Parameters
        ryu_event (ryu.controller.dpset.EventDPReconnected) – trigger.

reload_config(_ryu_event)
    Handle reloading configuration.

signal_handler(sigid, _)
    Handle signals.

    Parameters
        sigid (int) – signal received.

start()
    Start controller.

exception faucet.valve_ryuapp.ValveDeadThreadException
    Bases: Exception
    Exception raised when a dead thread is detected.
```

faucet.valve_stack module

Manage higher level stack functions

```
class faucet.valve_stack.ValveStackManager(logger, dp, stack, tunnel_acls, acl_manager, output_table,
                                            **kwargs)
    Bases: ValveManagerBase
    Implement stack manager, this handles the more higher-order stack functions. This includes port nominations
    and flood directionality.

    acl_update_tunnel(acl)
        Return ofmsgs for all tunnels in an ACL with a tunnel rule

    add_port(port)
        Need to add tunnel if port comes up with tunnel ACLs.

    add_tunnel_acls()
        Returns ofmsgs installing the tunnel path rules

    adjacent_stack_ports(peer_dp)
        Return list of ports that connect to an adjacent DP

    consistent_roots(expected_root_name, valve, other_valves)
        Returns true if all the stack nodes have the root configured correctly

    default_port_towards(dp_name)
        Default shortest path towards the provided destination, via direct shortest path

        Parameters
            dp_name (str) – Destination DP
```

Returns

port from current node that is shortest directly towards destination

Return type

Port

edge_learn_port_towards(*pkt_meta*, *edge_dp*)

Returns the port towards the edge DP

Parameters

- **pkt_meta** ([PacketMeta](#)) – Packet on the edge DP
- **edge_dp** ([DP](#)) – Edge DP that received the packet

Returns

Port towards the edge DP via some stack chosen metric

Return type

Port

is_away(*port*)

Return whether the port is an away port for the node

is_pruned_port(*port*)

Return true if the port is to be pruned

is_selected_towards_root_port(*port*)

Return true if the port is the chosen towards root port

static is_stack_port(*port*)

Return whether the port is a stack port

is_towards_root(*port*)

Return whether the port is a port towards the root for the node

static nominate_stack_root(*root_valve*, *other_valves*, *now*, *last_live_times*, *update_time*)

Nominate a new stack root

Parameters

- **root_valve** ([Valve](#)) – Previous/current root Valve object
- **other_valves** (*list*) – List of other valves (not including previous root)
- **now** (*float*) – Current time
- **last_live_times** (*dict*) – Last live time value for each DP
- **update_time** (*int*) – Stack root update interval time

Returns

Name of the new elected stack root

Return type

str

relative_port_towards(*dp_name*)

Returns the shortest path towards provided destination, via either the root or away paths

Parameters

- **dp_name** (*str*) – Destination DP

Returns

port from current node that is towards/away the destination DP depending on relative position of the current node

Return type

Port

reset_peer_distances()

Recalculates the towards and away ports for this node

stack_ports()

Yield the stack ports of this stack node

static stacked_valves(valves)

Return set of valves that have stacking enabled

tunnel_outport(src_dp, dst_dp, dst_port)

Returns the output port for the current stack node for the tunnel path

Parameters

- **src_dp** (*str*) – Source DP name of the tunnel
- **dst_dp** (*str*) – Destination DP name of the tunnel
- **dst_port** (*int*) – Destination port of the tunnel

Returns

Output port number for the current node of the tunnel

Return type

int

update_health(now, last_live_times, update_time)

Returns whether the current stack node is healthy, a healthy stack node

is one that attempted connected recently, or was known to be running recently, has all LAGs UP and any stack port UP

Parameters

- **now** (*float*) – Current time
- **last_live_times** (*dict*) – Last live time value for each DP
- **update_time** (*int*) – Stack root update interval time

Returns

True if current stack node is healthy

Return type

bool

update_stack_topo(event, dp, port)

Update the stack topo according to the event.

Parameters

- **event** (*bool*) – True if the port is UP
- **dp** (*DP*) – DP object
- **port** (*Port*) – The port being brought UP/DOWN

`faucet.valve_switch module`

Manage flooding/learning on datapaths.

`faucet.valve_switch.valve_switch_factory(logger, dp, pipeline, stack_manager)`

Return switch flood/learning manager based on datapath configuration.

Parameters

- **logger** – logger instance.
- **dp** – DP instance.
- **pipeline** – ValvePipeline instance.

Returns

switch manager instance.

`faucet.valve_switch_stack module`

Manage flooding/learning on stacked datapaths.

`class faucet.valve_switch_stack.ValveSwitchStackManagerBase(stack_manager, **kwargs)`

Bases: `ValveSwitchManager`

Base class for dataplane based flooding/learning on stacked dataplanes.

`add_drop_spoofed_faucet_mac_rules(vlan)`

Install rules to drop spoofed faucet mac

`add_port(port)`

install flows in response to a new port

`del_port(port)`

delete flows in response to a port removal

`edge_learn_port(other_valves, pkt_meta)`

Find a port towards the edge DP where the packet originated from

Parameters

- **other_valves** (`list`) – All Valves other than this one.
- **pkt_meta** (`PacketMeta`) – PacketMeta instance for packet received.

Returns

port to learn host on, or None.

`get_lacp_dpid_nomination(lacp_id, valve, other_valves)`

Chooses the DP for a given LAG.

The DP will be nominated by the following conditions in order:

- 1) Number of LAG ports
- 2) Root DP
- 3) Lowest DPID

Parameters

- **lacp_id** – The LACP LAG ID

- **other_valves** (*list*) – list of other valves

Returns

nominated_dpid, reason

learn_host_from_pkt(*valve, now, pkt_meta, other_valves*)

Learn host from packet.

class faucet.valve_switch_stack.ValveSwitchStackManagerNoReflection(*stack_manager, **kwargs*)

Bases: *ValveSwitchStackManagerBase*

Stacks of size 2 - all switches directly connected to root.


Root switch simply floods to all other switches.

Non-root switches simply flood to the root.

class faucet.valve_switch_stack.ValveSwitchStackManagerReflection(*stack_manager, **kwargs*)

Bases: *ValveSwitchStackManagerBase*

Stacks size > 2 reflect floods off of root (selective flooding).

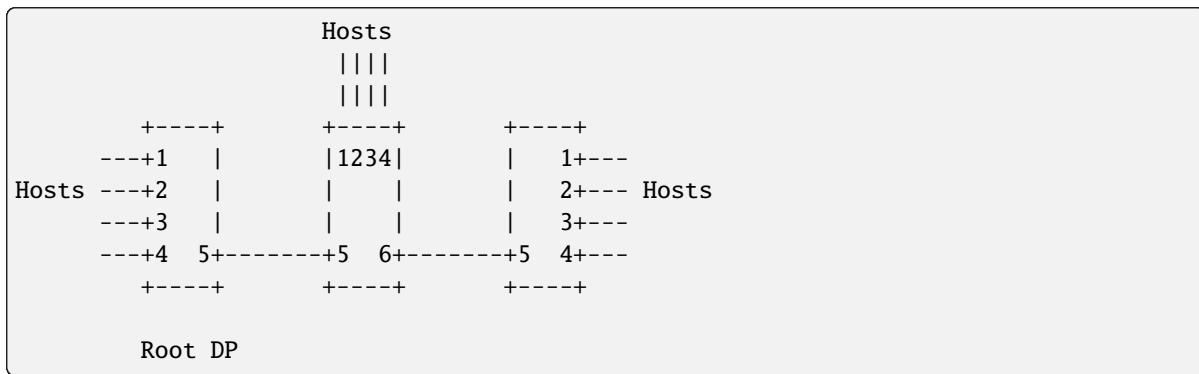

Non-root switches flood only to the root. The root switch reflects incoming floods back out. Non-root switches flood packets from the root locally and to switches further away from the root. Flooding is entirely implemented in the dataplane.

A host connected to a non-root switch can receive a copy of its own flooded packet (because the non-root switch does not know it has seen the packet already).

A host connected to the root switch does not have this problem (because flooding is always away from the root). Therefore, connections to other non-FAUCET stacking networks should only be made to the root.

On the root switch (left), flood destinations are:

1: 2 3 4 5(s) 2: 1 3 4 5(s) 3: 1 2 4 5(s) 4: 1 2 3 5(s) 5: 1 2 3 4 5(s, note reflection)

On the middle switch:

1: 5(s) 2: 5(s) 3: 5(s) 4: 5(s) 5: 1 2 3 4 6(s) 6: 5(s)

On the rightmost switch:

1: 5(s) 2: 5(s) 3: 5(s) 4: 5(s) 5: 1 2 3 4

faucet.valve_switch_standalone module

Manage flooding/learning on standalone datapaths.

```
class faucet.valve_switch_standalone.ValveSwitchFlowRemovedManager(logger, ports, vlans,
    vlan_table, vlan_acl_table,
    eth_src_table, eth_dst_table,
    eth_dst_hairpin_table,
    flood_table,
    classification_table, pipeline,
    use_group_table, groups,
    combinatorial_port_flood,
    canonical_port_order,
    restricted_bcast_arpnd,
    has_exernals,
    learn_ban_timeout,
    learn_timeout, learn_jitter,
    cache_update_guard_time,
    idle_dst, dp_high_priority,
    dp_highest_priority,
    faucet_dp_mac,
    drop_spoofed_faucet_mac)
```

Bases: `ValveSwitchManager`

Trigger relearning on flow removed notifications.

Note: not currently reliable.

`expire_hosts_from_vlan(_vlan, _now)`

Expire hosts from VLAN cache.

`flow_timeout(now, table_id, match)`

Handle a flow timed out message from dataplane.

```
class faucet.valve_switch_standalone.ValveSwitchManager(logger, ports, vlans, vlan_table,
    vlan_acl_table, eth_src_table,
    eth_dst_table, eth_dst_hairpin_table,
    flood_table, classification_table, pipeline,
    use_group_table, groups,
    combinatorial_port_flood,
    canonical_port_order,
    restricted_bcast_arpnd, has_exernals,
    learn_ban_timeout, learn_timeout,
    learn_jitter, cache_update_guard_time,
    idle_dst, dp_high_priority,
    dp_highest_priority, faucet_dp_mac,
    drop_spoofed_faucet_mac)
```

Bases: `ValveManagerBase`

Implement dataplane based flooding/learning for standalone dataplanes.

```
FLOOD_DSTS = ((True, None, None, None), (False, None, '01:80:c2:00:00:00',
    'ff:ff:ff:00:00:00'), (False, None, '01:00:5E:00:00:00', 'ff:ff:ff:00:00:00'),
    (False, None, '33:33:00:00:00:00', 'ff:ff:00:00:00:00'), (False, None,
    'ff:ff:ff:ff:ff:ff', 'ff:ff:ff:ff:ff:ff'))
```

```
RESTRICTED_FLOOD_DISTS = ((False, 2054, 'ff:ff:ff:ff:ff:ff', 'ff:ff:ff:ff:ff:ff'),  
    (False, 34525, '33:33:FF:00:00:00', 'ff:ff:ff:00:00:00'), (False, 34525,  
    '33:33:00:00:00:02', 'ff:ff:ff:ff:ff:ff'), (False, 34525, '33:33:00:00:00:01',  
    'ff:ff:ff:ff:ff:ff'))
```

`add_drop_spoofed_faucet_mac_rules(vlan)`

Install rules to drop spoofed faucet mac

`add_port(port)`

install flows in response to a new port

`add_vlan(vlan, cold_start)`

install flows in response to a new VLAN

`ban_rules(pkt_meta)`

Limit learning to a maximum configured on this port/VLAN.

Parameters

`pkt_meta` – PacketMeta instance.

Returns

OpenFlow messages, if any.

Return type

list

`del_port(port)`

delete flows in response to a port removal

`del_vlan(vlan)`

delete flows in response to a VLAN removal

`delete_host_from_vlan(eth_src, vlan)`

Delete a host from a VLAN.

`disable_forwarding(port)`

`static edge_learn_port(_other_valves, pkt_meta)`

Possibly learn a host on a port.

Parameters

- `other_valves` (`list`) – All Valves other than this one.
- `pkt_meta` (`PacketMeta`) – PacketMeta instance for packet received.

Returns

port to learn host on.

`enable_forwarding(port)`

`expire_hosts_from_vlan(vlan, now)`

Expire hosts from VLAN cache.

`static floods_to_root(_dp_obj)`

Return True if the given dp floods (only) to root switch

`static flow_timeout(_now, _table_id, _match)`

Handle a flow timed out message from dataplane.

static get_lacp_dpid_nomination(lacp_id, valve, other_valves)

Chooses the DP for a given LAG.

The DP will be nominated by the following conditions in order:

- 1) Number of LAG ports
- 2) Root DP
- 3) Lowest DPID

Parameters

- **lacp_id** – The LACP LAG ID
- **other_valves** (*list*) – list of other valves

Returns

nominated_dpid, reason

initialise_tables()

Initialise the flood table with filtering flows.

lacp_advertise(*port*)

Return flows to send LACP if active.

lacp_handler(*now*, *pkt_meta*, *valve*, *other_valves*, *lacp_update*)

Handle receiving an LACP packet :param now: current epoch time :type now: float :param pkt_meta: packet for control plane :type pkt_meta: PacketMeta :param valve: valve instance :type valve: Valve :param other_valves: all other valves :type other_valves: list :param lacp_update: callable to signal LACP state changes

Returns

dict: OpenFlow messages, if any by Valve

lacp_req_reply(*lacp_pkt*, *port*)

Constructs a LACP req-reply packet.

Parameters

- **lacp_pkt** (*PacketMeta*) – LACP packet received
- **port** – LACP port
- **other_valves** (*list*) – List of other valves

Returns

list packetout OpenFlow msgs.

lacp_update_actor_state(*port*, *lacp_up*, *now=None*, *lacp_pkt=None*, *cold_start=False*)

Updates a LAG actor state.

Parameters

- **port** – LACP port
- **lacp_up** (*bool*) – Whether LACP is going UP or DOWN
- **now** (*float*) – Current epoch time
- **lacp_pkt** (*PacketMeta*) – LACP packet
- **cold_start** (*bool*) – Whether the port is being cold started

Returns

True if LACP state changed

Return type

bool

lacp_update_port_selection_state(*port, valve, other_valves=None, cold_start=False*)

Update the LACP port selection state.

Parameters

- **port** ([Port](#)) – LACP port
- **other_valves** (*list*) – List of other valves
- **cold_start** (*bool*) – Whether the port is being cold started

Returns

True if port state changed

Return type

bool

static learn_host_from_pkt(*valve, now, pkt_meta, other_valves*)

Learn host from packet.

learn_host_on_vlan_port_flows(*port, vlan, eth_src, delete_existing, refresh_rules, src_rule_idle_timeout, src_rule_hard_timeout, dst_rule_idle_timeout*)

Return flows that implement learning a host on a port.

learn_host_on_vlan_ports(*now, port, vlan, eth_src, delete_existing=True, last_dp_coldstart_time=None*)

Learn a host on a port.

update_vlan(*vlan*)

flows in response to updating an existing VLAN.

[faucet.valve_table module](#)

Abstraction of an OF table.

class faucet.valve_table.ValveGroupEntry(*table, group_id, buckets*)

Bases: object

Abstraction for a single OpenFlow group entry.

add()

Return flows to add this entry to the group table.

delete()

Return flow to delete an existing group entry.

update_buckets(*buckets*)

Update entry with new buckets.

class faucet.valve_table.ValveGroupTable

Bases: object

Wrap access to group table.

```

delete_all()
    Delete all groups.

entries: dict = None

get_entry(group_id, buckets)
    Update entry with group_id with buckets, and return the entry.

static group_id_from_str(key_str)
    Return a group ID based on a string key.

class faucet.valve_table.ValveTable(name, table_config, flow_cookie, notify_flow_removed=False,
                                next_tables=None)

Bases: object

Wrapper for an OpenFlow table.

flowcontroller(match=None, priority=None, inst=None, max_len=96)
    Add flow outputting to controller.

flowdel(match=None, priority=None, out_port=4294967295, strict=False)
    Delete matching flows from a table.

flowdrop(match=None, priority=None, hard_timeout=0)
    Add drop matching flow to a table.

flowmod(match=None, priority=None, inst=None, command=0, out_port=0, out_group=0, hard_timeout=0,
        idle_timeout=0, cookie=None)
    Helper function to construct a flow mod message with cookie.

goto(next_table)
    Add goto next table instruction.

goto_miss(next_table)
    Add miss goto table instruction.

goto_this()

static match(in_port=None, vlan=None, eth_type=None, eth_src=None, eth_dst=None,
            eth_dst_mask=None, icmpv6_type=None, nw_proto=None, nw_dst=None, metadata=None,
            metadata_mask=None, vlan_pcp=None, udp_src=None, udp_dst=None)
    Compose an OpenFlow match rule.

set_external_forwarding_requested()
    Set field for external forwarding requested.

static set_field(**kwds)
    Return set field action.

set_no_external_forwarding_requested()
    Set field for no external forwarding requested.

set_vlan_vid(vlan_vid)
    Set VLAN VID with VID_PRESENT flag set.

    Parameters
        vid (int) – VLAN VID

```

Returns

set VID with VID_PRESENT.

Return type

ryu.ofproto.ofproto_v1_3_parser.OFPActionSetField

faucet.valve_util module

Utility functions for FAUCET.

faucet.valve_util.close_logger(logger)

Close all handlers on logger object.

faucet.valve_util.dpid_log(dpid)

Log a DP ID as hex/decimal.

faucet.valve_util.get_logger(logname, logfile, loglevel, propagate)

Create and return a logger object.

faucet.valve_util.get_setting(name, path_eval=False)

Returns value of specified configuration setting.

faucet.valve_util.get_sys_prefix()

Returns an additional prefix for log and configuration files when used in a virtual environment

faucet.valve_util.kill_on_exception(logname)

decorator to ensure functions will kill ryu when an unhandled exception occurs

faucet.valve_util.stat_config_files(config_hashes)

Return dict of a subset of stat attributes on config files.

faucet.valve_util.utf8_decode(msg_str)

Gracefully decode a possibly UTF-8 string.

faucet.valves_manager module

Manage a collection of Valves.

class faucet.valves_manager.ConfigWatcher

Bases: object

Watch config for file or content changes.

config_file = None

config_file_stats = None

config_hashes = None

content_changed(new_config_file)

Return True if config file content actually changed.

files_changed()

Return True if any config files changed.

update(new_config_file, new_config_hashes=None)

Update state with new config file/hashes.

```
class faucet.valves_manager.MetaDPState
```

Bases: object

Contains state/config about all DPs.

```
class faucet.valves_manager.ValvesManager(logname, logger, metrics, notifier, bgp, dot1x,  
config_auto_revert, send_flows_to_dp_by_id)
```

Bases: object

Manage a collection of Valves.

```
datapath_connect(now, valve, discovered_up_ports)
```

Handle connection from DP.

```
event_socket_heartbeat()
```

raises event for event sock heartbeat

```
load_configs(now, new_config_file, delete_dp=None)
```

Load/apply new config to all Valves.

```
maintain_stack_root(now, update_time)
```

Maintain current stack root

Parameters

- **now** (*float*) – Current time
- **update_time** (*int*) – Stack root update time interval

```
new_valve(new_dp)
```

```
parse_configs(new_config_file)
```

Return parsed configs for Valves, or None.

```
port_desc_stats_reply_handler(valve, msg, now)
```

Handle a port desc stats reply message.

```
port_status_handler(valve, msg, now)
```

Handle a port status change message.

```
reload_stack_root_config(now)
```

Force reload & apply configuration for stack root changes :param now: Current time :type now: float

```
request_reload_configs(now, new_config_file, delete_dp=None)
```

Process a request to load config changes.

```
revert_config()
```

Attempt to revert config to last known good version.

```
set_stack_root(now, new_root_name)
```

Set stack root

Parameters

- **now** (*float*) – Current time
- **new_root_name** (*string*) – Name of new stack root

```
update_config_applied(sent=None, reset=False)
```

Update faucet_config_applied from {dpid: sent} dict, defining applied == sent == enqueued via Ryu

```
update_dp_live_time(now)
    Update DP running time

    Parameters
        now (float) – Current time

update_metrics(now)
    Update metrics in all Valves.

valve_flow_services(now, valve_service)
    Call a method on all Valves and send any resulting flows.

valve_packet_in(now, valve, msg)
    Time a call to Valve packet in handler.

valves_by_name()
    Return a name/valve dict of all the stacking valves
```

faucet.vlan module

VLAN configuration.

```
class faucet.vlan.AnyVLAN
```

Bases: object

Placeholder any tagged VLAN. NOTE: Not used, not well supported by hardware

```
name = 'Any VLAN'
```

```
vid = 4096
```

```
class faucet.vlan.HostCacheEntry(eth_src, port, cache_time)
```

Bases: object

Association of a host with a port.

```
cache_time
```

```
eth_src
```

```
eth_src_int
```

```
port
```

```
class faucet.vlan.NullVLAN
```

Bases: object

Placeholder null VLAN.

```
name = 'Null VLAN'
```

```
vid = 0
```

```
class faucet.vlan.OFVLAN(name, vid)
```

Bases: object

OpenFlow VLAN.

```

class faucet.vlan.VLAN(_id, dp_id, conf=None)

Bases: Conf

Contains state for one VLAN, including its configuration.

add_cache_host(eth_src, port, cache_time)
    Add/update a host to the cache on a port at at time.

add_route(ip_dst, ip_gw)
    Add an IP route.

all_ip_gws(ipv)
    Return all IP gateways for specified IP version.

cached_host(eth_src)
    Return host from cache or None.

cached_host_on_port(eth_src, port)
    Return host cache entry if host in cache and on specified port.

cached_hosts_count_on_port(port)
    Return count of all hosts learned on a port.

cached_hosts_on_port(port)
    Return all hosts learned on a port.

check_config()
    Check config at instantiation time for errors, typically via assert.

clear_cache_hosts_on_port(port)
    Clear all hosts learned on a port.

defaults: dict = {'acl_in': None, 'acl_out': None, 'acls_in': None, 'acls_out': None, 'description': None, 'dot1x_assigned': False, 'edge_learn_stack_root': True, 'faucet_mac': '0e:00:00:00:00:01', 'faucet_vips': None, 'max_hosts': 256, 'minimum_ip_size_check': True, 'name': None, 'proactive_arp_limit': 0, 'proactive_nd_limit': 0, 'reserved_internal_vlan': False, 'routes': None, 'targeted_gw_resolution': True, 'unicast_flood': True, 'vid': None}

defaults_types: dict = {'acl_in': (<class 'int'>, <class 'str'>), 'acl_out': (<class 'int'>, <class 'str'>), 'acls_in': <class 'list'>, 'acls_out': <class 'list'>, 'description': <class 'str'>, 'dot1x_assigned': <class 'bool'>, 'edge_learn_stack_root': <class 'bool'>, 'faucet_mac': <class 'str'>, 'faucet_vips': <class 'list'>, 'max_hosts': <class 'int'>, 'minimum_ip_size_check': <class 'bool'>, 'name': <class 'str'>, 'proactive_arp_limit': <class 'int'>, 'proactive_nd_limit': <class 'int'>, 'reserved_internal_vlan': <class 'bool'>, 'routes': <class 'list'>, 'targeted_gw_resolution': <class 'bool'>, 'unicast_flood': <class 'bool'>, 'vid': <class 'int'>}

del_route(ip_dst)
    Delete an IP route.

exclude_native_if_dot1x()
    Don't output on native vlan, if dynamic (1x) vlan is in use

```

excluded_lag_ports(*in_port=None*)
Ensure output to SELECTED LAG ports & only one LAG member

expire_cache_host(*eth_src*)
Expire a host from caches.

expire_cache_hosts(*now, learn_timeout*)
Expire stale host entries.

faucet_vips_by_ipv(*ipv*)
Return VIPs with specified IP version on this VLAN.

flood_pkt(*packet_builder, multi_out, *args*)
Return Packet-out actions via flooding

static_flood_ports(*configured_ports, exclude_unicast*)
Return configured ports that allow flooding

from_connected_to_vip(*src_ip, dst_ip*)
Return True if src_ip in connected network and dst_ip is a VIP.

Parameters

- **src_ip** (*ipaddress.ip_address*) – source IP.
- **dst_ip** (*ipaddress.ip_address*) – destination IP

Returns

True if local traffic for a VIP.

get_ports()

Return all ports on this VLAN.

hairpin_ports()

Return all ports with hairpin enabled.

hosts_count()

Return number of hosts learned on this VLAN.

ip_dsts_for_ip_gw(*ip_gw*)

Return list of IP destinations, for specified gateway.

ip_in_vip_subnet(*ipa, faucet_vip=None*)

Return faucet_vip if IP in same IP network as a VIP on this VLAN.

ipvs()

Return IP versions configured on this VLAN.

is_faucet_vip(*ipa, faucet_vip=None*)

Return True if IP is a VIP on this VLAN.

is_host_fib_route(*host_ip*)

Return True if IP destination is a host FIB route.

Parameters

host_ip – (*ipaddress.ip_address*): potential host FIB route.

Returns

True if a host FIB route (and not used as a gateway).

lacp_ports()
 Return ports that have LACP on this VLAN.

lacp_up_selected_ports()
 Return LACP ports that have been SELECTED and are UP

lags()
 Return dict of LAGs mapped to member ports.

link_and_other_vips(*ipv*)
 Return link local and non-link local VIPs.

loop_protect_external_ports()
 Return ports wth external loop protection set.

loop_protect_external_ports_up()
 Return up ports with external loop protection set.

mirrored_ports()
 Return ports that are mirrored on this VLAN.

mutableAttrs: frozenset = frozenset({'dot1x_untagged', 'tagged', 'untagged'})

neigh_cache_by_ipv(*ipv*)
 Return neighbor cache for specified IP version on this VLAN.

neigh_cache_count_by_ipv(*ipv*)
 Return number of hosts in neighbor cache for specified IP version on this VLAN.

output_port(*port*, hairpin=False, output_table=None, external_forwarding_requested=None)

pkt_out_port(*packet_builder*, *port*, *args)
 Return packet-out actions with VLAN tag if port is tagged

port_is_tagged(*port*)
 Return True if port number is an tagged port on this VLAN.

port_is_untagged(*port*)
 Return True if port number is an untagged port on this VLAN.

reset_caches()
 Reset dynamic caches.

reset_ports(*ports*)
 Reset tagged and untagged port lists.

restricted_bcast_arpend_ports()
 Return all ports with restricted broadcast enabled.

route_count_by_ipv(*ipv*)
 Return route table count for specified IP version on this VLAN.

routes_by_ipv(*ipv*)
 Return route table for specified IP version on this VLAN.

selected_up_lags()
 Return dict of LAGs mapped to member ports that have been selected

```
set_defaults()
    Set default values and run any basic sanity checks.

tagged_flood_ports(exclude_unicast)
untagged_flood_ports(exclude_unicast)

static vid_valid(vid)
    Return True if VID valid.

vip_map(ipa)
    Return the vip containing ipa
```

faucet.watcher module

Gauge watcher implementations.

```
class faucet.watcher.GaugeFlowTableLogger(conf, logname, prom_client)
```

Bases: *GaugeFlowTablePoller*

Periodically dumps the current datapath flow table as a yaml object.

Includes a timestamp and a reference (\$DATAPATHNAME-flowtables). The flow table is dumped as an OF-FlowStatsReply message (in yaml format) that matches all flows.

optionally the output can be compressed by setting compressed: true in the config for this watcher

```
class faucet.watcher.GaugeMeterStatsLogger(conf, logname, prom_client)
```

Bases: *GaugeMeterStatsPoller*

Abstraction for meter statistics logger.

```
class faucet.watcher.GaugePortStateLogger(conf, logname, prom_client)
```

Bases: *GaugePortStatePoller*

Abstraction for port state logger.

```
no_response()
```

Called when a polling cycle passes without receiving a response.

```
send_req()
```

Send a stats request to a datapath.

```
class faucet.watcher.GaugePortStatsLogger(conf, logname, prom_client)
```

Bases: *GaugePortStatsPoller*

Abstraction for port statistics logger.

```
faucet.watcher.watcher_factory(conf)
```

Return a Gauge object based on type.

Parameters

conf (*GaugeConf*) – object with the configuration for this valve.

`faucet.watcher_conf` module

Gauge watcher configuration.

`class faucet.watcher_conf.WatcherConf(_id, dp_id, conf, prom_client)`

Bases: `Conf`

Stores the state and configuration to monitor a single stat.

Watcher Config

Watchers are configured in the watchers config block in the config for gauge.

The following elements can be configured for each watcher, at the level of /watchers/<watcher name>/:

- type (string): The type of watcher (IE what stat this watcher monitors). The types are ‘port_state’, ‘port_stats’ or ‘flow_table’.
- dps (list): A list of dps that should be monitored with this watcher.
- db (string): The db that will be used to store the data once it is retrieved.
- interval (int): if this watcher requires polling the switch, it will monitor at this interval.

The config for a db should be created in the gauge config file under the dbs config block.

The following elements can be configured for each db, at the level of /dbs/<db name>/:

- type (string): the type of db. The available types are ‘text’ and ‘influx’ for port_state, ‘text’, ‘influx’ and ‘prometheus’ for port_stats and ‘text’ and flow_table.

The following config elements then depend on the type.

For text:

- file (string): the filename of the file to write output to.
- path (string): path where files should be written when writing to multiple files
- compress (bool): compress (with gzip) flow_table output while writing it

For influx:

- influx_db (str): The name of the influxdb database. Defaults to ‘faucet’.
- influx_host (str): The host where the influxdb is reachable. Defaults to ‘localhost’.
- influx_port (int): The port that the influxdb host will listen on. Defaults to 8086.
- influx_user (str): The username for accessing influxdb. Defaults to ‘’.
- influx_pwd (str): The password for accessing influxdb. Defaults to ‘’.
- influx_timeout (int): The timeout in seconds for connecting to influxdb. Defaults to 10.
- influx_retries (int): The number of times to retry connecting to influxdb after failure. Defaults to 3.

For Prometheus:

- prometheus_port (int): The port used to export prometheus data. Defaults to 9303.
- prometheus_addr (ip addr str): The address used to export prometheus data. Defaults to ‘127.0.0.1’.

`add_db(db_conf)`

Add database config to this watcher.

```
add_dp(dp)
    Add a datapath to this watcher.

check_config()
    Check config at instantiation time for errors, typically via assert.

db_defaults = {'compress': False, 'file': None, 'influx_db': 'faucet',
               'influx_host': 'localhost', 'influx_port': 8086, 'influx_pwd': '',
               'influx_retries': 3, 'influx_timeout': 10, 'influx_user': '', 'path': None,
               'prometheus_addr': '0.0.0.0', 'prometheus_port': 9303, 'prometheus_test_thread':
               False, 'type': None}

db_defaults_types = {'compress': <class 'bool'>, 'file': <class 'str'>,
                     'influx_db': <class 'str'>, 'influx_host': <class 'str'>, 'influx_port': <class
                     'int'>, 'influx_pwd': <class 'str'>, 'influx_retries': <class 'int'>,
                     'influx_timeout': <class 'int'>, 'influx_user': <class 'str'>, 'path': <class
                     'str'>, 'prometheus_addr': <class 'str'>, 'prometheus_port': <class 'int'>,
                     'prometheus_test_thread': <class 'bool'>, 'type': <class 'str'>}

defaults: dict = {'all_dps': False, 'db': None, 'db_type': 'text', 'dbs': None,
                  'dps': None, 'interval': 30, 'name': None, 'type': None}

defaults_types: dict = {'all_dps': <class 'bool'>, 'db': <class 'str'>,
                       'db_type': <class 'str'>, 'dbs': <class 'list'>, 'dps': <class 'list'>,
                       'interval': <class 'int'>, 'name': <class 'str'>, 'type': <class 'str'>}
```

Module contents

**CHAPTER
THREE**

INDICES AND TABLES

- genindex
- modindex
- search

PYTHON MODULE INDEX

f

faucet, 234
faucet.acl, 148
faucet.check_faucet_config, 151
faucet.conf, 151
faucet.config_parser, 152
faucet.config_parser_util, 152
faucet.dp, 153
faucet.faucet, 157
faucet.faucet_bgp, 159
faucet.faucet_dot1x, 159
faucet.faucet_event, 161
faucet.faucet_metadata, 161
faucet.faucet_metrics, 161
faucet.faucet_pipeline, 162
faucet.fctl, 162
faucet.gauge, 163
faucet.gauge_influx, 163
faucet.gauge_pollers, 166
faucet.gauge_prom, 167
faucet.meter, 168
faucet.port, 168
faucet.prom_client, 173
faucet.router, 173
faucet.stack, 174
faucet.tfm_pipeline, 177
faucet.valve, 177
faucet.valve_acl, 187
faucet.valve_coprocessor, 190
faucet.valve_lldp, 190
faucet.valve_manager_base, 191
faucet.valve_of, 191
faucet.valve_of_old, 201
faucet.valve_outonly, 201
faucet.valve_packet, 201
faucet.valve_pipeline, 208
faucet.valve_route, 210
faucet.valve_ryuapp, 215
faucet.valve_stack, 216
faucet.valve_switch, 219
faucet.valve_switch_stack, 219
faucet.valve_switch_standalone, 221

faucet.valve_table, 224
faucet.valve_util, 226
faucet.valves_manager, 226
faucet.vlan, 228
faucet.watcher, 232
faucet.watcher_conf, 233

INDEX

A

accept_to_classification() (*faucet.valve_pipeline.ValvePipeline method*), 208
accept_to_egress() (*faucet.valve_pipeline.ValvePipeline method*), 208
accept_to_l2_forwarding() (*faucet.valve_pipeline.ValvePipeline method*), 208
accept_to_vlan() (*faucet.valve_pipeline.ValvePipeline method*), 209
ACL (*class in faucet.acl*), 148
acl_manager (*faucet.valve.AlliedTelesis attribute*), 177
acl_manager (*faucet.valve.ArubaValve attribute*), 177
acl_manager (*faucet.valve.CiscoC9KValve attribute*), 178
acl_manager (*faucet.valve.NoviFlowValve attribute*), 179
acl_manager (*faucet.valve.OVSTfmValve attribute*), 179
acl_manager (*faucet.valve.OVSValve attribute*), 180
acl_manager (*faucet.valve.TfmValve attribute*), 181
acl_manager (*faucet.valve.Valve attribute*), 181
acl_update_tunnel() (*faucet.valve_stack.ValveStackManager method*), 216
acquire_nonblock() (*faucet.faucet_event.NonBlockLock method*), 161
actions_types (*faucet.acl.ACL attribute*), 148
active (*faucet.valve_route.ValveIPv4RouteManager attribute*), 210
active (*faucet.valve_route.ValveIPv6RouteManager attribute*), 212
active (*faucet.valve_route.ValveRouteManager attribute*), 213
actor_init() (*faucet.port.Port method*), 168
actor_none() (*faucet.port.Port method*), 168
actor_nosync() (*faucet.port.Port method*), 169
actor_notconfigured() (*faucet.port.Port method*), 169
actor_state() (*faucet.port.Port method*), 169
actor_state_name() (*faucet.port.Port static method*), 169
actor_up() (*faucet.port.Port method*), 169
add() (*faucet.valve_table.ValveGroupEntry method*), 224
add_acl() (*faucet.dp.DP method*), 153
add_authed_mac() (*faucet.valve_acl.ValveAclManager method*), 187
add_cache_host() (*faucet.vlan.VLAN method*), 229
add_db() (*faucet.watcher_conf.WatcherConf method*), 233
add_dot1x_native_vlan() (*faucet.valve.Valve method*), 181
add_dp() (*faucet.watcher_conf.WatcherConf method*), 233
add_drop_spoofed_faucet_mac_rules() (*faucet.valve_switch_stack.ValveSwitchStackManagerBase method*), 219
add_drop_spoofed_faucet_mac_rules() (*faucet.valve_switch_standalone.ValveSwitchManager method*), 222
add_host_fib_route_from_pkt() (*faucet.valve_route.ValveRouteManager method*), 213
add_mac_address_to_match() (*in module faucet.valve_acl*), 189
add_meters() (*faucet.valve_acl.ValveAclManager method*), 187
add_port() (*faucet.dp.DP method*), 153
add_port() (*faucet.stack.Stack method*), 174
add_port() (*faucet.valve.Dot1xManager method*), 178
add_port() (*faucet.valve_acl.ValveAclManager method*), 187
add_port() (*faucet.valve_coprocessor.CoprocessorManager method*), 190
add_port() (*faucet.valve_lldp.ValveLLDPMManager method*), 190
add_port() (*faucet.valve_manager_base.ValveManagerBase method*), 191
add_port() (*faucet.valve_outonly.OutputOnlyManager method*), 201
add_port() (*faucet.valve_pipeline.ValvePipeline method*), 209
add_port() (*faucet.valve_stack.ValveStackManager method*), 216

add_port() (*faucet.valve_switch_stack.ValveSwitchStack*~~ModuleBase~~*Faucet* attribute), 157
method, 219
add_port() (*faucet.valve_switch_standalone.ValveSwitchManager*~~ModuleBase~~*Faucet* attribute), 173
method, 222
add_port_acl() (*faucet.valve_acl.ValveAclManager* attribute), 173
method, 187
add_route() (*faucet.valve.Valve* method), 181
add_route() (*faucet.valve_route.ValveRouteManager* method), 213
add_route() (*faucet.vlan.VLAN* method), 229
add_router() (*faucet.dp.DP* method), 153
add_tunnel_acls() (*faucet.valve_stack.ValveStackManager* method), 216
add_tunnel_source() (*faucet.acl.ACL* method), 149
add_vlan() (*faucet.valve.Valve* method), 181
add_vlan() (*faucet.valve_acl.ValveAclManager* method), 188
add_vlan() (*faucet.valve_manager_base.ValveManagerBase* method), 191
add_vlan() (*faucet.valve_route.ValveRouteManager* method), 213
add_vlan() (*faucet.valve_switch_standalone.ValveSwitchManager* method), 222
add_vlans() (*faucet.valve.Valve* method), 181
adjacent_stack_ports() (*faucet.valve_stack.ValveStackManager* method), 216
advertise() (*faucet.valve.Valve* method), 181
advertise() (*faucet.valve_route.ValveIPv4RouteManager* method), 211
advertise() (*faucet.valve_route.ValveIPv6RouteManager* method), 212
advertise() (*faucet.valve_route.ValveRouteManager* method), 213
age() (*faucet.valve_route.NextHop* method), 210
all_ip_gws() (*faucet.vlan.VLAN* method), 229
all_lags_up() (*faucet.dp.DP* method), 153
AlliedTelesis (class in *faucet.valve*), 177
AnonVLAN (class in *faucet.valve_route*), 210
any_port_up() (*faucet.stack.Stack* method), 174
AnyVLAN (class in *faucet.vlan*), 228
apply_actions() (in module *faucet.valve_of*), 191
apply_meter() (in module *faucet.valve_of*), 192
arp_reply() (in module *faucet.valve_packet*), 202
arp_request() (in module *faucet.valve_packet*), 202
ArubaValve (class in *faucet.valve*), 177
auth_handler() (*faucet.faucet_dot1x.FaucetDot1x* method), 159

B

ban_rules() (*faucet.valve_switch_standalone.ValveSwitchManager* method), 222
barrier() (in module *faucet.valve_of*), 192
base_prom_labels() (*faucet.dp.DP* method), 153

bgp_as() (*faucet.router.Router* method), 173
bgp_connect_mode() (*faucet.router.Router* method), 173
bgp_defaults_types (*faucet.router.Router* attribute), 173
bgp_ipvs() (*faucet.router.Router* method), 173
bgp_neighbor_addresses() (*faucet.router.Router* method), 173
bgp_neighbor_addresses_by_ipv() (*faucet.router.Router* method), 173
bgp_neighbor_as() (*faucet.router.Router* method), 173
bgp_port() (*faucet.router.Router* method), 173
bgp_routerid() (*faucet.router.Router* method), 173
bgp_routers() (*faucet.dp.DP* method), 153
bgp_server_addresses() (*faucet.router.Router* method), 173
bgp_server_addresses_by_ipv() (*faucet.router.Router* method), 173
bgp_vlan() (*faucet.router.Router* method), 174
BgpSpeakerKey (class in *faucet.faucet_bgp*), 159
budget() (in module *faucet.valve_of*), 192
build() (*faucet.acl.ACL* method), 149
build_acl_entry() (in module *faucet.valve_acl*), 189
build_acl_ofmsgs() (in module *faucet.valve_acl*), 189
build_acl_port_of_msgs() (in module *faucet.valve_acl*), 189
build_ct_actions() (in module *faucet.valve_acl*), 189
build_group_flood_buckets() (in module *faucet.valve_of*), 192
build_match_dict() (in module *faucet.valve_of*), 192
build_ordered_output_actions() (in module *faucet.valve_acl*), 189
build_output_actions() (in module *faucet.valve_acl*), 189
build_pkt_header() (in module *faucet.valve_packet*), 203
build_reverse_tunnel_rules_ofmsgs() (*faucet.valve_acl.ValveAclManager* method), 188
build_rule_ofmsgs() (in module *faucet.valve_acl*), 189
build_tunnel_acl_rule_ofmsgs() (*faucet.valve_acl.ValveAclManager* method), 188
build_tunnel_ofmsgs() (in module *faucet.valve_acl*), 189
build_tunnel_rules_ofmsgs() (*faucet.valve_acl.ValveAclManager* method), 188

C

cache_time (*faucet.valve_route.NextHop* attribute), 210
cache_time (*faucet.vlan.HostCacheEntry* attribute), 228

cached_host() (*faucet.vlan.VLAN method*), 229
cached_host_on_port() (*faucet.vlan.VLAN method*), 229
cached_hosts_count_on_port() (*faucet.vlan.VLAN method*), 229
cached_hosts_on_port() (*faucet.vlan.VLAN method*), 229
canonical_port_order() (*faucet.dp.DP static method*), 153
canonical_up_ports() (*faucet.stack.Stack method*), 174
check_config() (*faucet.acl.ACL method*), 149
check_config() (*faucet.conf.Conf method*), 151
check_config() (*faucet.dp.DP method*), 153
check_config() (*faucet.meter.Meter method*), 168
check_config() (*faucet.port.Port method*), 169
check_config() (*faucet.router.Router method*), 174
check_config() (*faucet.vlan.VLAN method*), 229
check_config() (*faucet.watcher_conf.WatcherConf method*), 234
check_config() (in module *faucet.check_faucet_config*), 151
check_path() (*faucet.faucet_event.FaucetEventNotifier method*), 161
CiscoC9KValve (class in *faucet.valve*), 178
classification_table() (*faucet.dp.DP method*), 153
clear_cache_hosts_on_port() (*faucet.vlan.VLAN method*), 229
clone_dyn_state() (*faucet.dp.DP method*), 153
clone_dyn_state() (*faucet.port.Port method*), 169
clone_dyn_state() (*faucet.stack.Stack method*), 174
close_logger() (in module *faucet.valve_util*), 226
close_logs() (*faucet.valve.Valve method*), 181
cold_start() (*faucet.dp.DP method*), 153
cold_start_port() (*faucet.valve_acl.ValveAclManager method*), 188
Conf (class in *faucet.conf*), 151
conf (*faucet.gauge_influx.InfluxShipper attribute*), 165
conf_diff() (*faucet.conf.Conf method*), 151
conf_hash() (*faucet.conf.Conf method*), 151
config_changed() (in module *faucet.config_parser_util*), 152
config_file (*faucet.valves_manager.ConfigWatcher attribute*), 226
config_file_hash() (in module *faucet.config_parser_util*), 152
config_file_stats (*faucet.valves_manager.ConfigWatcher attribute*), 226
config_hash_content() (in module *faucet.config_parser_util*), 152
config_hashes (*faucet.valves_manager.ConfigWatcher attribute*), 226
ConfigWatcher (class in *faucet.valves_manager*), 226
connect_or_disconnect_handler()
(faucet.valve_ryuapp.OSKenAppBase method), 215
consistent_roots() (*faucet.valve_stack.ValveStackManager method*), 216
contains_tunnel_acl() (*faucet.port.Port method*), 169
content_changed() (*faucet.valves_manager.ConfigWatcher method*), 226
CONTROL_ETH_TYPES (*faucet.valve_route.ValveIPv4RouteManager attribute*), 210
CONTROL_ETH_TYPES (*faucet.valve_route.ValveIPv6RouteManager attribute*), 211
CONTROL_ETH_TYPES (*faucet.valve_route.ValveRouteManager attribute*), 212
control_plane_handler()
(faucet.valve_route.ValveIPv4RouteManager method), 211
control_plane_handler()
(faucet.valve_route.ValveIPv6RouteManager method), 212
control_plane_handler()
(faucet.valve_route.ValveRouteManager method), 213
controller_pps_meteradd() (in module *faucet.valve_of*), 192
controller_pps_meterdel() (in module *faucet.valve_of*), 192
coprocessor_defaults_types (in module *faucet.port.Port attribute*), 169
coprocessor_ports() (*faucet.dp.DP method*), 154
CoprocessorManager (class in *faucet.valve_coprocessor*), 190
create_dot1x_flow_pair()
(faucet.valve_acl.ValveAclManager method), 188
create_flow_pair() (*faucet.faucet_dot1x.FaucetDot1x method*), 159
create_mab_flow() (*faucet.faucet_dot1x.FaucetDot1x method*), 159
create_mab_flow() (*faucet.valve_acl.ValveAclManager method*), 188
ct() (in module *faucet.valve_of*), 192
ct_action_nat_types (*faucet.acl.ACL attribute*), 149
ct_action_types (*faucet.acl.ACL attribute*), 149
ct_clear() (in module *faucet.valve_of*), 192
ct_nat() (in module *faucet.valve_of*), 193

D

data (*faucet.valve_packet.PacketMeta attribute*), 201
datapath_connect() (*faucet.valve.Valve method*), 181
datapath_connect() (*faucet.valves_manager.ValvesManager method*), 227
datapath_disconnect() (*faucet.valve.Valve method*), 182

db_defaults (*faucet.watcher_conf.WatcherConf attribute*), 234
db_defaults_types (*faucet.watcher_conf.WatcherConf attribute*), 234
dead() (*faucet.valve_route.NextHop method*), 210
debug() (*faucet.valve.ValveLogger method*), 187
dec_ip_ttl() (*in module faucet.valve_of*), 193
DEC_TTL (*faucet.valve.AlliedTelesis attribute*), 177
DEC_TTL (*faucet.valve.ArubaValve attribute*), 177
DEC_TTL (*faucet.valve.Valve attribute*), 181
dec_ttl (*faucet.valve_route.ValveIPv4RouteManager attribute*), 211
dec_ttl (*faucet.valve_route.ValveIPv6RouteManager attribute*), 212
dec_ttl (*faucet.valve_route.ValveRouteManager attribute*), 213
decode_value() (*in module faucet.fctl*), 162
deconfigure_port() (*faucet.port.Port method*), 169
dedupe_ofmsgs() (*in module faucet.valve_of*), 193
dedupe_output_portActs() (*in module faucet.valve_of*), 193
dedupe_overlaps_ofmsgs() (*in module faucet.valve_of*), 193
DEFAULT_LLDP_MAX_PER_INTERVAL (*faucet.dp.DP attribute*), 153
DEFAULT_LLDP_SEND_INTERVAL (*faucet.dp.DP attribute*), 153
default_port_towards()
 (*faucet.valve_stack.ValveStackManager method*), 216
default_table_sizes_types (*faucet.dp.DP attribute*), 154
defaults (*faucet.acl.ACL attribute*), 149
defaults (*faucet.conf.Conf attribute*), 151
defaults (*faucet.dp.DP attribute*), 154
defaults (*faucet.meter.Meter attribute*), 168
defaults (*faucet.port.Port attribute*), 169
defaults (*faucet.router.Router attribute*), 174
defaults (*faucet.stack.Stack attribute*), 174
defaults (*faucet.vlan.VLAN attribute*), 229
defaults (*faucet.watcher_conf.WatcherConf attribute*), 234
defaults_types (*faucet.acl.ACL attribute*), 149
defaults_types (*faucet.conf.Conf attribute*), 151
defaults_types (*faucet.dp.DP attribute*), 154
defaults_types (*faucet.meter.Meter attribute*), 168
defaults_types (*faucet.port.Port attribute*), 169
defaults_types (*faucet.router.Router attribute*), 174
defaults_types (*faucet.stack.Stack attribute*), 174
defaults_types (*faucet.vlan.VLAN attribute*), 229
defaults_types (*faucet.watcher_conf.WatcherConf attribute*), 234
del_authed_mac() (*faucet.valve_acl.ValveAclManager method*), 188
del_dot1x_flow_pair()
 (*faucet.valve_acl.ValveAclManager method*), 188
del_dot1x_native_vlan() (*faucet.valve.Valve method*), 182
del_mab_flow() (*faucet.valve_acl.ValveAclManager method*), 188
del_meters() (*faucet.valve_acl.ValveAclManager method*), 188
del_port() (*faucet.valve.DotIxManager method*), 179
del_port() (*faucet.valve_acl.ValveAclManager method*), 188
del_port() (*faucet.valve_lldp.ValveLLDPManger method*), 190
del_port() (*faucet.valve_manager_base.ValveManagerBase method*), 191
del_port() (*faucet.valve_outonly.OutputOnlyManager method*), 201
del_port() (*faucet.valve_pipeline.ValvePipeline method*), 209
del_port() (*faucet.valve_switch_stack.ValveSwitchStackManagerBase method*), 219
del_port() (*faucet.valve_switch_standalone.ValveSwitchManager method*), 222
del_port_acl() (*faucet.valve_acl.ValveAclManager method*), 188
del_route() (*faucet.valve.Valve method*), 182
del_route() (*faucet.valve_route.ValveRouteManager method*), 213
del_route() (*faucet.vlan.VLAN method*), 229
del_vlan() (*faucet.valve.Valve method*), 182
del_vlan() (*faucet.valve_acl.ValveAclManager method*), 188
del_vlan() (*faucet.valve_manager_base.ValveManagerBase method*), 191
del_vlan() (*faucet.valve_route.ValveRouteManager method*), 213
del_vlan() (*faucet.valve_switch_standalone.ValveSwitchManager method*), 222
del_vlans() (*faucet.valve.Valve method*), 182
delete() (*faucet.valve_table.ValveGroupEntry method*), 224
delete_all() (*faucet.valve_table.ValveGroupTable method*), 224
delete_host_from_vlan()
 (*faucet.valve_switch_standalone.ValveSwitchManager method*), 222
desc_stats_reply_handler() (*faucet.faucet.Faucet method*), 157
desc_stats_request() (*in module faucet.valve_of*), 193
deselect_port() (*faucet.port.Port method*), 170
devid_present() (*in module faucet.valve_of*), 193
disable_forwarding()

(faucet.valve_switch_standalone.ValveSwitchManager
 method), 222
does_rule_contain_tunnel() (faucet.acl.ACL static
 method), 149
dot1x (faucet.valve.AlliedTelesis attribute), 177
dot1x (faucet.valve.ArubaValve attribute), 178
dot1x (faucet.valve.CiscoC9KValve attribute), 178
dot1x (faucet.valve.NoviFlowValve attribute), 179
dot1x (faucet.valve.OVSTfmValve attribute), 179
dot1x (faucet.valve.OVSValve attribute), 180
dot1x (faucet.valve.TfmValve attribute), 181
dot1x (faucet.valve.Valve attribute), 182
dot1x_defaults_types (faucet.dp.DP attribute), 155
dot1x_event() (faucet.valve.Valve method), 182
dot1x_ports() (faucet.dp.DP method), 155
Dot1xManager (class in faucet.valve), 178
down_ports() (faucet.stack.Stack method), 174
DP (class in faucet.dp), 153
dp (faucet.valve.AlliedTelesis attribute), 177
dp (faucet.valve.ArubaValve attribute), 178
dp (faucet.valve.CiscoC9KValve attribute), 178
dp (faucet.valve.NoviFlowValve attribute), 179
dp (faucet.valve.OVSTfmValve attribute), 179
dp (faucet.valve.OVSValve attribute), 180
dp (faucet.valve.TfmValve attribute), 181
dp (faucet.valve.Valve attribute), 182
dp_config_path() (in module
 faucet.config_parser_util), 152
dp_include() (in module faucet.config_parser_util),
 152
dp_init() (faucet.valve.Valve method), 182
dp_parser() (in module faucet.config_parser), 152
dp_preparsed_parser() (in module
 faucet.config_parser), 152
dpid_log() (in module faucet.valve_util), 226
dyn_finalized (faucet.conf.Conf attribute), 151
dyn_hash (faucet.conf.Conf attribute), 151

E

echo_reply() (in module faucet.valve_packet), 203
edge_learn_port() (faucet.valve_switch_stack.ValveSwitchManager
 method), 219
edge_learn_port() (faucet.valve_switch_standalone.ValveSwitchManager
 static method), 222
edge_learn_port_towards()
 (faucet.valve_stack.ValveStackManager
 method), 217
enable_forwarding()
 (faucet.valve_switch_standalone.ValveSwitchManager
 method), 222
entries (faucet.valve_table.ValveGroupTable attribute),
 225
entry (faucet.meter.Meter attribute), 168
entry_msg (faucet.meter.Meter attribute), 168

error() (faucet.valve.ValveLogger method), 187
error_handler() (faucet.faucet.Faucet method), 158
eth_dst (faucet.valve_packet.PacketMeta attribute), 201
eth_pkt (faucet.valve_packet.PacketMeta attribute), 201
eth_src (faucet.valve_route.NextHop attribute), 210
eth_src (faucet.vlan.HostCacheEntry attribute), 228
eth_src_int (faucet.vlan.HostCacheEntry attribute),
 228
eth_type (faucet.valve_packet.PacketMeta attribute),
 201
ETH_TYPE (faucet.valve_route.ValveIPv4RouteManager
 attribute), 210
ETH_TYPE (faucet.valve_route.ValveIPv6RouteManager
 attribute), 211
ETH_TYPE (faucet.valve_route.ValveRouteManager
 attribute), 212
ETH_TYPES_PARSERS (faucet.valve_packet.PacketMeta
 attribute), 201
event_socket_heartbeat()
 (faucet.valves_manager.ValvesManager
 method), 227
event_socket_heartbeat_time (faucet.faucet.Faucet
 attribute), 158
EventFaucetAdvertise (class in faucet.faucet), 157
EventFaucetEventSockHeartbeat (class in
 faucet.faucet), 157
EventFaucetFastAdvertise (class in faucet.faucet),
 157
EventFaucetFastStateExpire (class in faucet.faucet),
 157
EventFaucetMaintainStackRoot (class in
 faucet.faucet), 157
EventFaucetMetricUpdate (class in faucet.faucet),
 157
EventFaucetResolveGateways (class in faucet.faucet),
 157
EventFaucetStateExpire (class in faucet.faucet), 157
EventReconfigure (class in faucet.valve_ryuapp), 215
exc_logname (faucet.faucet.Faucet attribute), 158
exc_logname (faucet.faucet_bgp.FaucetBgp attribute),
 159
exc_logname (faucet.faucet_dot1x.FaucetDot1x
 attribute), 160
exc_logname (faucet.gauge.Gauge attribute), 163
exc_logname (faucet.valve_ryuapp.OSKenAppBase
 attribute), 215
exclude_native_if_dot1x() (faucet.vlan.VLAN
 method), 229
excluded_lag_ports() (faucet.vlan.VLAN method),
 229
expire_cache_host() (faucet.vlan.VLAN method), 230
expire_cache_hosts() (faucet.vlan.VLAN method),
 230

```
expire_hosts_from_vlan()  
    (faucet.valve_switch_standalone.ValveSwitchFlow  
     method), 221  
expire_hosts_from_vlan()  
    (faucet.valve_switch_standalone.ValveSwitchManager  
     method), 222  
expire_port_nexthops()  
    (faucet.valve_route.ValveRouteManager  
     method), 214  
  
F  
failure_handler() (faucet.faucet_dot1x.FaucetDot1x  
    method), 160  
fast_advertise() (faucet.valve.Valve method), 182  
fast_state_expire() (faucet.valve.Valve method),  
    182  
faucet  
    module, 234  
Faucet (class in faucet.faucet), 157  
faucet.acl  
    module, 148  
faucet.check_faucet_config  
    module, 151  
faucet.conf  
    module, 151  
faucet.config_parser  
    module, 152  
faucet.config_parser_util  
    module, 152  
faucet.dp  
    module, 153  
faucet.faucet  
    module, 157  
faucet.faucet_bgp  
    module, 159  
faucet.faucet_dot1x  
    module, 159  
faucet.faucet_event  
    module, 161  
faucet.faucet_metadata  
    module, 161  
faucet.faucet_metrics  
    module, 161  
faucet.faucet_pipeline  
    module, 162  
faucet.fctl  
    module, 162  
faucet.gauge  
    module, 163  
faucet.gauge_influx  
    module, 163  
faucet.gauge_pollers  
    module, 166  
faucet.gauge_prom  
    module, 167  
faucet.valve_manager  
    module, 168  
faucet.port  
faucet.prom_client  
    module, 173  
faucet.router  
    module, 173  
faucet.stack  
    module, 174  
faucet.tfm_pipeline  
    module, 177  
faucet.valve  
    module, 177  
faucet.valve_acl  
    module, 187  
faucet.valve_coprocessor  
    module, 190  
faucet.valve_lldp  
    module, 190  
faucet.valve_manager_base  
    module, 191  
faucet.valve_of  
    module, 191  
faucet.valve_of_old  
    module, 201  
faucet.valve_outonly  
    module, 201  
faucet.valve_packet  
    module, 201  
faucet.valve_pipeline  
    module, 208  
faucet.valve_route  
    module, 210  
faucet.valve_ryuapp  
    module, 215  
faucet.valve_stack  
    module, 216  
faucet.valve_switch  
    module, 219  
faucet.valve_switch_stack  
    module, 219  
faucet.valve_switch_standalone  
    module, 221  
faucet.valve_table  
    module, 224  
faucet.valve_util  
    module, 226  
faucet.valves_manager  
    module, 226  
faucet.vlan  
    module, 228  
faucet.watcher
```

module, 232
faucet.watcher_conf
module, 233
faucet.async() (*in module faucet.valve_of*), 193
faucet_config() (*in module faucet.valve_of*), 193
faucet_lldp_stack_state_tlvs() (*in module faucet.valve_packet*), 203
faucet_lldp_tlvs() (*in module faucet.valve_packet*), 203
faucet_oui() (*in module faucet.valve_packet*), 203
faucet_tlvs() (*in module faucet.valve_packet*), 203
faucet_vips_by_ipv() (*faucet.vlan.VLAN method*), 230
FaucetBgp (*class in faucet.faucet_bgp*), 159
FaucetDot1x (*class in faucet.faucet_dot1x*), 159
FaucetEventNotifier (*class in faucet.faucet_event*), 161
FaucetMetrics (*class in faucet.faucet_metrics*), 161
features_handler() (*faucet.faucet.Faucet method*), 158
fib_table (*faucet.valve_route.ValveIPv4RouteManager attribute*), 211
fib_table (*faucet.valve_route.ValveIPv6RouteManager attribute*), 212
fib_table (*faucet.valve_route.ValveRouteManager attribute*), 214
files_changed() (*faucet.valves_manager.ConfigWatcher method*), 226
FILL_REQ (*faucet.valve.ArubaValve attribute*), 177
FILL_REQ (*faucet.valve.TfmValve attribute*), 180
fill_required_properties() (*in module faucet.tfm_pipeline*), 177
filter_packets() (*faucet.valve_pipeline.ValvePipeline method*), 209
finalize() (*faucet.acl.ACL method*), 149
finalize() (*faucet.conf.Conf method*), 151
finalize() (*faucet.dp.DP method*), 155
finalize() (*faucet.port.Port method*), 170
finalize() (*faucet.router.Router method*), 174
finalize_config() (*faucet.dp.DP method*), 155
finalize_tunnel_acls() (*faucet.dp.DP method*), 155
FLOOD_DSTS (*faucet.valve_switch_standalone.ValveSwitchManager attribute*), 221
flood_pkt() (*faucet.vlan.VLAN method*), 230
flood_port_outputs() (*in module faucet.valve_of*), 194
flood_ports() (*faucet.vlan.VLAN static method*), 230
flood_tagged_port_outputs() (*in module faucet.valve_of*), 194
flood_untagged_port_outputs() (*in module faucet.valve_of*), 194
floods_to_root() (*faucet.valve.Valve method*), 182
floods_to_root() (*faucet.valve_switch_standalone.ValveSwitchManager static method*), 222
flow_timeout() (*faucet.valve.Valve method*), 182
flow_timeout() (*faucet.valve_switch_standalone.ValveSwitchFlowRemoval method*), 221
flow_timeout() (*faucet.valve_switch_standalone.ValveSwitchManager static method*), 222
flowcontroller() (*faucet.valve_table.ValveTable method*), 225
flowdel() (*faucet.valve_table.ValveTable method*), 225
flowdrop() (*faucet.valve_table.ValveTable method*), 225
flowmod() (*faucet.valve_table.ValveTable method*), 225
flowmod() (*in module faucet.valve_of*), 194
flowremoved_handler() (*faucet.faucet.Faucet method*), 158
from_connected_to_vip() (*faucet.vlan.VLAN method*), 230

G

Gauge (*class in faucet.gauge*), 163
GaugeFlowTableInfluxDBLogger (*class in faucet.gauge_influx*), 163
GaugeFlowTableLogger (*class in faucet.watcher*), 232
GaugeFlowTablePoller (*class in faucet.gauge_pollers*), 166
GaugeFlowTablePrometheusPoller (*class in faucet.gauge_prom*), 167
GaugeMeterStatsLogger (*class in faucet.watcher*), 232
GaugeMeterStatsPoller (*class in faucet.gauge_pollers*), 166
GaugeMeterStatsPrometheusPoller (*class in faucet.gauge_prom*), 167
GaugePoller (*class in faucet.gauge_pollers*), 166
GaugePortStateInfluxDBLogger (*class in faucet.gauge_influx*), 164
GaugePortStateLogger (*class in faucet.watcher*), 232
GaugePortStatePoller (*class in faucet.gauge_pollers*), 166
GaugePortStatePrometheusPoller (*class in faucet.gauge_prom*), 167
GaugePortStatsInfluxDBLogger (*class in faucet.gauge_influx*), 164
GaugePortStatsLogger (*class in faucet.watcher*), 232
GaugePortStatsPoller (*class in faucet.gauge_pollers*), 167
GaugePortStatsPrometheusPoller (*class in faucet.gauge_prom*), 168
GaugePrometheusClient (*class in faucet.gauge_prom*), 168
GaugeThreadPoller (*class in faucet.gauge_pollers*), 167
get_config_changes() (*faucet.dp.DP method*), 155
get_config_dict() (*faucet.dp.DP method*), 155
get_config_for_api() (*in module faucet.config_parser*), 152

get_egress_metadata() (in module `faucet.faucet_metadata`), 161
 get_entry() (faucet.valve_table.ValveGroupTable method), 225
 get_event() (faucet.faucet_event.FaucetEventNotifier method), 161
 get_lacp_dpid_nomination() (faucet.valve_switch_stack.ValveSwitchStackManagerBase method), 219
 get_lacp_dpid_nomination() (faucet.valve_switch_standalone.ValveSwitchManager static method), 222
 get_lacp_flags() (faucet.port.Port method), 170
 get_logger() (in module `faucet.config_parser_util`), 153
 get_logger() (in module `faucet.valve_util`), 226
 get_mac_str() (in module `faucet.faucet_dot1x`), 160
 get_meters() (faucet.acl.ACL method), 149
 get_mirror_destinations() (faucet.acl.ACL method), 149
 get_native_vlan() (faucet.dp.DP method), 155
 get_node_link_data() (faucet.stack.Stack method), 174
 get_num_tunnels() (faucet.acl.ACL method), 149
 get_ports() (faucet.vlan.VLAN method), 230
 get_samples() (in module `faucet.fctl`), 162
 get_setting() (faucet.valve_ryuapp.OSKenAppBase method), 215
 get_setting() (in module `faucet.valve_util`), 226
 get_sys_prefix() (in module `faucet.valve_util`), 226
 get_tables() (faucet.dp.DP method), 155
 get_tunnel_rules() (faucet.acl.ACL method), 149
 global_routing (faucet.valve_route.ValveIPv4RouteManager attribute), 211
 global_routing (faucet.valve_route.ValveIPv6RouteManager attribute), 212
 global_routing (faucet.valve_route.ValveRouteManager attribute), 214
 global_vlan (faucet.valve_route.ValveIPv4RouteManager attribute), 211
 global_vlan (faucet.valve_route.ValveIPv6RouteManager attribute), 212
 global_vlan (faucet.valve_route.ValveRouteManager attribute), 214
 goto() (faucet.valve_table.ValveTable method), 225
 goto_miss() (faucet.valve_table.ValveTable method), 225
 goto_table() (in module `faucet.valve_of`), 194
 goto_table_id() (in module `faucet.valve_of`), 194
 goto_this() (faucet.valve_table.ValveTable method), 225
 group_act() (in module `faucet.valve_of`), 194
 group_id_from_str() (faucet.valve_table.ValveGroupTable static method), 225
 hairpin_ports() (faucet.vlan.VLAN method), 230
 hash() (faucet.stack.Stack method), 175
 HostCacheEntry (class in `faucet.vlan`), 228
 hosts() (faucet.port.Port method), 170
 hosts_count() (faucet.port.Port method), 170
 hosts_count() (faucet.vlan.VLAN method), 230

H

ICMP_SIZE (faucet.valve_route.ValveIPv4RouteManager attribute), 210
 ICMP_SIZE (faucet.valve_route.ValveIPv6RouteManager attribute), 211
 ICMP_SIZE (faucet.valve_route.ValveRouteManager attribute), 212
 ICMP_TYPE (faucet.valve_route.ValveIPv4RouteManager attribute), 210
 ICMP_TYPE (faucet.valve_route.ValveIPv6RouteManager attribute), 211
 ICMP_TYPE (faucet.valve_route.ValveRouteManager attribute), 212
 icmpv6_echo_reply() (in module `faucet.valve_packet`), 203
 ignore_port() (in module `faucet.valve_of`), 194
 ignore_subconf() (faucet.conf.Config method), 151
 inc_var() (faucet.faucet_metrics.FaucetMetrics method), 161
 InfluxShipper (class in `faucet.gauge_influx`), 165
 info() (faucet.valve.ValveLogger method), 187
 init_table() (in module `faucet.tfm_pipeline`), 177
 initialise_tables() (faucet.valve_acl.ValveAclManager method), 189
 initialise_tables() (faucet.valve_manager_base.ValveManagerBase method), 191
 initialise_tables() (faucet.valve_pipeline.ValvePipeline method), 209
 initialise_tables() (faucet.valve_switch_standalone.ValveSwitchManager method), 223
 int_from_mac() (in module `faucet.valve_packet`), 204
 int_in_mac() (in module `faucet.valve_packet`), 204
 InvalidConfigError, 151
 ip_dsts_for_ip_gw() (faucet.vlan.VLAN method), 230
 ip_in_vip_subnet() (faucet.vlan.VLAN method), 230

IP_PKT (*faucet.valve_route.ValveIPv4RouteManager attribute*), 210
 IP_PKT (*faucet.valve_route.ValveIPv6RouteManager attribute*), 211
 IP_PKT (*faucet.valve_route.ValveRouteManager attribute*), 213
 ip_ver() (*faucet.valve_packet.PacketMeta method*), 201
 ipaddress_fields (*faucet.router.Router attribute*), 174
 IPV (*faucet.valve_route.ValveIPv4RouteManager attribute*), 210
 IPV (*faucet.valve_route.ValveIPv6RouteManager attribute*), 211
 IPV (*faucet.valve_route.ValveRouteManager attribute*), 212
 ipv4_parseable() (*in module faucet.valve_packet*), 204
 ipv6_link_eth_mcast() (*in module faucet.valve_packet*), 204
 ipv6_solicited_node_from_unicast() (*in module faucet.valve_packet*), 204
 ipvs() (*faucet.vlan.VLAN method*), 230
 is_active() (*faucet.gauge_pollers.GaugePoller static method*), 166
 is_active() (*faucet.gauge_pollers.GaugeThreadPoller method*), 167
 is_actor_init() (*faucet.port.Port method*), 170
 is_actor_none() (*faucet.port.Port method*), 170
 is_actor_nosync() (*faucet.port.Port method*), 170
 is_actor_up() (*faucet.port.Port method*), 170
 is_apply_actions() (*in module faucet.valve_of*), 195
 is_away() (*faucet.valve_stack.ValveStackManager method*), 217
 is_ct() (*in module faucet.valve_of*), 195
 is_edge() (*faucet.stack.Stack method*), 175
 is_faucet_vip() (*faucet.vlan.VLAN method*), 230
 is_flowaddmod() (*in module faucet.valve_of*), 195
 is_flowdel() (*in module faucet.valve_of*), 195
 is_flowmod() (*in module faucet.valve_of*), 195
 is_global_flowdel() (*in module faucet.valve_of*), 195
 is_global_groupdel() (*in module faucet.valve_of*), 195
 is_global_meterdel() (*in module faucet.valve_of*), 195
 is_groupadd() (*in module faucet.valve_of*), 195
 is_groupdel() (*in module faucet.valve_of*), 196
 is_groupmod() (*in module faucet.valve_of*), 196
 is_host_fib_route() (*faucet.vlan.VLAN method*), 230
 is_in_path() (*faucet.stack.Stack method*), 175
 is_meter() (*in module faucet.valve_of*), 196
 is_meteradd() (*in module faucet.valve_of*), 196
 is_meterdel() (*in module faucet.valve_of*), 196
 is_metermod() (*in module faucet.valve_of*), 197
 is_output() (*in module faucet.valve_of*), 197
 is_packetout() (*in module faucet.valve_of*), 197
 is_port_selected() (*faucet.port.Port method*), 170
 is_port_standby() (*faucet.port.Port method*), 170
 is_port_unselected() (*faucet.port.Port method*), 170
 is_pruned_port() (*faucet.valve_stack.ValveStackManager method*), 217
 is_root() (*faucet.stack.Stack method*), 175
 is_root_candidate() (*faucet.stack.Stack method*), 175
 is_selected_towards_root_port() (*faucet.valve_stack.ValveStackManager method*), 217
 is_set_field() (*in module faucet.valve_of*), 197
 is_stack_admin_down() (*faucet.port.Port method*), 170
 is_stack_bad() (*faucet.port.Port method*), 170
 is_stack_gone() (*faucet.port.Port method*), 171
 is_stack_init() (*faucet.port.Port method*), 171
 is_stack_none() (*faucet.port.Port method*), 171
 is_stack_port() (*faucet.valve_stack.ValveStackManager static method*), 217
 is_stack_up() (*faucet.port.Port method*), 171
 is_table_features_req() (*in module faucet.valve_of*), 197
 is_towards_root() (*faucet.valve_stack.ValveStackManager method*), 217
 is_tunnel_acl() (*faucet.acl.ACL method*), 149

K

kill_on_exception() (*in module faucet.valve_util*), 226

L

13_dst (*faucet.valve_packet.PacketMeta attribute*), 201
 13_pkt (*faucet.valve_packet.PacketMeta attribute*), 201
 13_src (*faucet.valve_packet.PacketMeta attribute*), 201
 lacp_actor_up() (*in module faucet.valve_packet*), 204
 lacp_actor_update() (*faucet.port.Port method*), 171
 lacp_advertise() (*faucet.valve_switch_standalone.ValveSwitchManager method*), 223
 lacp_down_ports() (*faucet.dp.DP method*), 155
 lacp_handler() (*faucet.valve_switch_standalone.ValveSwitchManager method*), 223
 lacp_nosync_ports() (*faucet.dp.DP method*), 155
 lacp_port_healthy() (*faucet.stack.Stack method*), 175
 lacp_port_state() (*faucet.port.Port method*), 171
 lacp_port_update() (*faucet.port.Port method*), 171
 lacp_ports() (*faucet.dp.DP method*), 155
 lacp_ports() (*faucet.vlan.VLAN method*), 230
 lacp_req_reply() (*faucet.valve_switch_standalone.ValveSwitchManager method*), 223
 lacp_reqreply() (*in module faucet.valve_packet*), 204
 lacp_up_ports() (*faucet.dp.DP method*), 155
 lacp_up_selected_ports() (*faucet.vlan.VLAN method*), 231
 lacp_update() (*faucet.valve.Valve method*), 182

```

lacp_update_actor_state()                                logger (faucet.valve.OVSTfmValve attribute), 179
    (faucet.valve_switch_standalone.ValveSwitchManager
     method), 223                                         logger (faucet.valve.OVSValve attribute), 180
                                                       logger (faucet.valve.TfmValve attribute), 181
lacp_update_port_selection_state()                      logger (faucet.valve.Valve attribute), 183
    (faucet.valve_switch_standalone.ValveSwitchManager
     method), 224                                         logger (faucet.valve_route.ValveIPv4RouteManager at-
                                                       tribute), 211
lags() (faucet.dp.DP method), 155                     logger (faucet.valve_route.ValveIPv6RouteManager at-
                                                       tribute), 212
lags() (faucet.vlan.VLAN method), 231
lags_nosync() (faucet.dp.DP method), 156
lags_up() (faucet.dp.DP method), 156
last_retry_time (faucet.valve_route.NextHop attribute), 210
learn_host() (faucet.valve.Valve method), 183
learn_host_from_pkt()                               logname (faucet.faucet.Faucet attribute), 158
    (faucet.valve_switch_stack.ValveSwitchStackManager
     method), 220                                         logname (faucet.gauge.Gauge attribute), 163
                                                       logname (faucet.valve.AlliedTelesis attribute), 177
learn_host_from_pkt()                               logname (faucet.valve.ArubaValve attribute), 178
    (faucet.valve_switch_standalone.ValveSwitchManager
     static method), 224                                     logname (faucet.valve.CiscoC9KValve attribute), 178
                                                       logname (faucet.valve.NoviflowValve attribute), 179
learn_host_on_vlan_port_flows()                     logname (faucet.valve.OVSTfmValve attribute), 179
    (faucet.valve_switch_standalone.ValveSwitchManager
     method), 224                                         logname (faucet.valve.OSKenAppBase attribute), 216
                                                       logoff_handler() (faucet.faucet_dot1x.FaucetDot1x
                                                       method), 160
link_and_other_vips() (faucet.vlan.VLAN method), 231
live_timeout_healthy() (faucet.stack.Stack method), 175
lldp_beacon() (in module faucet.valve_packet), 205
lldp_beacon_defaults_types (faucet.dp.DP attribute), 156
lldp_beacon_defaults_types (faucet.port.Port attribute), 171
lldp_beacon_enabled() (faucet.port.Port method), 171
lldp_beacon_send_ports() (faucet.dp.DP method), 156
lldp_handler() (faucet.valve.Valve method), 183
lldp_org_tlv_defaults_types (faucet.port.Port attribute), 171
load_configs() (faucet.valves_manager.ValvesManager method), 227
load_tables() (in module faucet.tfm_pipeline), 177
log() (faucet.valve_packet.PacketMeta method), 201
log_auth_event() (faucet.faucet_dot1x.FaucetDot1x method), 160
log_port_event() (faucet.faucet_dot1x.FaucetDot1x method), 160
logger (faucet.gauge_influx.InfluxShipper attribute), 165
logger (faucet.valve.AlliedTelesis attribute), 177
logger (faucet.valve.ArubaValve attribute), 178
logger (faucet.valve.CiscoC9KValve attribute), 178
logger (faucet.valve.NoviflowValve attribute), 179
mac_addr_all_zeros() (in module faucet.valve_packet), 206
mac_addr_is_unicast() (in module faucet.valve_packet), 206
mac_byte_mask() (in module faucet.valve_packet), 206
mac_mask_bits() (in module faucet.valve_packet), 206
main() (in module faucet.check_faucet_config), 151
main() (in module faucet.fctl), 162
maintain_stack_root()                               (faucet.valves_manager.ValvesManager
                                                       method), 227
make_point() (faucet.gauge_influx.InfluxShipper static method), 165
make_port_point() (faucet.gauge_influx.InfluxShipper method), 165
make_wsgi_app() (in module faucet.prom_client), 173
match() (faucet.valve_table.ValveTable static method), 225
match() (in module faucet.valve_of), 197
match_from_dict() (in module faucet.valve_of), 198
match_tables() (faucet.dp.DP method), 156

```

M

mac_addr_all_zeros()	(in module	faucet.valve_packet), 206
mac_addr_is_unicast()	(in module	faucet.valve_packet), 206
mac_byte_mask()	(in module	faucet.valve_packet), 206
mac_mask_bits()	(in module	faucet.valve_packet), 206
main() (in module faucet.check_faucet_config), 151		
main() (in module faucet.fctl), 162		
maintain_stack_root()	(faucet.valves_manager.ValvesManager	
	method), 227	
make_point() (faucet.gauge_influx.InfluxShipper static		
method), 165		
make_port_point() (faucet.gauge_influx.InfluxShipper		
method), 165		
make_wsgi_app() (in module faucet.prom_client), 173		
match() (faucet.valve_table.ValveTable static method), 225		
match() (in module faucet.valve_of), 197		
match_from_dict() (in module faucet.valve_of), 198		
match_tables() (faucet.dp.DP method), 156		

MAX_ETH_TYPE_PKT_SIZE
 (*faucet.valve_packet.PacketMeta* attribute), 201

max_host_fib_retry_count
 (*faucet.valve_route.ValveIPv4RouteManager* attribute), 211

max_host_fib_retry_count
 (*faucet.valve_route.ValveIPv6RouteManager* attribute), 212

max_host_fib_retry_count
 (*faucet.valve_route.ValveRouteManager* attribute), 214

max_hosts_per_resolve_cycle
 (*faucet.valve_route.ValveIPv4RouteManager* attribute), 211

max_hosts_per_resolve_cycle
 (*faucet.valve_route.ValveIPv6RouteManager* attribute), 212

max_hosts_per_resolve_cycle
 (*faucet.valve_route.ValveRouteManager* attribute), 214

MAX_PACKET_IN_SIZE (*faucet.valve_route.ValveRouteManager* attribute), 213

max_resolve_backoff_time
 (*faucet.valve_route.ValveIPv4RouteManager* attribute), 211

max_resolve_backoff_time
 (*faucet.valve_route.ValveIPv6RouteManager* attribute), 212

max_resolve_backoff_time
 (*faucet.valve_route.ValveRouteManager* attribute), 214

MAX_TABLE_ID (*faucet.valve.OVSTfmValve* attribute), 179

MAX_TABLE_ID (*faucet.valve.TfmValve* attribute), 180

merge_dyn() (*faucet.conf.Conf* method), 151

metadata_goto_table() (in module *faucet.valve_of*), 198

MetaDPState (class in *faucet.valves_manager*), 226

Meter (class in *faucet.meter*), 168

meter_id (*faucet.meter.Meter* attribute), 168

meteradd() (in module *faucet.valve_of*), 198

meterdel() (in module *faucet.valve_of*), 198

metric_update() (*faucet.faucet.Faucet* method), 158

metrics (*faucet.valve.AlliedTelesis* attribute), 177

metrics (*faucet.valve.ArubaValve* attribute), 178

metrics (*faucet.valve.CiscoC9KValve* attribute), 178

metrics (*faucet.valve.NoviflowValve* attribute), 179

metrics (*faucet.valve.OVSTfmValve* attribute), 180

metrics (*faucet.valve.OVSVValve* attribute), 180

metrics (*faucet.valve.TfmValve* attribute), 181

metrics (*faucet.valve.Valve* attribute), 183

MIN_ETH_TYPE_PKT_SIZE
 (*faucet.valve_packet.PacketMeta* attribute), 201

MIN_MAX_FLOWS (*faucet.valve.OVSTfmValve* attribute), 179

MIN_MAX_FLOWS (*faucet.valve.TfmValve* attribute), 180

mirror_actions() (*faucet.port.Port* method), 171

mirrored_ports() (*faucet.vlan.VLAN* method), 231

modify_link() (*faucet.stack.Stack* method), 175

modify_topology() (*faucet.stack.Stack* static method), 176

module
 faucet, 234
 faucet.acl, 148
 faucet.check_faucet_config, 151
 faucet.conf, 151
 faucet.config_parser, 152
 faucet.config_parser_util, 152
 faucet.dp, 153
 faucet.faucet, 157
 faucet.faucet_bgp, 159
 faucet.faucet_dot1x, 159
 faucet.faucet_event, 161
 faucet.faucet_metadata, 161
 faucet.faucet_metrics, 161
 faucet.faucet_pipeline, 162
 faucet.fctl, 162
 faucet.gauge, 163
 faucet.gauge_influx, 163
 faucet.gauge_pollers, 166
 faucet.gauge_prom, 167
 faucet.meter, 168
 faucet.port, 168
 faucet.prom_client, 173
 faucet.router, 173
 faucet.stack, 174
 faucet.tfm_pipeline, 177
 faucet.valve, 177
 faucet.valve_acl, 187
 faucet.valve_coprocessor, 190
 faucet.valve_lldp, 190
 faucet.valve_manager_base, 191
 faucet.valve_of, 191
 faucet.valve_of_old, 201
 faucet.valve_outonly, 201
 faucet.valve_packet, 201
 faucet.valve_pipeline, 208
 faucet.valve_route, 210
 faucet.valve_ryuapp, 215
 faucet.valve_stack, 216
 faucet.valve_switch, 219
 faucet.valve_switch_stack, 219
 faucet.valve_switch_standalone, 221
 faucet.valve_table, 224
 faucet.valve_util, 226
 faucet.valves_manager, 226

f
 faucet.vlan, 228
 faucet.watcher, 232
 faucet.watcher_conf, 233
 multi_out (faucet.valve_route.ValveIPv4RouteManager attribute), 211
 multi_out (faucet.valve_route.ValveIPv6RouteManager attribute), 212
 multi_out (faucet.valve_route.ValveRouteManager attribute), 214
 mutable_attrs (faucet.acl.ACL attribute), 149
 mutable_attrs (faucet.conf.Config attribute), 151
 mutable_attrs (faucet.dp.DP attribute), 156
 mutable_attrs (faucet.vlan.VLAN attribute), 231

N
 name (faucet.vlan.AnyVLAN attribute), 228
 name (faucet.vlan.NullVLAN attribute), 228
 nd_advert() (in module faucet.valve_packet), 206
 nd_request() (in module faucet.valve_packet), 206
 neigh_cache_by_ipv() (faucet.vlan.VLAN method), 231
 neigh_cache_count_by_ipv() (faucet.vlan.VLAN method), 231
 neighbor_timeout (faucet.valve_route.ValveIPv4RouteManager attribute), 211
 neighbor_timeout (faucet.valve_route.ValveIPv6RouteManager attribute), 212
 neighbor_timeout (faucet.valve_route.ValveRouteManager attribute), 214
 new_valve() (faucet.valves_manager.ValvesManager method), 227
 next_retry() (faucet.valve_route.NextHop method), 210
 next_retry_time (faucet.valve_route.NextHop attribute), 210
 NextHop (class in faucet.valve_route), 210
 nexthop_dead() (faucet.valve_route.ValveRouteManager method), 214
 nfv_sw_port_up() (faucet.faucet_dot1x.FaucetDot1x method), 160
 no_response() (faucet.gauge_influx.GaugePortStateInfluxDBLogger method), 164
 no_response() (faucet.gauge_pollers.GaugePoller method), 166
 no_response() (faucet.gauge_pollers.GaugePortStatePoller method), 167
 no_response() (faucet.gauge_prom.GaugePortStatePrometheus method), 167
 no_response() (faucet.watcher.GaugePortStateLogger method), 232
 nominate_stack_root() (faucet.stack.Stack static method), 176
 nominate_stack_root() (faucet.valve_stack.ValveStackManager static

method), 217
 non_stack_forwarding() (faucet.port.Port method), 171
 non_vlan_ports() (faucet.dp.DP method), 156
 NonBlockLock (class in faucet.faucet_event), 161
 notifier (faucet.faucet.Faucet attribute), 158
 notifier (faucet.valve.AlliedTelesis attribute), 177
 notifier (faucet.valve.ArubaValve attribute), 178
 notifier (faucet.valve.CiscoC9KValve attribute), 178
 notifier (faucet.valve.NoviFlowValve attribute), 179
 notifier (faucet.valve.OVSTfmValve attribute), 180
 notifier (faucet.valve.OVSValve attribute), 180
 notifier (faucet.valve.TfmValve attribute), 181
 notifier (faucet.valve.Valve attribute), 183
 notify (faucet.valve_route.ValveIPv4RouteManager attribute), 211
 notify (faucet.valve_route.ValveIPv6RouteManager attribute), 212
 notify (faucet.valve_route.ValveRouteManager attribute), 214
 notify() (faucet.faucet_event.FaucetEventNotifier method), 161
 notify() (faucet.valve.Valve method), 183
 notify_learn() (faucet.valve_route.ValveRouteManager method), 214
 NoviFlowValve (class in faucet.valve), 179
 NullRyuDatapath (class in faucet.valve_of), 191
 NullVLAN (class in faucet.vlan), 228

O
 ofchannel_log() (faucet.valve.Valve method), 183
 ofchannel_logger (faucet.valve.AlliedTelesis attribute), 177
 ofchannel_logger (faucet.valve.ArubaValve attribute), 178
 ofchannel_logger (faucet.valve.CiscoC9KValve attribute), 178
 ofchannel_logger (faucet.valve.NoviFlowValve attribute), 179
 ofchannel_logger (faucet.valve.OVSTfmValve attribute), 180
 ofchannel_logger (faucet.valve.OVSValve attribute), 180
 ofchannel_logger (faucet.valve.TfmValve attribute), 181
 ofchannel_logger (faucet.valve.Valve attribute), 183
 ofdescstats_handler() (faucet.valve.Valve method), 183
 oferror() (faucet.valve.Valve method), 183
 OFP_VERSIONS (faucet.valve_ryuapp.OSKenAppBase attribute), 215
 ofproto (faucet.valve_of.NullRyuDatapath attribute), 191
 OFVLAN (class in faucet.vlan), 228

`orig_len` (*faucet.valve_packet.PacketMeta attribute*), 202
`OSKenAppBase` (*class in faucet.valve_ryuapp*), 215
`output()` (*faucet.valve_pipeline.ValvePipeline method*), 209
`output_actions_types` (*faucet.acl.ACL attribute*), 149
`output_controller()` (*in module faucet.valve_of*), 198
`output_in_port()` (*in module faucet.valve_of*), 198
`output_non_output_actions()` (*in module faucet.valve_of*), 198
`output_port()` (*faucet.vlan.VLAN method*), 231
`output_port()` (*in module faucet.valve_of*), 198
`output_table()` (*faucet.dp.DP method*), 156
`output_tables()` (*faucet.dp.DP method*), 156
`OutputOnlyManager` (*class in faucet.valve_outonly*), 201
`OVSTfmValve` (*class in faucet.valve*), 179
`OVSValve` (*class in faucet.valve*), 180

P

`packet_complete()` (*faucet.valve_packet.PacketMeta method*), 202
`packet_in_handler()` (*faucet.faucet.Faucet method*), 158
`PacketMeta` (*class in faucet.valve_packet*), 201
`packetout()` (*in module faucet.valve_of*), 199
`packetouts()` (*in module faucet.valve_of*), 199
`parse_args()` (*in module faucet.fctl*), 162
`parse_configs()` (*faucet.valves_manager.ValvesManager method*), 227
`parse_eth_pkt()` (*in module faucet.valve_packet*), 207
`parse_faucet_lldp()` (*in module faucet.valve_packet*), 207
`parse_lacp_pkt()` (*in module faucet.valve_packet*), 207
`parse_lldp()` (*in module faucet.valve_packet*), 207
`parse_packet_in_pkt()` (*in module faucet.valve_packet*), 207
`parse_pkt_meta()` (*faucet.valve.Valve method*), 184
`parse_rcv_packet()` (*faucet.valve.Valve method*), 184
`peer_symmetric_up_ports()` (*faucet.stack.Stack method*), 176
`peer_up_ports()` (*faucet.stack.Stack method*), 176
`pipeline` (*faucet.valve.AlliedTelesis attribute*), 177
`pipeline` (*faucet.valve.ArubaValve attribute*), 178
`pipeline` (*faucet.valve.CiscoC9KValve attribute*), 178
`pipeline` (*faucet.valve.NoviFlowValve attribute*), 179
`pipeline` (*faucet.valve.OVSTfmValve attribute*), 180
`pipeline` (*faucet.valve.OVSValve attribute*), 180
`pipeline` (*faucet.valve.TfmValve attribute*), 181
`pipeline` (*faucet.valve.Valve attribute*), 184
`pipeline` (*faucet.valve_route.ValveIPv4RouteManager attribute*), 211
`pipeline` (*faucet.valve_route.ValveIPv6RouteManager attribute*), 212
`pipeline` (*faucet.valve_route.ValveRouteManager attribute*), 214
`pipeline_str()` (*faucet.dp.DP method*), 156
`pipeline_tableids()` (*faucet.dp.DP method*), 156
`pkt` (*faucet.valve_packet.PacketMeta attribute*), 202
`pkt_out_port()` (*faucet.vlan.VLAN method*), 231
`pop_vlan()` (*in module faucet.valve_of*), 199
`Port` (*class in faucet.port*), 168
`port` (*faucet.valve_packet.PacketMeta attribute*), 202
`port` (*faucet.valve_route.NextHop attribute*), 210
`port` (*faucet.vlan.HostCacheEntry attribute*), 228
`port_add()` (*faucet.valve.Valve method*), 184
`port_delete()` (*faucet.valve.Valve method*), 184
`port_desc_stats_reply_handler()`
`(faucet.faucet.Faucet method)`, 158
`port_desc_stats_reply_handler()`
`(faucet.valve.Valve method)`, 184
`port_desc_stats_reply_handler()`
`(faucet.valves_manager.ValvesManager method)`, 227
`port_down()` (*faucet.faucet_dot1x.FaucetDot1x method*), 160
`port_is_tagged()` (*faucet.vlan.VLAN method*), 231
`port_is_untagged()` (*faucet.vlan.VLAN method*), 231
`port_labels()` (*faucet.dp.DP method*), 156
`port_no_valid()` (*faucet.dp.DP method*), 156
`port_role_name()` (*faucet.port.Port static method*), 171
`port_status_from_state()` (*in module faucet.valve_of*), 199
`port_status_handler()` (*faucet.faucet.Faucet method*), 158
`port_status_handler()` (*faucet.valve.Valve method*), 184
`port_status_handler()`
`(faucet.valves_manager.ValvesManager method)`, 227
`port_up()` (*faucet.faucet_dot1x.FaucetDot1x method*), 160
`ports_add()` (*faucet.valve.Valve method*), 184
`ports_delete()` (*faucet.valve.Valve method*), 185
`ports_from_output_port_acts()` (*in module faucet.valve_of*), 199
`prepare_send_flows()` (*faucet.valve.Valve method*), 185
`proactive_learn` (*faucet.valve_route.ValveIPv4RouteManager attribute*), 211
`proactive_learn` (*faucet.valve_route.ValveIPv6RouteManager attribute*), 212
`proactive_learn` (*faucet.valve_route.ValveRouteManager attribute*), 214
`PromClient` (*class in faucet.prom_client*), 173
`push_vlan()` (*in module faucet.valve_acl*), 189

`push_vlan_act()` (*in module faucet.valve_of*), 199

R

`rate_limit_packet_ins()` (*faucet.valve.Valve method*), 185
`rcv_packet()` (*faucet.valve.Valve method*), 185
`read_config()` (*in module faucet.config_parser_util*), 153
`recent_ofmsgs` (*faucet.valve.AlliedTelesis attribute*), 177
`recent_ofmsgs` (*faucet.valve.ArubaValve attribute*), 178
`recent_ofmsgs` (*faucet.valve.CiscoC9KValve attribute*), 178
`recent_ofmsgs` (*faucet.valve.NoviflowValve attribute*), 179
`recent_ofmsgs` (*faucet.valve.OVSTfmValve attribute*), 180
`recent_ofmsgs` (*faucet.valve.OVSVValve attribute*), 180
`recent_ofmsgs` (*faucet.valve.TfmValve attribute*), 181
`recent_ofmsgs` (*faucet.valve.Valve attribute*), 185
`reconnect_handler()` (*faucet.valve_ryuapp.OSKenAppBase method*), 216
`relative_port_towards()` (*faucet.valve_stack.ValveStackManager method*), 217
`release()` (*faucet.faucet_event.NonBlockLock method*), 161
`reload_config()` (*faucet.faucet.Faucet method*), 158
`reload_config()` (*faucet.gauge.Gauge method*), 163
`reload_config()` (*faucet.valve.Valve method*), 185
`reload_config()` (*faucet.valve_ryuapp.OSKenAppBase method*), 216
`reload_stack_root_config()` (*faucet.valves_manager.ValvesManager method*), 227
`remove_filter()` (*faucet.valve_pipeline.ValvePipeline method*), 209
`remove_overlap_ofmsgs()` (*in module faucet.valve_of*), 200
`reparse()` (*faucet.valve_packet.PacketMeta method*), 202
`reparse_all()` (*faucet.valve_packet.PacketMeta method*), 202
`reparse_ip()` (*faucet.valve_packet.PacketMeta method*), 202
`report_dp_status()` (*faucet.gauge_pollers.GaugePoller method*), 166
`report_label_match_metrics()` (*in module faucet.fctl*), 162
`request_reload_configs()` (*faucet.valves_manager.ValvesManager method*), 227
`REQUIRED_LABELS` (*faucet.prom_client.PromClient attribute*), 173
`requires_reverse_tunnel()` (*faucet.acl.ACL method*), 149
`reregister_flow_vars()` (*faucet.gauge_prom.GaugePrometheusClient method*), 168
`reregister_nonflow_vars()` (*faucet.gauge_prom.GaugePrometheusClient method*), 168
`reset()` (*faucet.faucet_bgp.FaucetBgp method*), 159
`reset()` (*faucet.faucet_dot1x.FaucetDot1x method*), 160
`reset_caches()` (*faucet.vlan.VLAN method*), 231
`reset_dpid()` (*faucet.faucet_metrics.FaucetMetrics method*), 161
`reset_peer_distances()` (*faucet.valve_stack.ValveStackManager method*), 218
`reset_ports()` (*faucet.vlan.VLAN method*), 231
`reset_refs()` (*faucet.dp.DP method*), 156
`resolution_due()` (*faucet.valve_route.NextHop method*), 210
`resolve_expire_hosts()` (*faucet.valve_route.ValveRouteManager method*), 214
`resolve_gateways()` (*faucet.valve.Valve method*), 186
`resolve_gateways()` (*faucet.valve_route.ValveRouteManager method*), 214
`resolve_port()` (*faucet.dp.DP method*), 156
`resolve_ports()` (*faucet.acl.ACL method*), 149
`resolve_retries` (*faucet.valve_route.NextHop attribute*), 210
`resolve_stack_topology()` (*faucet.dp.DP method*), 156
`resolve_topology()` (*faucet.stack.Stack method*), 176
`restricted_bcast_arpnd_ports()` (*faucet.dp.DP method*), 156
`restricted_bcast_arpnd_ports()` (*faucet.vlan.VLAN method*), 231
RESTRICTED_FLOOD_DISTS (*faucet.valve_switch_standalone.ValveSwitchManager attribute*), 222
`revert_config()` (*faucet.valves_manager.ValvesManager method*), 227
`rewrite_vlan()` (*in module faucet.valve_acl*), 189
`route_count_by_ipv()` (*faucet.vlan.VLAN method*), 231
`route_priority` (*faucet.valve_route.ValveIPv4RouteManager attribute*), 211
`route_priority` (*faucet.valve_route.ValveIPv6RouteManager attribute*), 212
`route_priority` (*faucet.valve_route.ValveRouteManager attribute*), 215
Router (*class in faucet.router*), 173

`router_advert()` (*in module faucet.valve_packet*), 207
`router_rcv_packet()` (*faucet.valve.Valve method*), 186
`router_vlan_for_ip_gw()` (*faucet.valve.Valve method*), 186
`router_vlan_for_ip_gw()` (*faucet.valve_route.ValveRouteManager method*), 215
`routers` (*faucet.valve_route.ValveIPv4RouteManager attribute*), 211
`routers` (*faucet.valve_route.ValveIPv6RouteManager attribute*), 212
`routers` (*faucet.valve_route.ValveRouteManager attribute*), 215
`routes_by_ipv()` (*faucet.vlan.VLAN method*), 231
`rule_types` (*faucet.acl.ACL attribute*), 150
`running()` (*faucet.gauge_pollers.GaugePoller method*), 166
`running()` (*faucet.port.Port method*), 171

S

`scrape_prometheus()` (*in module faucet.fctl*), 162
`select_packets()` (*faucet.valve_pipeline.ValvePipeline method*), 209
`select_port()` (*faucet.port.Port method*), 171
`selected_up_lags()` (*faucet.vlan.VLAN method*), 231
`send_flows()` (*faucet.valve.Valve method*), 186
`send_req()` (*faucet.gauge_influx.GaugePortStateInfluxDBLogger method*), 164
`send_req()` (*faucet.gauge_pollers.GaugeFlowTablePoller method*), 166
`send_req()` (*faucet.gauge_pollers.GaugeMeterStatsPoller method*), 166
`send_req()` (*faucet.gauge_pollers.GaugePoller method*), 166
`send_req()` (*faucet.gauge_pollers.GaugePortStatePoller method*), 167
`send_req()` (*faucet.gauge_pollers.GaugePortStatsPoller method*), 167
`send_req()` (*faucet.gauge_pollers.GaugeThreadPoller method*), 167
`send_req()` (*faucet.gauge_prom.GaugePortStatePrometheusPoller method*), 168
`send_req()` (*faucet.watcher.GaugePortStateLogger method*), 232
`set_bgp_vlan()` (*faucet.router.Router method*), 174
`set_defaults()` (*faucet.conf.Conf method*), 151
`set_defaults()` (*faucet.dp.DP method*), 156
`set_defaults()` (*faucet.port.Port method*), 171
`set_defaults()` (*faucet.vlan.VLAN method*), 231
`set_external_forwarding_requested()` (*faucet.valve_table.ValveTable method*), 225
`set_field()` (*faucet.valve_table.ValveTable static method*), 225
`set_field()` (*in module faucet.valve_of*), 200
`set_mac_str()` (*faucet.faucet_dot1x.FaucetDot1x method*), 160
`set_no_external_forwarding_requested()` (*faucet.valve_table.ValveTable method*), 225
`set_stack_root()` (*faucet.valves_manager.ValvesManager method*), 227
`set_vlan_vid()` (*faucet.valve_table.ValveTable method*), 225
`ship_error_prefix` (*faucet.gauge_influx.InfluxShipper attribute*), 165
`ship_points()` (*faucet.gauge_influx.InfluxShipper method*), 165
`shortest_path()` (*faucet.stack.Stack method*), 176
`shortest_path_port()` (*faucet.stack.Stack method*), 176
`shortest_path_to_root()` (*faucet.stack.Stack method*), 176
`shortest_symmetric_path_port()` (*faucet.stack.Stack method*), 176
`shutdown_bgp_speakers()` (*faucet.faucet_bgp.FaucetBgp method*), 159
`signal_handler()` (*faucet.valve_ryuapp.OSKenAppBase method*), 216
`slowpath_pps_meteradd()` (*in module faucet.valve_of*), 200
`slowpath_pps_meterdel()` (*in module faucet.valve_of*), 200
`sort_flows()` (*in module faucet.valve_of*), 200
`Stack` (*class in faucet.stack*), 174
`stack_admin_down()` (*faucet.port.Port method*), 172
`stack_bad()` (*faucet.port.Port method*), 172
`stack_defaults_types` (*faucet.port.Port attribute*), 172
`stack_descr()` (*faucet.port.Port method*), 172
`stack_gone()` (*faucet.port.Port method*), 172
`stack_init()` (*faucet.port.Port method*), 172
`stack_manager` (*faucet.valve.AlliedTelesis attribute*), 177
`stack_manager` (*faucet.valve.ArubaValve attribute*), 178
`stack_manager` (*faucet.valve.CiscoC9KValve attribute*), 178
`stack_manager` (*faucet.valve.NoviFlowValve attribute*), 179
`stack_manager` (*faucet.valve.OVSTfmValve attribute*), 180
`stack_manager` (*faucet.valve.OVSValve attribute*), 180
`stack_manager` (*faucet.valve.TfmValve attribute*), 181
`stack_manager` (*faucet.valve.Valve attribute*), 186
`stack_port_healthy()` (*faucet.stack.Stack method*), 176
`stack_port_update()` (*faucet.port.Port method*), 172
`stack_ports()` (*faucet.dp.DP method*), 156
`stack_ports()` (*faucet.valve_stack.ValveStackManager*

method), 218

`stack_state()` (*faucet.port.Port method*), 172

`stack_state_name()` (*faucet.port.Port static method*), 172

`stack_up()` (*faucet.port.Port method*), 172

`stacked_valves()` (*faucet.valve_stack.ValveStackManager static method*), 218

`stale_root` (*faucet.valve.AlliedTelesis attribute*), 177

`stale_root` (*faucet.valve.ArubaValve attribute*), 178

`stale_root` (*faucet.valve.CiscoC9KValve attribute*), 178

`stale_root` (*faucet.valve.NoviFlowValve attribute*), 179

`stale_root` (*faucet.valve.OVSTfmValve attribute*), 180

`stale_root` (*faucet.valve.OVSValve attribute*), 180

`stale_root` (*faucet.valve.TfmValve attribute*), 181

`stale_root` (*faucet.valve.Valve attribute*), 186

`standby_port()` (*faucet.port.Port method*), 172

`start()` (*faucet.faucet.Faucet method*), 158

`start()` (*faucet.faucet_event.FaucetEventNotifier method*), 161

`start()` (*faucet.gauge_pollers.GaugePoller method*), 166

`start()` (*faucet.gauge_pollers.GaugeThreadPoller method*), 167

`start()` (*faucet.prom_client.PromClient method*), 173

`start()` (*faucet.valve_ryuapp.OSKenAppBase method*), 216

`stat_config_files()` (*in module faucet.valve_util*), 226

`state_expire()` (*faucet.valve.Valve method*), 186

`STATIC_TABLE_IDS` (*faucet.valve.NoviFlowValve attribute*), 179

`STATIC_TABLE_IDS` (*faucet.valve.Valve attribute*), 181

`stop()` (*faucet.gauge_pollers.GaugePoller method*), 166

`stop()` (*faucet.gauge_pollers.GaugeThreadPoller method*), 167

`switch_features()` (*faucet.valve.Valve method*), 186

`switch_manager` (*faucet.valve.AlliedTelesis attribute*), 177

`switch_manager` (*faucet.valve.ArubaValve attribute*), 178

`switch_manager` (*faucet.valve.CiscoC9KValve attribute*), 178

`switch_manager` (*faucet.valve.NoviFlowValve attribute*), 179

`switch_manager` (*faucet.valve.OVSTfmValve attribute*), 180

`switch_manager` (*faucet.valve.OVSValve attribute*), 180

`switch_manager` (*faucet.valve.TfmValve attribute*), 181

`switch_manager` (*faucet.valve.Valve attribute*), 187

`switch_manager` (*faucet.valve_route.ValveIPv4RouteManager attribute*), 211

`switch_manager` (*faucet.valve_route.ValveIPv6RouteManager attribute*), 212

`switch_manager` (*faucet.valve_route.ValveRouteManager attribute*), 213

attribute), 215

T

`table_by_id()` (*faucet.dp.DP method*), 156

`table_features()` (*in module faucet.valve_of*), 200

`tagged_flood_ports()` (*faucet.vlan.VLAN method*), 232

`test_config_condition()` (*in module faucet.conf*), 152

`TfmValve` (*class in faucet.valve*), 180

`tlv_cast()` (*in module faucet.valve_packet*), 208

`tlvs_by_subtype()` (*in module faucet.valve_packet*), 208

`tlvs_by_type()` (*in module faucet.valve_packet*), 208

`to_conf()` (*faucet.conf.Conf method*), 151

`tunnel_acls()` (*faucet.port.Port method*), 172

`tunnel_outport()` (*faucet.valve_stack.ValveStackManager method*), 218

`tunnel_types` (*faucet.acl.ACL attribute*), 150

U

`untagged_flood_ports()` (*faucet.vlan.VLAN method*), 232

`update()` (*faucet.conf.Conf method*), 151

`update()` (*faucet.gauge_pollers.GaugePoller method*), 166

`update()` (*faucet.valves_manager.ConfigWatcher method*), 226

`update_buckets()` (*faucet.valve_table.ValveGroupEntry method*), 224

`update_config_applied()`
 (*faucet.valves_manager.ValvesManager method*), 227

`update_config_metrics()` (*faucet.valve.Valve method*), 187

`update_dp_live_time()`
 (*faucet.valves_manager.ValvesManager method*), 227

`update_health()` (*faucet.stack.Stack method*), 176

`update_health()` (*faucet.valve_stack.ValveStackManager method*), 218

`update_metrics()` (*faucet.faucet_bgp.FaucetBgp method*), 159

`update_metrics()` (*faucet.valve.Valve method*), 187

`update_metrics()` (*faucet.valves_manager.ValvesManager method*), 228

`update_reverse_tunnel_rules()` (*faucet.acl.ACL method*), 150

`update_source_tunnel_rules()` (*faucet.acl.ACL method*), 150

`update_stack_link_state()`
 (*faucet.valve_lldp.ValveLLDPManager method*), 190

`update_stack_topo()` (*faucet.valve_stack.ValveStackManager method*), 218
`update_vlan()` (*faucet.valve_manager_base.ValveManagerBase method*), 191
`update_vlan()` (*faucet.valve_switch_standalone.ValveSwitchManager*), 224
`update_watcher_handler()` (*faucet.gauge.Gauge method*), 163
`USE_BARRIERS` (*faucet.valve.NoviFlowValve attribute*), 179
`USE_BARRIERS` (*faucet.valve.OVSTfmValve attribute*), 179
`USE_BARRIERS` (*faucet.valve.OVSValve attribute*), 180
`USE_BARRIERS` (*faucet.valve.Valve attribute*), 181
`USE_OXM_IDS` (*faucet.valve.OVSTfmValve attribute*), 179
`USE_OXM_IDS` (*faucet.valve.TfmValve attribute*), 180
`utf8_decode()` (*in module faucet.valve_util*), 226

V

`Valve` (*class in faucet.valve*), 181
`valve_factory()` (*in module faucet.valve*), 187
`valve_flow_services()` (*faucet.valves_manager.ValvesManager method*), 228
`valve_flowreorder()` (*in module faucet.valve_of*), 200
`valve_match_vid()` (*in module faucet.valve_of*), 200
`valve_packet_in()` (*faucet.valves_manager.ValvesManager method*), 228
`valve_switch_factory()` (*in module faucet.valve_switch*), 219
`ValveAclManager` (*class in faucet.valve_acl*), 187
`ValveDeadThreadException`, 216
`ValveGroupEntry` (*class in faucet.valve_table*), 224
`ValveGroupTable` (*class in faucet.valve_table*), 224
`ValveIPv4RouteManager` (*class in faucet.valve_route*), 210
`ValveIPv6RouteManager` (*class in faucet.valve_route*), 211
`ValveLLDPManger` (*class in faucet.valve_lldp*), 190
`ValveLogger` (*class in faucet.valve*), 187
`ValveManagerBase` (*class in faucet.valve_manager_base*), 191
`ValvePipeline` (*class in faucet.valve_pipeline*), 208
`ValveRouteManager` (*class in faucet.valve_route*), 212
`valves_by_name()` (*faucet.valves_manager.ValvesManager method*), 228
`valves_manager` (*faucet.faucet.Faucet attribute*), 158
`ValvesManager` (*class in faucet.valves_manager*), 227
`ValveStackManager` (*class in faucet.valve_stack*), 216
`ValveSwitchFlowRemovedManager` (*class in faucet.valve_switch_standalone*), 221
`ValveSwitchManager` (*class in faucet.valve_switch_standalone*), 221

`ValveSwitchStackManagerBase` (*class in faucet.valve_switch_stack*), 219
`ValveSwitchStackManagerNoReflection` (*class in faucet.valve_switch_stack*), 220
`ValveSwitchStackManagerReflection` (*class in faucet.valve_switch_stack*), 220
`ValveTable` (*class in faucet.valve_table*), 225
`ValveTableConfig` (*class in faucet.faucet_pipeline*), 162
`verify_flowmod()` (*in module faucet.valve_of*), 200
`verify_lldp()` (*faucet.valve_lldp.ValveLLDPManger method*), 190
`verify_tunnel_rules()` (*faucet.acl.ACL method*), 150
`vid` (*faucet.vlan.AnyVLAN attribute*), 228
`vid` (*faucet.vlan.NullVLAN attribute*), 228
`vid_present()` (*in module faucet.valve_of*), 200
`vid_valid()` (*faucet.vlan.VLAN static method*), 232
`vip_map()` (*faucet.router.Router method*), 174
`vip_map()` (*faucet.vlan.VLAN method*), 232
`vip_table` (*faucet.valve_route.ValveIPv4RouteManager attribute*), 211
`vip_table` (*faucet.valve_route.ValveIPv6RouteManager attribute*), 212
`vip_table` (*faucet.valve_route.ValveRouteManager attribute*), 215
`VLAN` (*class in faucet.vlan*), 228
`vlan` (*faucet.valve_packet.PacketMeta attribute*), 202
`vlan_pkt` (*faucet.valve_packet.PacketMeta attribute*), 202
`vlans()` (*faucet.port.Port method*), 172

W

`warning()` (*faucet.valve.ValveLogger method*), 187
`watcher_factory()` (*in module faucet.watcher*), 232
`watcher_parser()` (*in module faucet.config_parser*), 152
`WatcherConf` (*class in faucet.watcher_conf*), 233

Y

`yaml_dump()` (*in module faucet.config_parser_util*), 153
`yaml_load()` (*in module faucet.config_parser_util*), 153